


## Case and Associated Parts

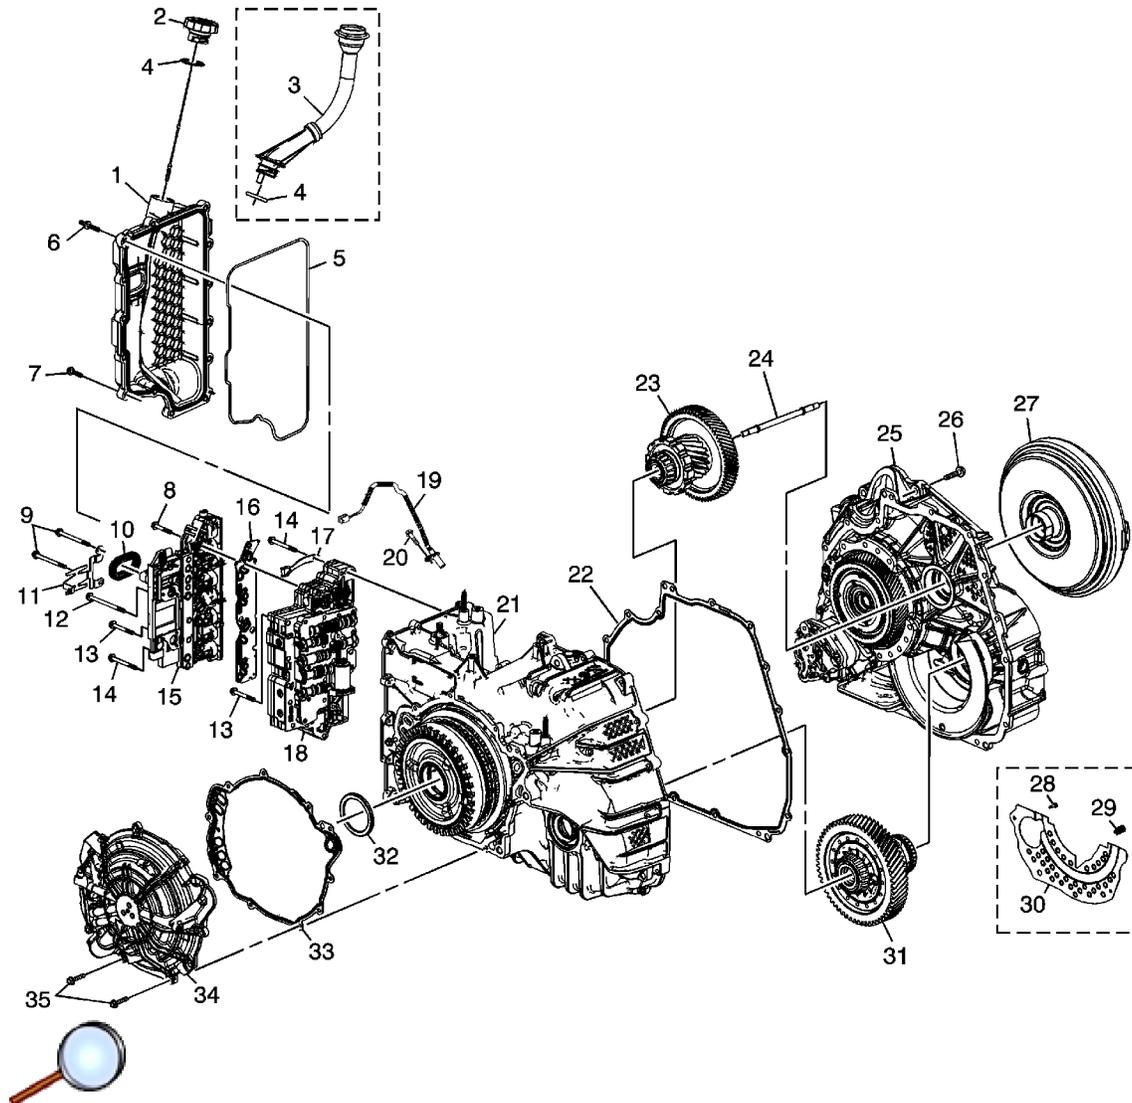


- (1) Control Valve Body Cover Assembly
- (2) Transmission Fluid Level Indicator Assembly
- (3) Fluid Level Indicator Tube - Model Dependent
- (4) Fluid Level Indicator Tube Seal - Model Dependent
- (5) Control Valve Body Cover Assembly Gasket
- (6) Control Valve Body Cover Stud
- (7) Control Valve Body Cover Bolt
- (8) Control Valve Body Bolt
- (9) Control Valve Body Bolt
- (10) Control Valve Body Cover Wiring Connector Hole Seal
- (11) Control Solenoid Valve Spring

© 2010 General Motors Corporation. All rights reserved.

- (12) Control Valve Body Bolt
- (13) Control Valve Body Bolt
- (14) Control Valve Body Bolt
- (15) Control Solenoid (w/Body and TCM) Valve Assembly
- (16) Control Solenoid (w/Body and TCM) Filter Plate Assembly
- (17) Manual Shaft Detent Assembly
- (18) Control Valve Body Assembly
- (19) A/Trans Output Speed Sensor Assembly
- (20) A/Trans Output Speed Sensor Bolt
- (21) A/Trans Case Assembly
- (22) Torque Converter Housing Outer Seal
- (23) Front Differential Drive Pinion (w/Transfer Gear) Gear Assembly
- (24) Front Differential Drive Pinion Gear Lube Tube
- (25) Torque Converter and Support and A/Trans Fluid Pump Housing Assembly
- (26) Torque Converter and Differential Housing Bolt
- (27) Torque Converter Assembly
- (28) Dust Cover Push Pin - Model Dependent
- (29) Dust Cover Bolt - Model Dependent
- (30) Dust Cover - Model Dependent
- (31) Front Differential Carrier Assembly
- (32) Input Shaft Thrust Bearing Assembly
- (33) A/Trans Case Cover Gasket
- (34) A/Trans Case Cover Assembly
- (35) A/Trans Case Cover Assembly Bolt

## Transmission Case Assembly

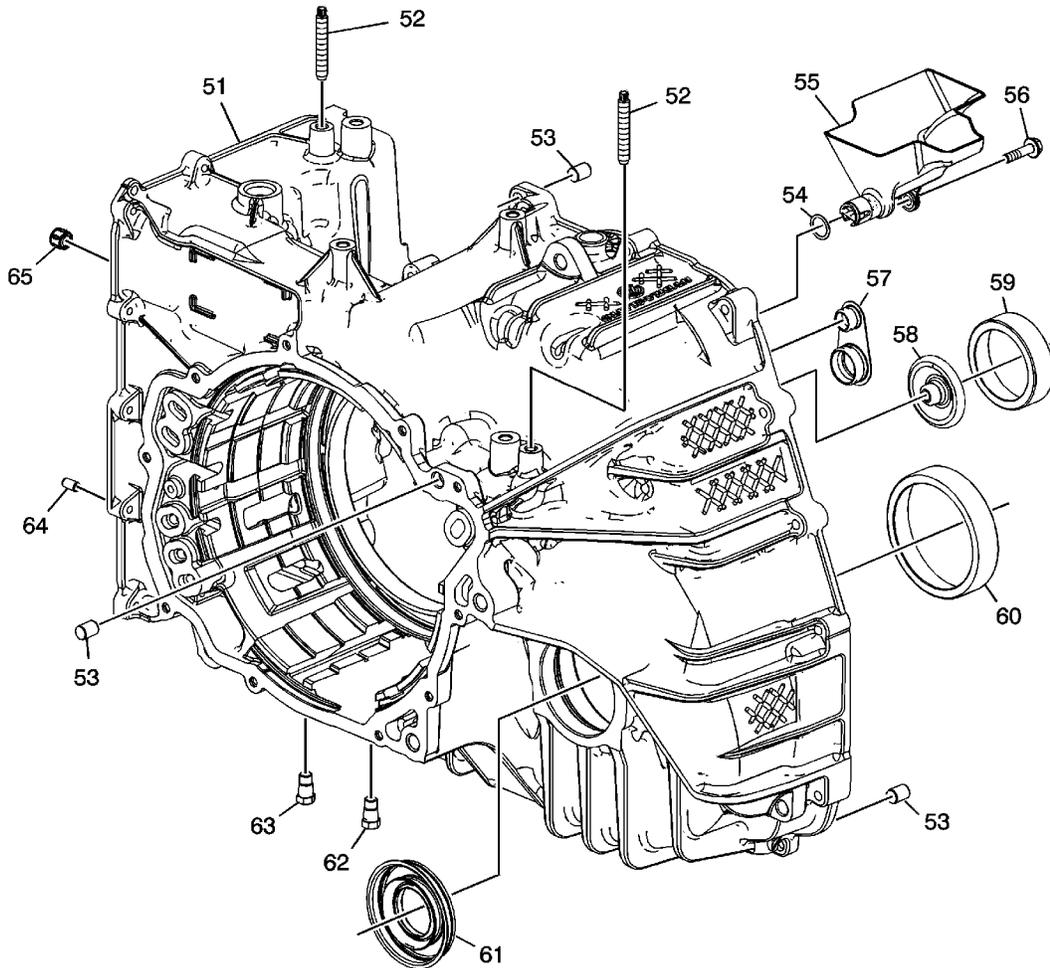


- (51) A/Trans Case Assembly
- (52) Transmission Fluid Cooler Pipe Stud
- (53) Transmission Case Cover Locator Pin
- (54) A/Trans Fluid Trough O-Ring Seal
- (55) A/Trans Fluid Trough Assembly
- (56) A/Trans Fluid Trough Bolt
- (57) A/Trans Pump Fluid Outlet Seal Assembly
- (58) Front Differential Drive Pinion Gear Lube Dam
- (59) Front Differential Drive Pinion Gear Bearing Cup
- (60) Front Differential Carrier Bearing Cup
- (61) Front Wheel Drive Shaft Oil Seal Assembly

© 2010 General Motors Corporation. All rights reserved.

- (62) A/Trans Fluid Press Test Hole Plug
- (63) A/Trans Fluid Level Hole Plug
- (64) Control Valve Body Locator Pin
- (65) 1-2-3-4 Clutch Fluid Passage Seal

## Torque Converter, Support and Fluid Pump Housing Assembly

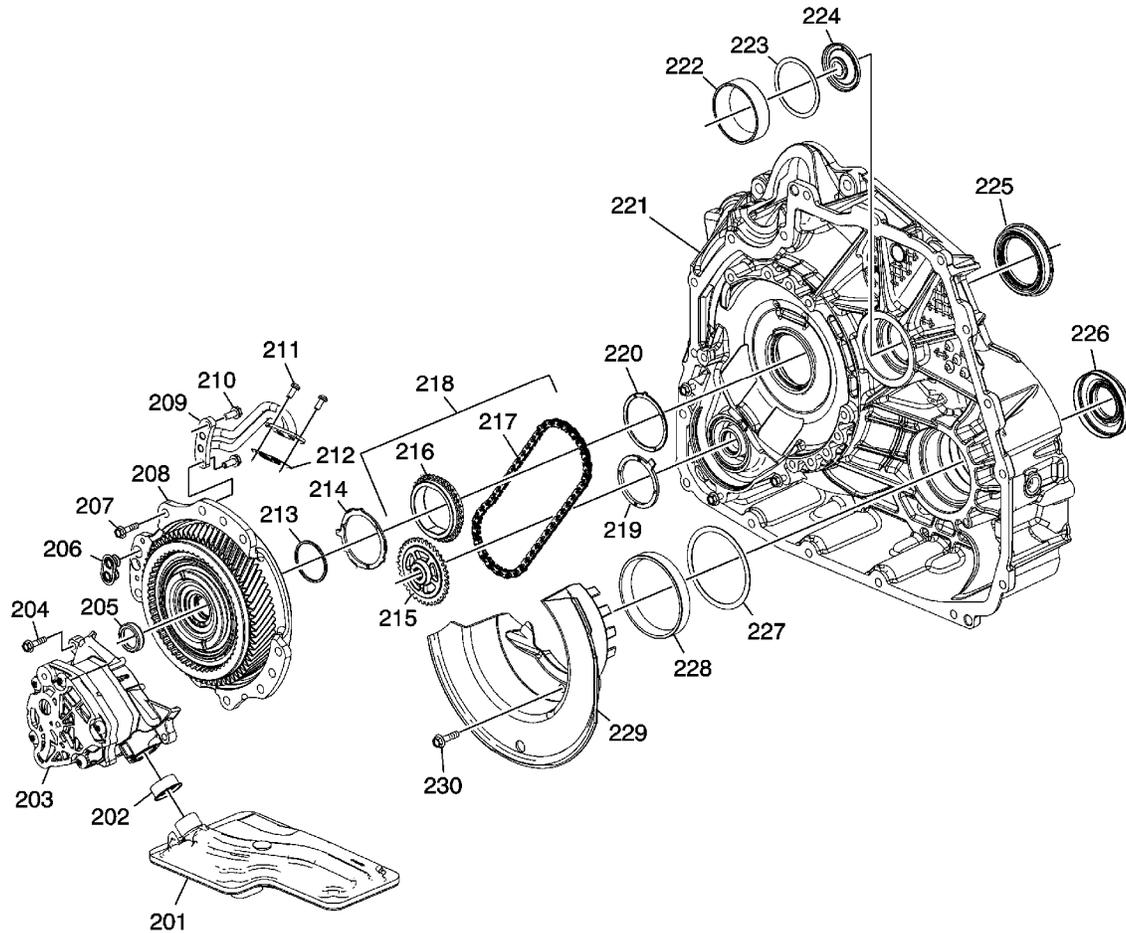


- (201) A/Trans Fluid Filter Assembly
- (202) Filter Neck Seal
- (203) A/Trans Fluid Pump Assembly
- (204) A/Trans Fluid Pump Bolt
- (205) Front Differential Transfer Drive Gear Support Seal Assembly
- (206) Front Differential Transfer Drive Gear Support Torque Converter Fluid Seal Assembly
- (207) Front Differential Transfer Drive Gear Support Bolt
- (208) Front Differential Transfer Drive Gear Support Assembly
- (209) Front Differential Transfer Drive Gear Fluid Passage Tube Assembly
- (210) Front Differential Transfer Drive Gear Fluid Passage Tube Bolt
- (211) Front Differential Transfer Drive Gear Fluid Passage Tube Bolt

© 2010 General Motors Corporation. All rights reserved.

- (212) Front Differential Transfer Drive Gear Support Fluid Passage Tube Gasket
- (213) Front Differential Transfer Drive Gear Support Seal
- (214) Drive Sprocket Thrust Washer
- (215) Oil Pump Drive Link Driven Sprocket
- (216) Oil Pump Drive Link Drive Sprocket
- (217) Drive Link
- (218) Drive Link Assembly
- (219) Drive Sprocket Thrust Washer
- (220) Drive Sprocket Thrust Washer
- (221) Torque Converter and Differential Housing Assembly
- (222) Front Differential Drive Pinion Gear Bearing Cup
- (223) Front Differential Drive Pinion Gear Bearing Thrust Washer
- (224) Front Differential Drive Pinion Gear Lube Dam
- (225) Torque Converter Fluid Seal Assembly
- (226) Front Wheel Drive Shaft Oil Seal Assembly
- (227) Front Differential Bearing Thrust Washer
- (228) Front Differential Carrier Bearing Cup
- (229) Front Differential Carrier Baffle
- (230) Front Differential Carrier Baffle Bolt

## Control Valve Body Assembly

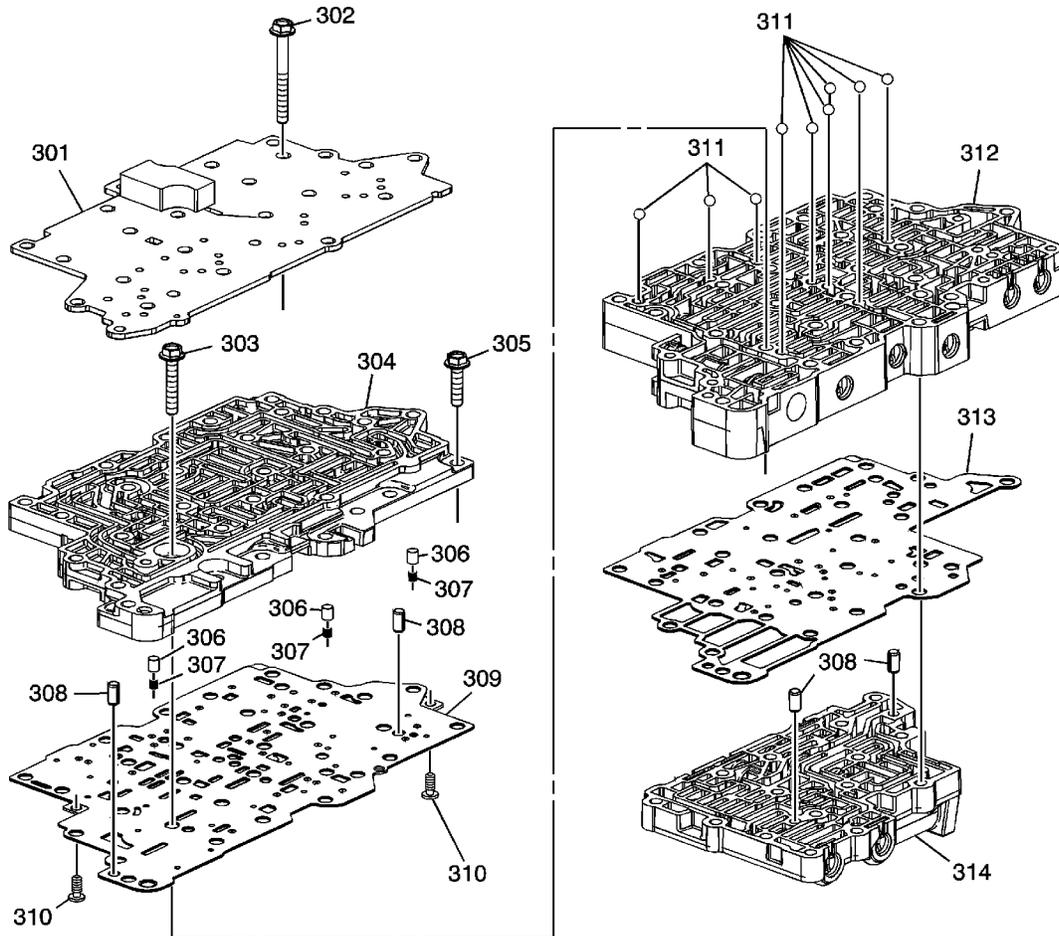

- (301) Control Valve Channel Upper Plate Assembly
- (302) Control Valve Body Bolt
- (303) Control Valve Body Bolt
- (304) Control Valve Channel Plate
- (305) Control Valve Body Bolt
- (306) Actuator Feed Accumulator Piston
- (307) Actuator Feed Accumulator Spring
- (308) Control Valve Body Locator Pin
- (309) Control Valve Upper Body Spacer Plate Assembly
- (310) Control Valve Body Spacer Plate Retainer
- (311) Control Valve Body Ball Check Valve


© 2010 General Motors Corporation. All rights reserved.

(312) Control Valve Upper Body Assembly

(313) Control Valve Lower Body Spacer Plate Assembly

(314) Control Valve Lower Body

## Upper Valve Body Assembly

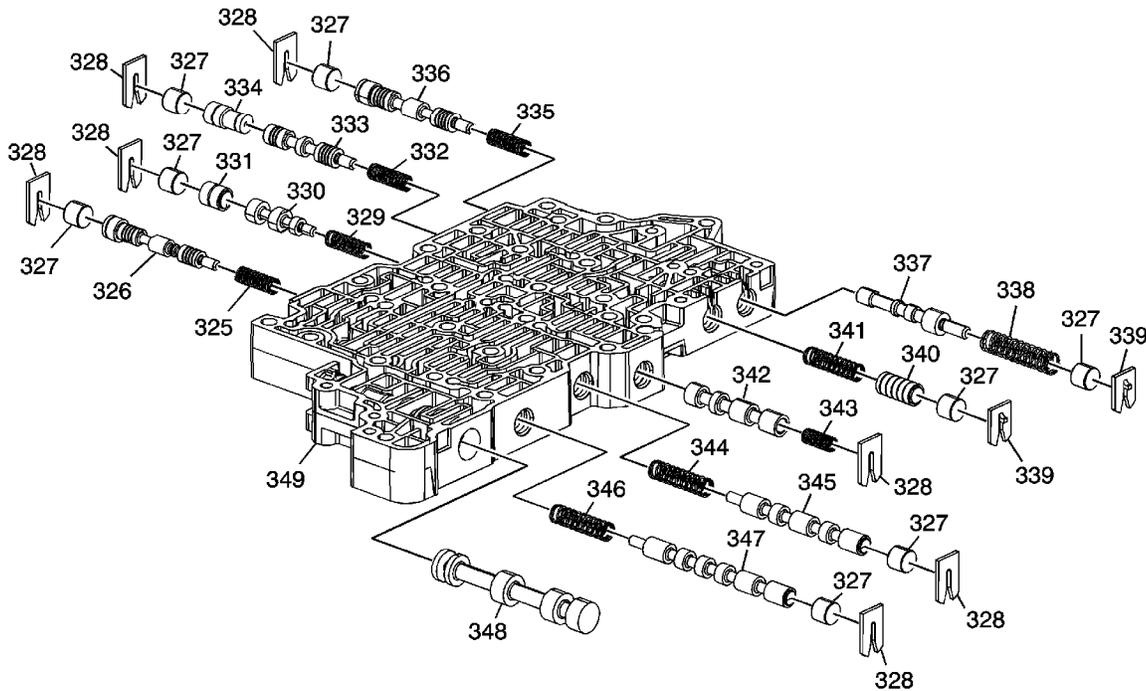


- (325) Low and Reverse and 4-5-6 Clutch Regulator Valve Spring
- (326) Low and Reverse and 4-5-6 Clutch Regulator Valve
- (327) Pressure Regulator Valve Bore Plug
- (328) Torque Converter Clutch Valve Spring Retainer
- (329) Torque Converter Clutch Regulator Apply Valve Spring
- (330) Torque Converter Clutch Regulator Apply Valve
- (331) Torque Converter Clutch Regulator Apply Shuttle Valve
- (332) 2-6 Clutch Regulator Valve Spring
- (333) 2-6 Clutch Regulator Valve
- (334) 2-6 Clutch Regulator Valve Gain Valve
- (335) 3-5-Reverse Clutch Regulator Valve Spring
- (336) 3-5-Reverse Clutch Regulator Valve
- (337) Pressure Regulator Valve
- (338) Pressure Regulator Valve Spring
- (339) Pressure Regulator Valve Bore Plug Retainer
- (340) Isolator Valve
- (341) Isolator Valve Spring
- (342) Torque Converter Clutch Control Valve

© 2010 General Motors Corporation. All rights reserved.


- (343) Torque Converter Clutch Control Valve Spring
- (344) Clutch Select Solenoid Valve #3 Spring
- (345) Clutch Select Solenoid #3 Valve
- (346) Clutch Select Solenoid Valve #2 Spring
- (347) Clutch Select Solenoid #2 Valve
- (348) Manual Valve
- (349) Control Valve Upper Body

## Lower Valve Body Assembly

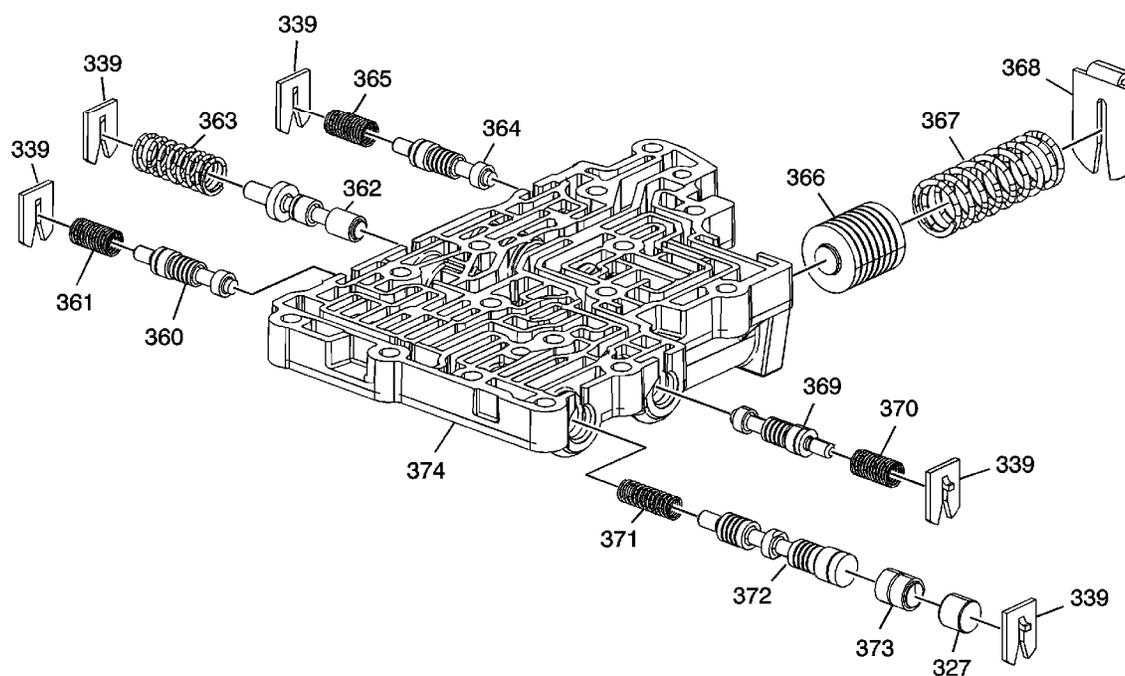


- (327) 1-2-3-4 Clutch Regulator Valve Bore Plug
- (339) Actuator Feed Limit Valve Spring Retainer
- (360) 4-5-6 Clutch Boost Valve
- (361) 4-5-6 Clutch Boost Valve Spring
- (362) Actuator Feed Limit Valve
- (363) Actuator Feed Limit Valve Spring
- (364) 3-5-Reverse Clutch Boost Valve
- (365) 3-5-Reverse Clutch Boost Valve Spring
- (366) 4-5-6 Clutch Accumulator Piston
- (367) 4-5-6 Clutch Accumulator Piston Spring
- (368) 4-5-6 Clutch Accumulator Piston Retainer
- (369) 1-2-3-4 Clutch Boost Valve
- (370) 1-2-3-4 Clutch Boost Valve Spring
- (371) 1-2-3-4 Clutch Regulator Valve Spring
- (372) 1-2-3-4 Clutch Regulator Valve
- (373) Default Override 1-2-3-4 Clutch Valve
- (374) Control Valve Lower Body

## A/Trans Case Cover, 2-6 and Low Reverse Pistons

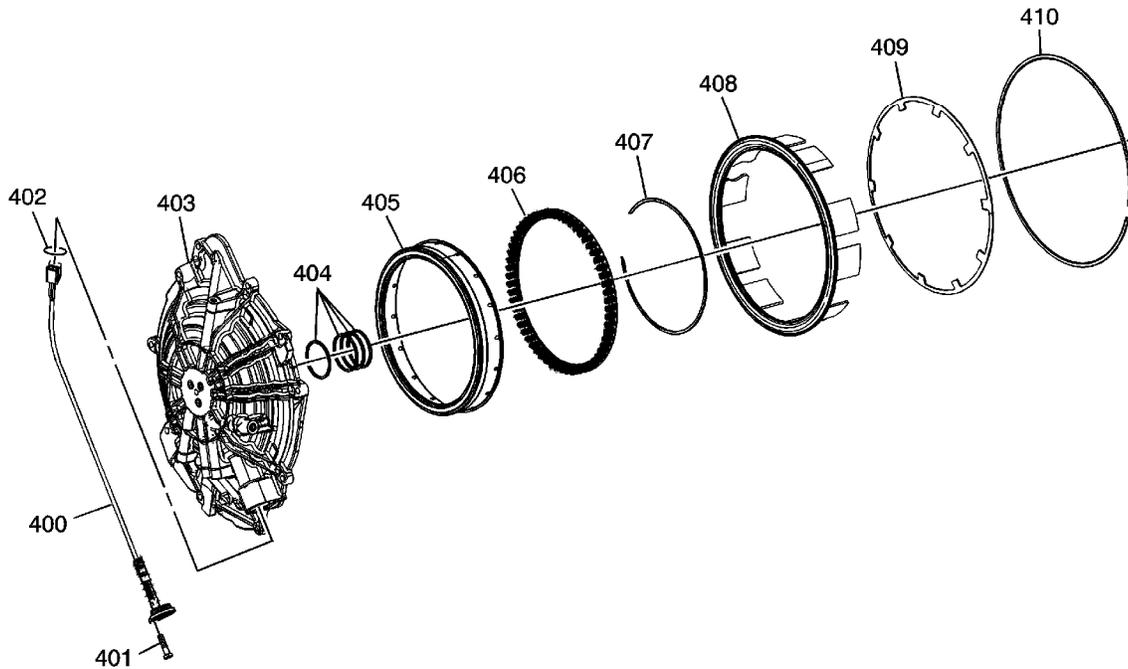


- (400) A/Trans Input Speed Sensor Assembly
- (401) A/Trans Input Speed Sensor Bolt
- (402) ISS O-Ring Seal
- (403) A/Trans Case Cover Assembly
- (404) 3-5-Reverse and 4-5-6 Clutch Fluid Seal Ring
- (405) 2-6 Clutch Piston
- (406) 2-6 Clutch Spring Assembly
- (407) 2-6 Clutch Spring Retainer Ring
- (408) Low and Reverse Clutch Piston Assembly
- (409) Low and Reverse Clutch Spring
- (410) Low and Reverse Clutch Spring Retainer Ring

### 3-5 Reverse Clutch Assembly

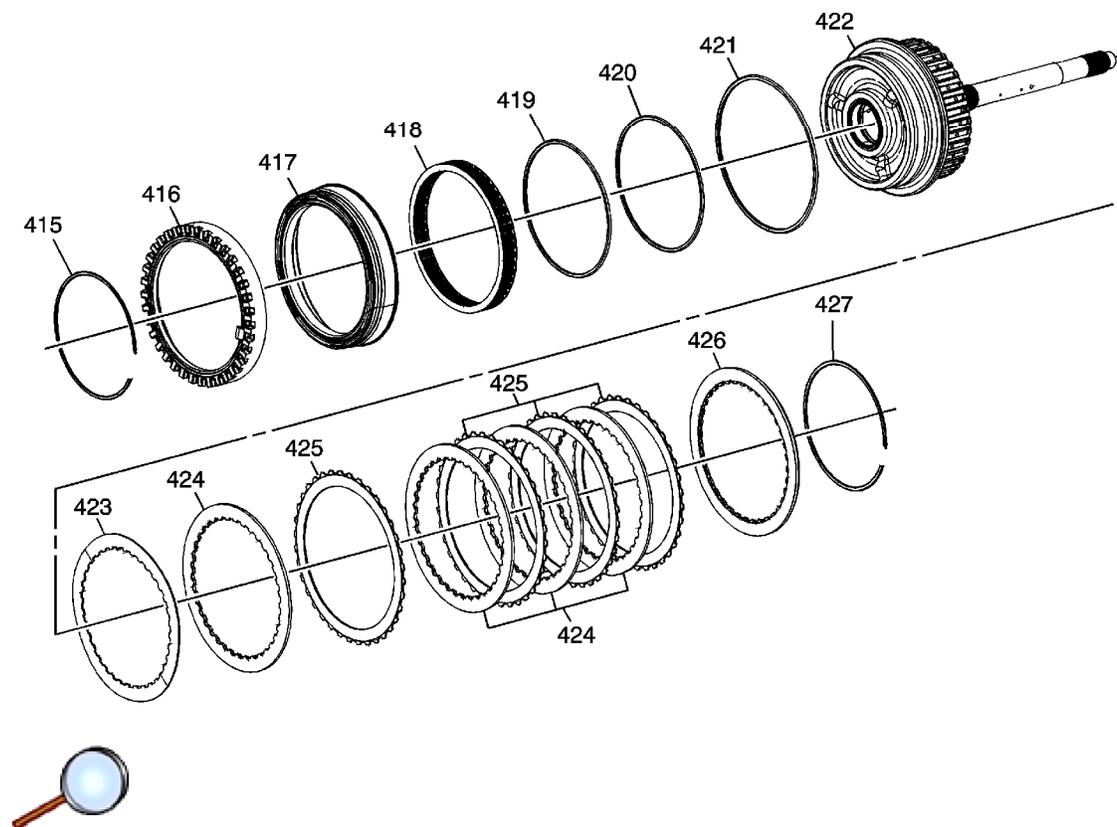


- (415) A/Trans Input Shaft Speed Sensor Reluctor Ring Retainer Ring
- (416) A/Trans Input Shaft Speed Sensor Reluctor Wheel
- (417) 3-5-Reverse Clutch Piston
- (418) 3-5-Reverse Clutch Spring
- (419) 3-5-Reverse Clutch Piston Inner Seal
- (420) 3-5-Reverse Clutch Piston Inner Seal
- (421) 3-5-Reverse Clutch Piston Dam Seal
- (422) 3-5-Reverse and 4-5-6 Clutch Housing Assembly
- (423) 3-5-Reverse Clutch (Waved) Plate
- (424) 3-5-Reverse Clutch Plate
- (425) 3-5-Reverse Clutch (w/Friction Material) Plate Assembly
- (426) 3-5-Reverse Clutch Backing Plate
- (427) 3-5-Reverse Clutch Backing Plate Retainer Ring

## 4-5-6 Clutch Assembly

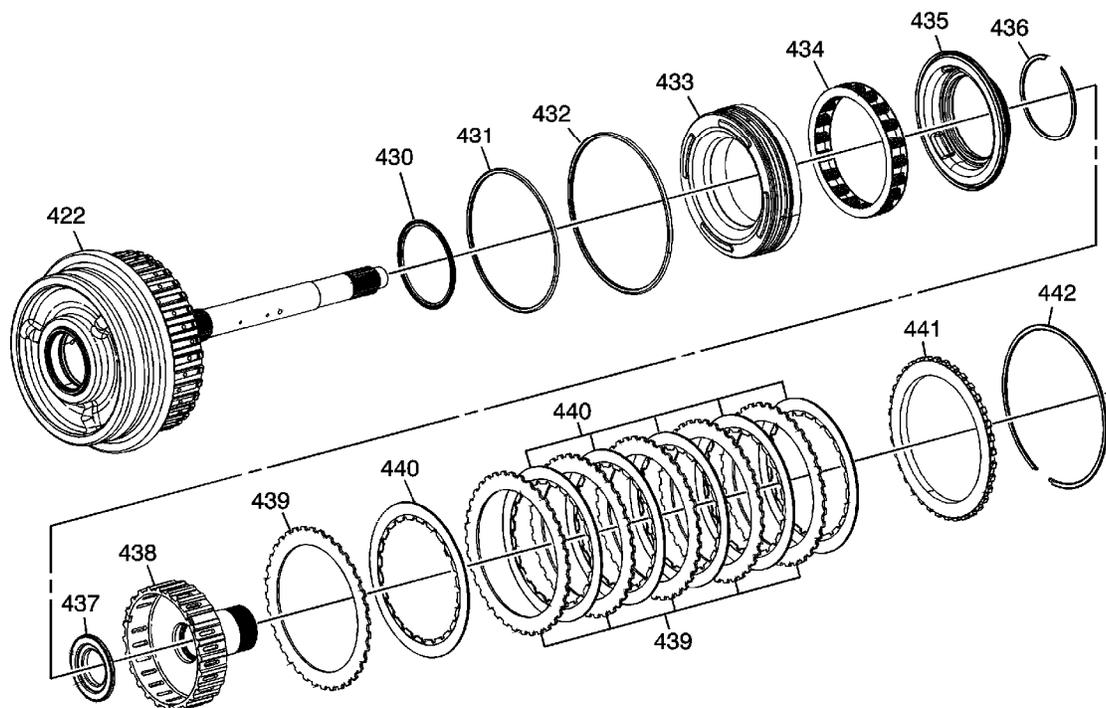

- (422) 3-5-Reverse and 4-5-6 Clutch Housing Assembly
- (430) 4-5-6 Clutch Piston Inner Seal
- (431) 4-5-6 Clutch Piston Outer Seal
- (432) 4-5-6 Clutch Piston Outer Seal
- (433) 4-5-6 Clutch Piston
- (434) 4-5-6 Clutch Spring
- (435) 4-5-6 Clutch Piston Fluid Dam
- (436) 4-5-6 Clutch Dam Retainer Ring
- (437) 4-5-6 Clutch Hub Thrust Bearing Assembly
- (438) Reaction Carrier Hub Assembly
- (439) 4-5-6 Clutch Wave Plate
- (440) 4-5-6 Clutch (w/Friction Material) Plate Assembly
- (441) 4-5-6 Clutch Backing Plate
- (442) 4-5-6 Clutch Backing Plate Retainer Ring

## 2-6, Low and Reverse and 1-2-3-4 Clutch Plate Assemblies

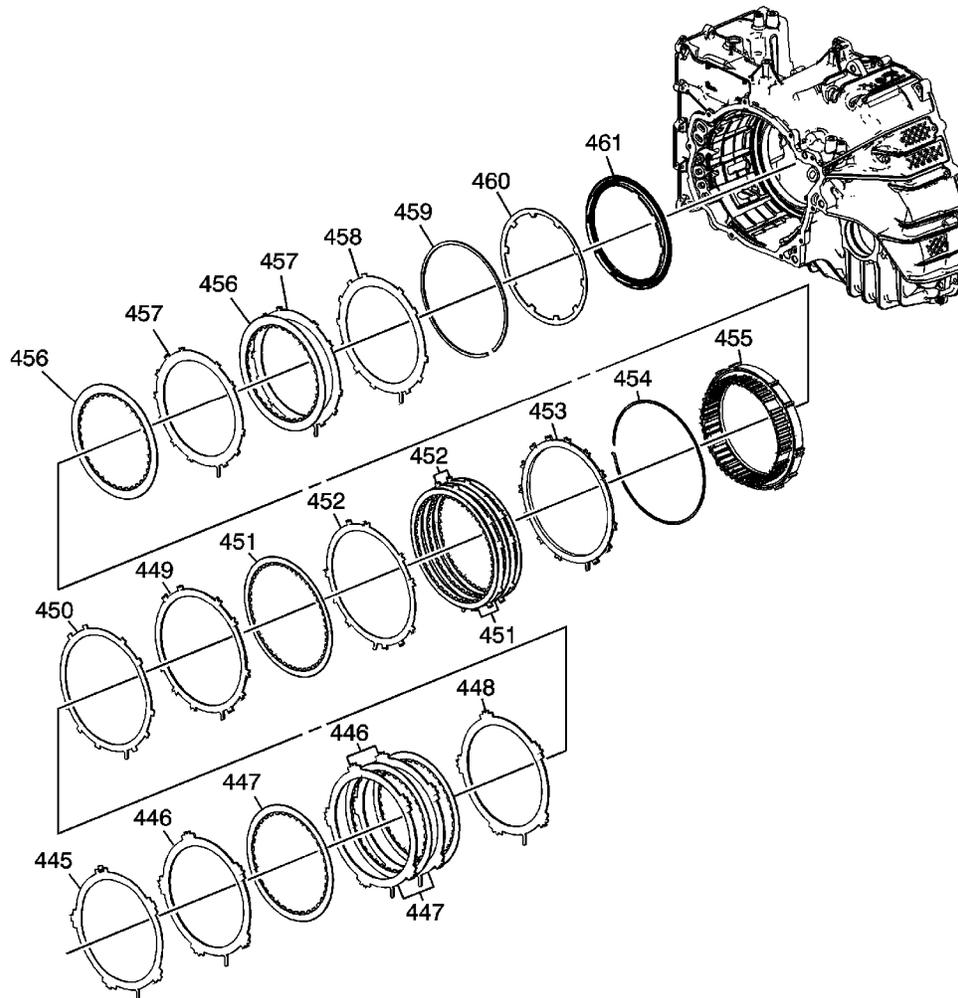


- (445) 2-6 Clutch Cushion Spring
- (446) 2-6 Clutch Plate
- (447) 2-6 Clutch (w/Friction Material) Plate Assembly
- (448) 2-6 Clutch Backing Plate
- (449) Low and Reverse Clutch Apply Plate
- (450) Low and Reverse Clutch Cushion (Waved) Spring
- (451) Low and Reverse Clutch (w/Friction Material) Plate Assembly
- (452) Low and Reverse Clutch Plate
- (453) Low and Reverse Clutch Backing Plate
- (454) Low and Reverse Clutch Retainer Ring
- (455) Low and Reverse Clutch Assembly (OWC)

© 2010 General Motors Corporation. All rights reserved.


- (456) 1-2-3-4 Clutch (w/Friction Material) Plate Assembly
- (457) 1-2-3-4 Clutch Plate
- (458) 1-2-3-4 Clutch (Waved) Plate
- (459) 1-2-3-4 Clutch Spring Retainer Ring
- (460) 1-2-3-4 Clutch Spring
- (461) 1-2-3-4 Clutch Piston
- (449) Low and Reverse Clutch Apply Plate

## Input, Output and Reaction Gearsets

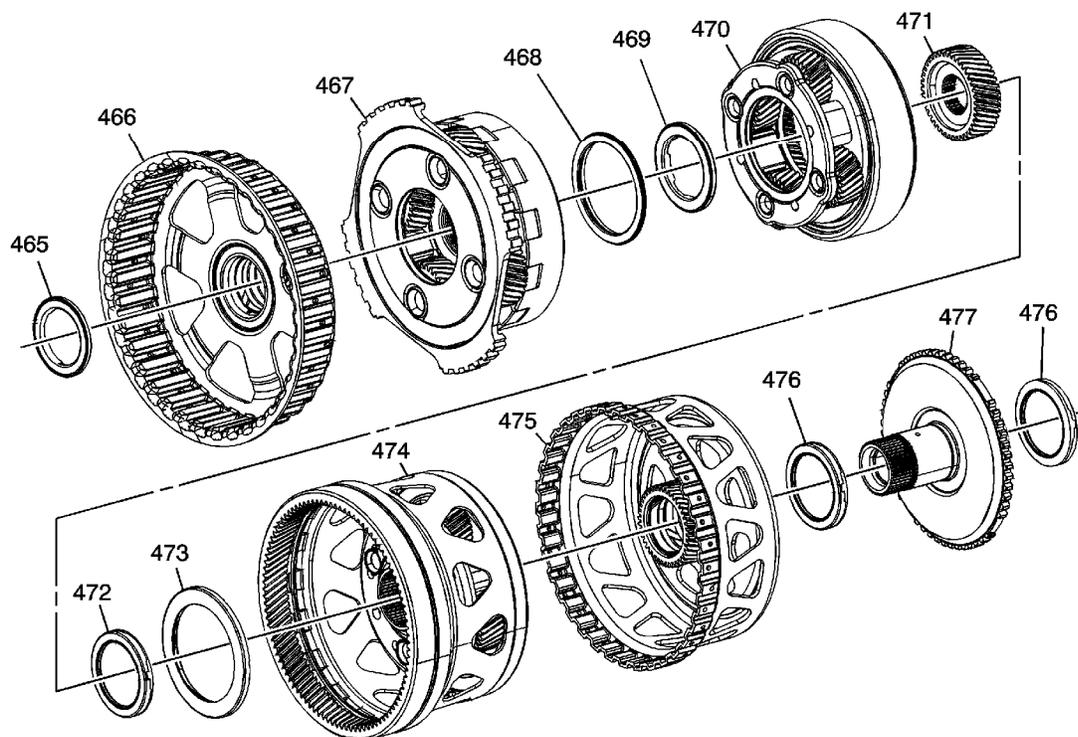

- (465) 2-6 Clutch Hub Thrust Bearing
- (466) Reaction Sun Gear Assembly
- (467) Reaction (w/Input Internal Gear) Carrier Assembly
- (468) Input Carrier Thrust Bearing Assembly
- (469) Input Sun Gear Thrust Bearing Assembly
- (470) Input (w/Output Internal Gear) Carrier Assembly
- (471) Input Sun Gear
- (472) Output Carrier Thrust Bearing Assembly
- (473) Output Carrier Thrust Bearing Assembly
- (474) Output Carrier Assembly
- (475) Output Sun Gear Assembly
- (476) Front Differential Transfer Drive Gear Input Hub Bearing Assembly
- (477) Output Carrier Transfer Drive Gear Hub Assembly


## Front Differential Transfer Drive Gear Assembly

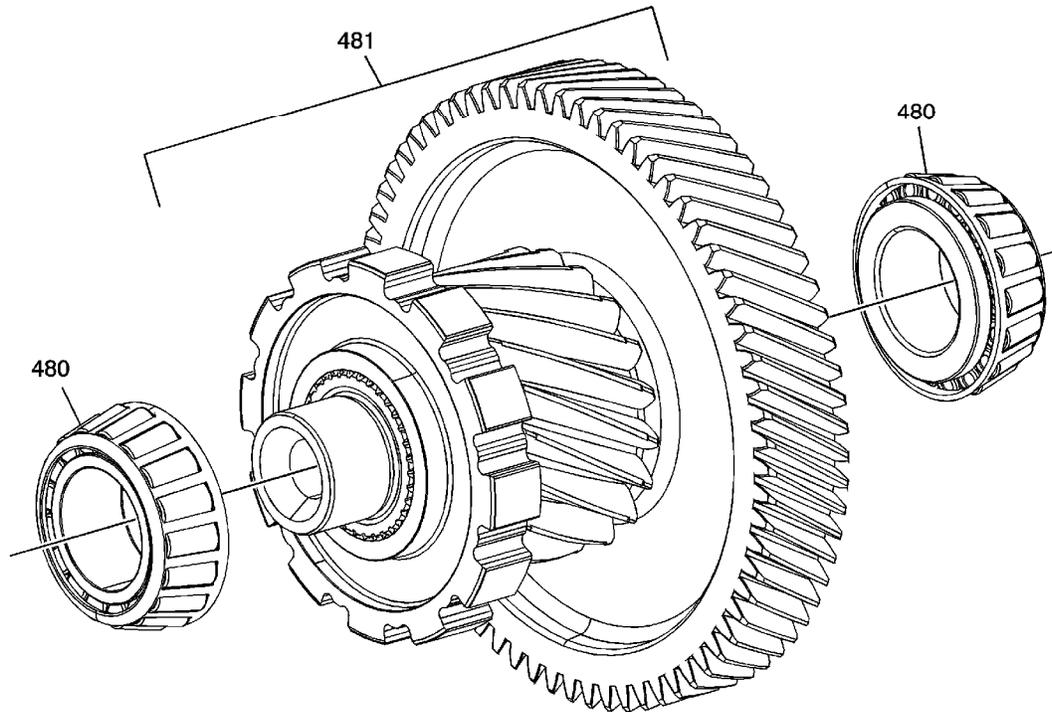

(480) Front Differential Drive Pinion Gear Bearing Assembly


(481) Front Differential Drive Pinion (w/Transfer Gear) Gear Assembly

## Front Differential Carrier Assembly

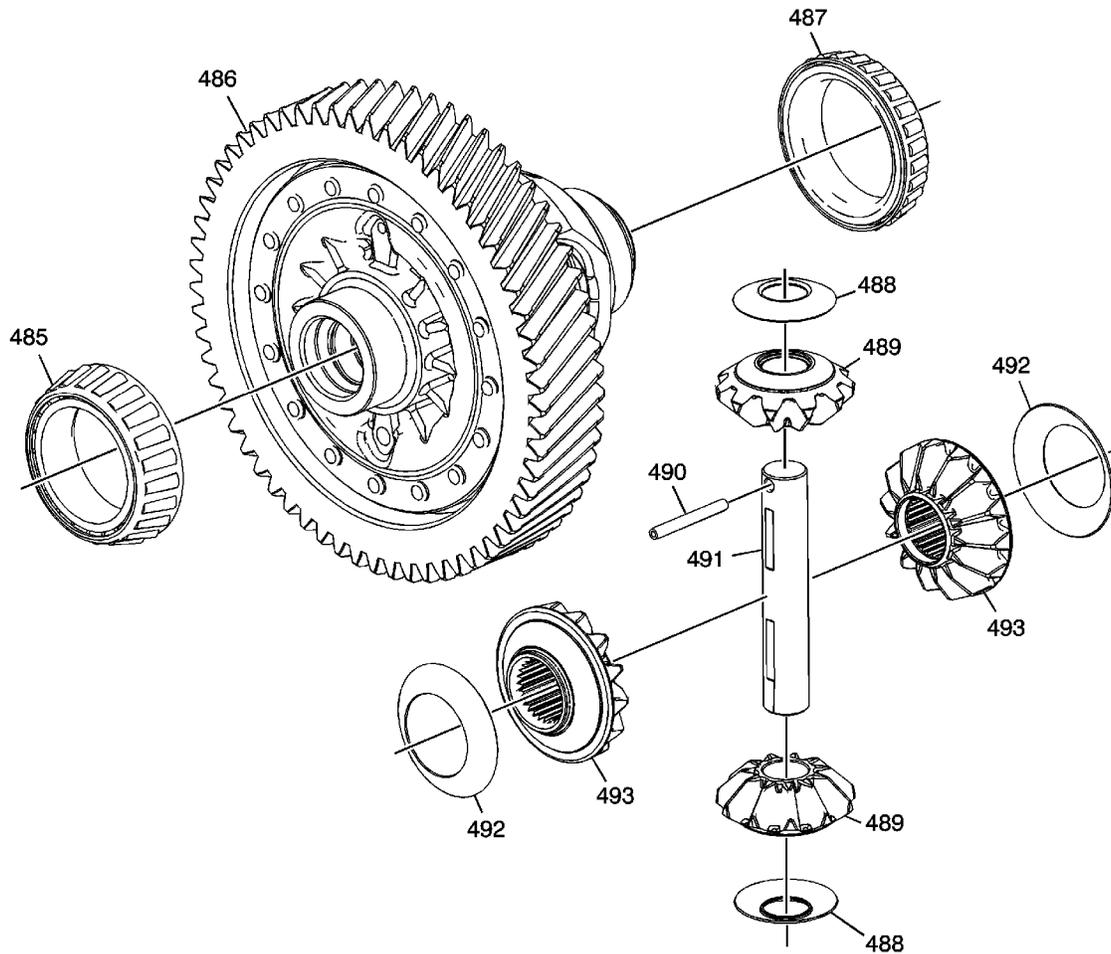

- (485) Front Differential Carrier Bearing Assembly
- (486) Front Differential Carrier Assembly
- (487) Front Differential Carrier Bearing Assembly
- (488) Front Differential Carrier Thrust Washer
- (489) Front Differential Pinion Gear
- (490) Front Differential Pinion Gear Shaft Retainer
- (491) Front Differential Pinion Gear Shaft
- (492) Front Differential Side Gear Thrust Washer
- (493) Front Differential Side Gear

## Park System Components

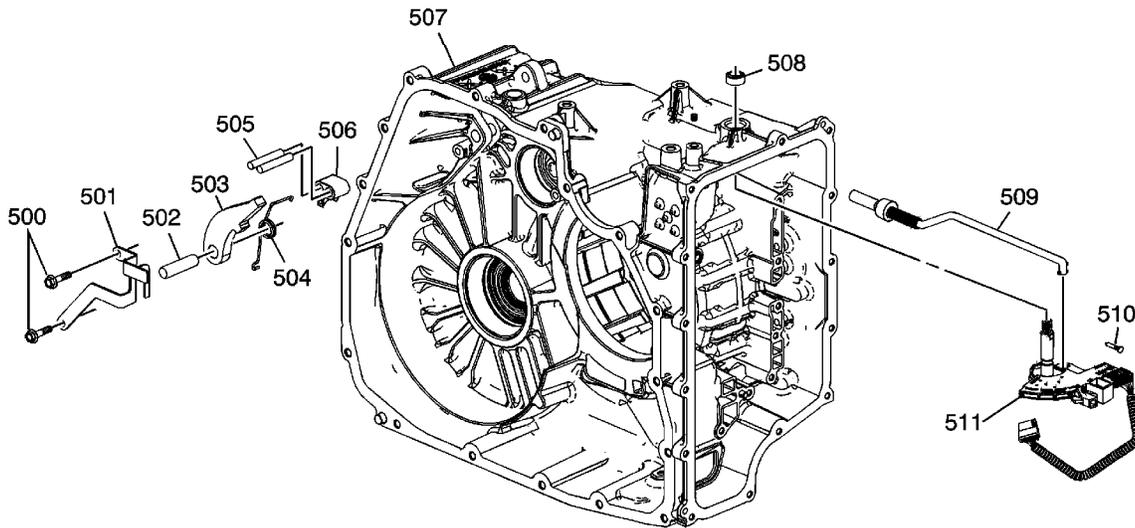

- (500) Park Pawl Actuator Bracket Bolt
- (501) Park Pawl Actuator Bracket
- (502) Park Pawl Shaft
- (503) Park Pawl
- (504) Park Pawl Spring
- (505) Park Pawl Actuator Guide Pin
- (506) Park Pawl Actuator Guide
- (507) A/Trans Case Assembly
- (508) Manual Shift Shaft Seal
- (509) Park Pawl Actuator Assembly
- (510) Manual Shift Shaft Pin
- (511) Manual Shift Detent (w/Shaft Position Switch) Lever Assembly