



Front Floor Panel Carpet Replacement - Left Side

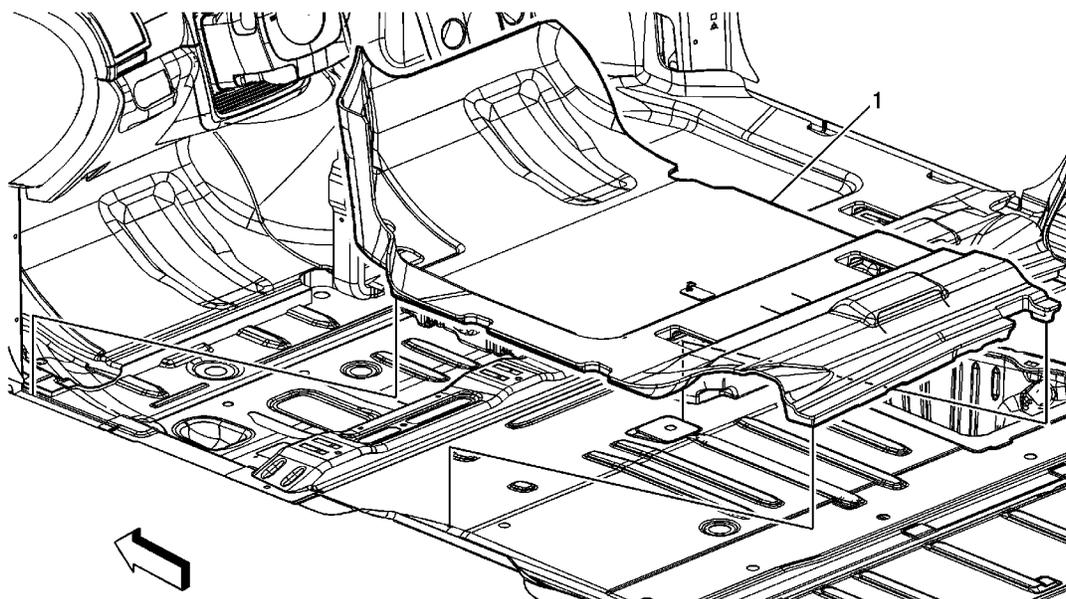


Callout	Component Name
<p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the front driver seat. Refer to Bucket Seat Replacement . 2. Remove the front floor console. Refer to Front Floor Console Replacement . 3. Remove the center pillar lower molding. Refer to Center Pillar Lower Garnish Molding Replacement . 	
1	Floor Panel Carpet Assembly

Front Floor Panel Carpet Replacement - Right Side

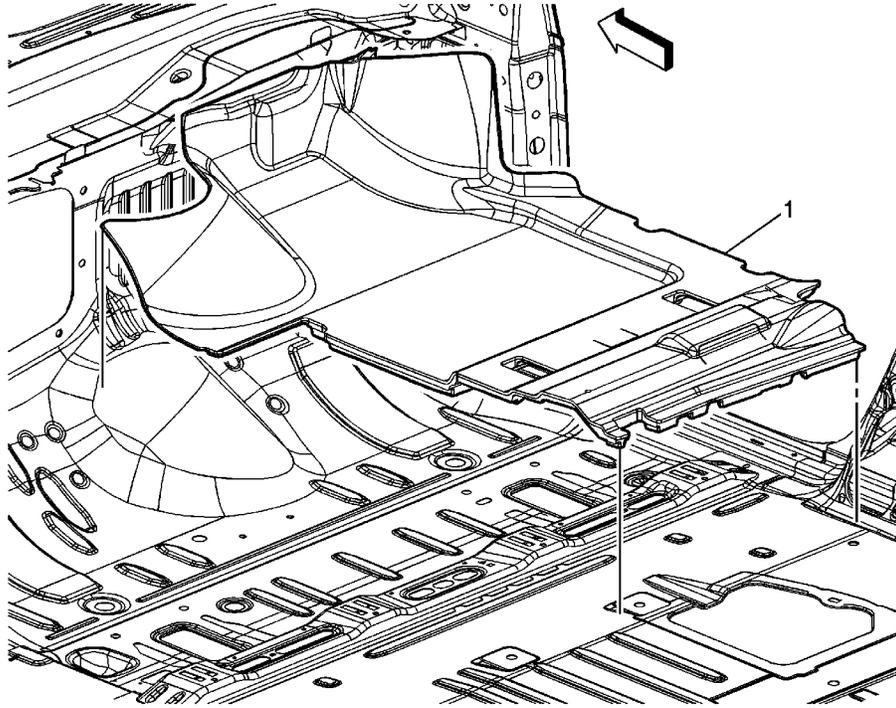


Callout	Component Name
Preliminary Procedures	
<ol style="list-style-type: none"> 1. Remove the front passenger seat. Refer to Bucket Seat Replacement . 2. Remove the front floor console. Refer to Front Floor Console Replacement . 3. Remove the center pillar lower molding. Refer to Center Pillar Lower Garnish Molding Replacement . 	
1	Floor Panel Carpet Assembly

Front Side Door Opening Floor Carpet Retainer Replacement

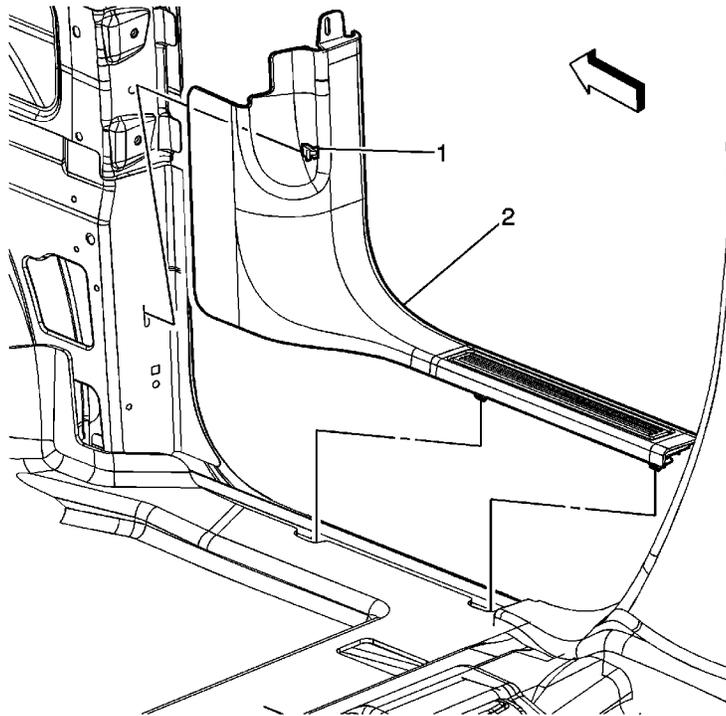


Callout	Component Name
1	Front Side Door Carpet Retainer Assembly
2	Front Side Door Carpet Retainer Assembly Clip (Qty: 3) Tip Use a flat-bladed plastic trim tool in order to release the clips and remove carpet retainer.

Rear Side Door Opening Floor Carpet Retainer Replacement

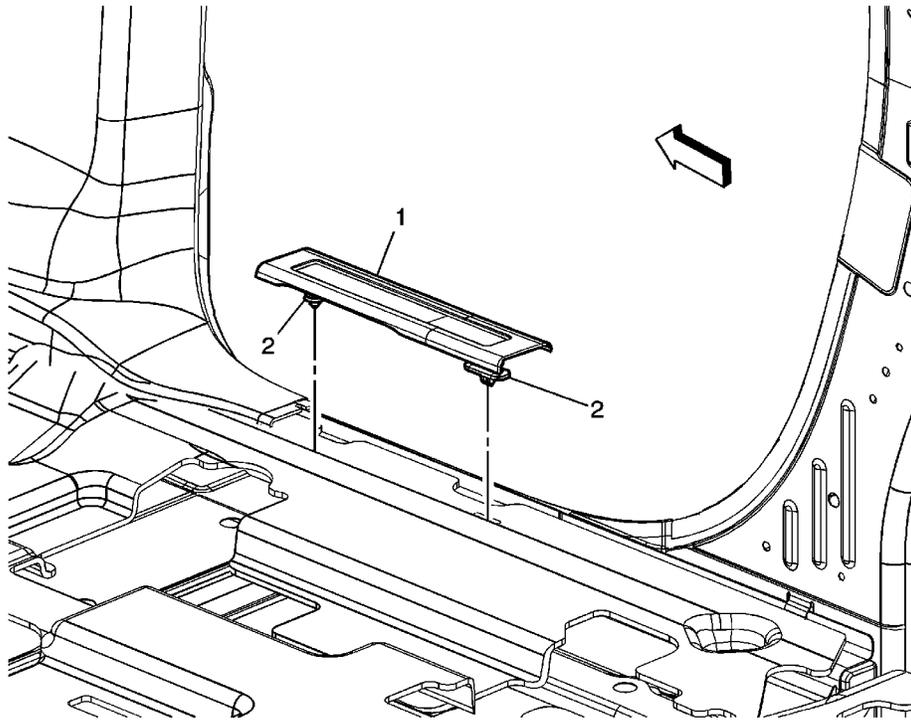


Callout	Component Name
1	Rear Side Door Carpet Retainer Assembly
2	Rear Side Door Carpet Retainer Assembly Integral Retainer (Qty: 2) Tip Use a flat-bladed plastic trim tool in order to release the clips and remove carpet retainer.

Rear Floor Panel Carpet Replacement

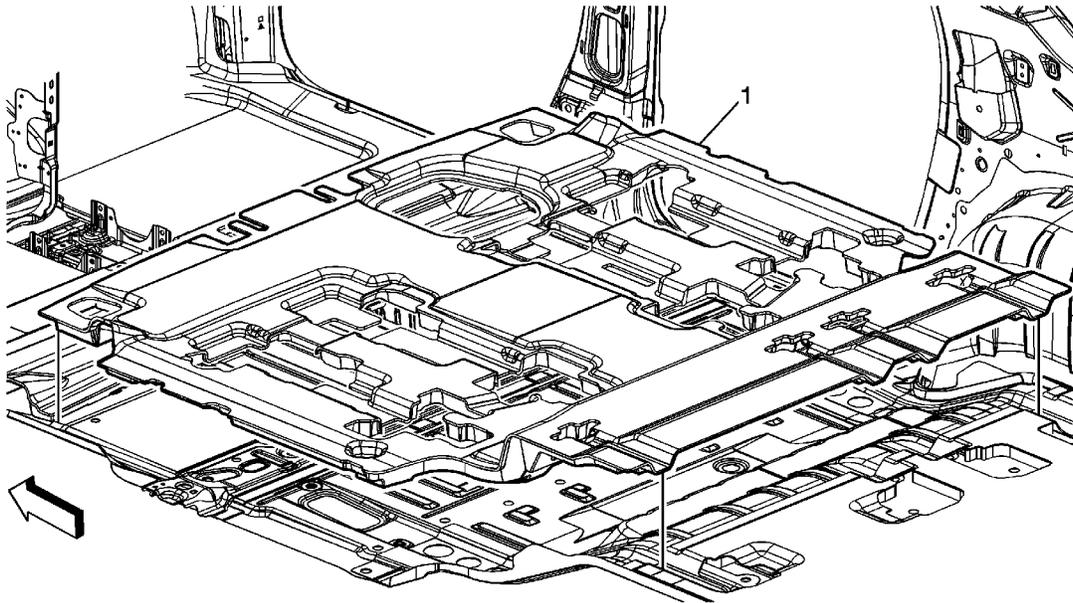


Callout	Component Name
<p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the front seats. Refer to Bucket Seat Replacement . 2. Remove the center pillar lower molding. Refer to Center Pillar Lower Garnish Molding Replacement 3. Remove the rear seats. Refer to Rear Seat Replacement . 4. Remove the rear number 2 seats. Refer to Rear Number 2 Seat Replacement . 5. Remove the rear quarter lower trim. Refer to Quarter Lower Rear Trim Panel Replacement . 	
1	<p>Rear Floor Panel Carpet Assembly</p> <p>Tip The front and rear compartment carpet must be installed prior to the rear carpet.</p>

Rear Compartment Floor Panel Carpet Replacement

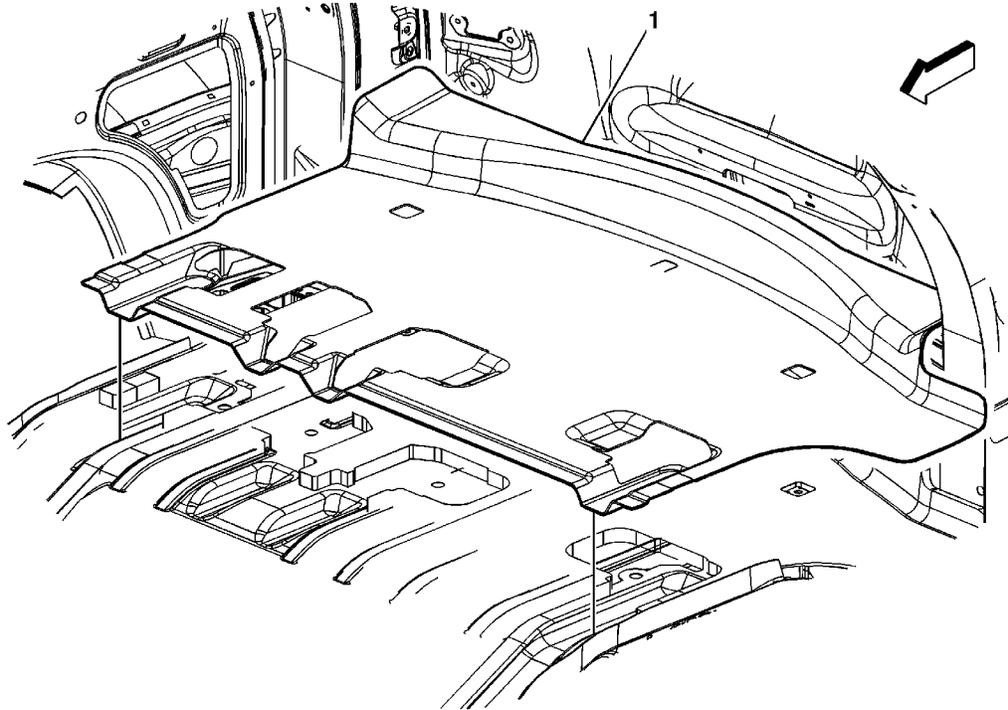

Callout	Component Name
Preliminary Procedures	
1. Remove the rear number 2 seats. Refer to Rear Number 2 Seat Replacement . 2. Remove the rear quarter lower trim. Refer to Quarter Lower Rear Trim Panel Replacement . 3. Remove the liftgate sill plate. Refer to Liftgate Door Sill Plate Replacement .	
1	Rear Compartment Carpet Assembly

Headlining Trim Panel Replacement

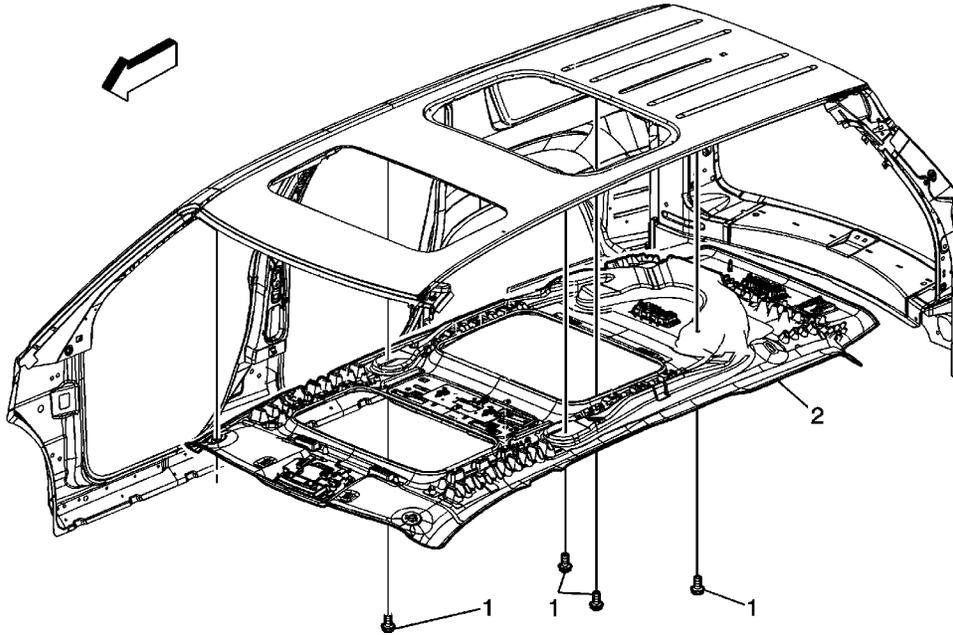

Callout	Component Name
<p>Warning: Do not attempt to repair or alter the head impact energy-absorbing material glued to the headliner or to the garnish trims. If the material is damaged, replace the headliner and/or the garnish trim. Failure to do so could result in personal injury.</p>	
<p>Caution: Use care when working around the head curtain inflator module. Sharp tools may puncture the curtain airbag. If the head curtain inflator module is damaged in any way, it must be replaced.</p>	
<p>Caution: If a vehicle is equipped with a head curtain inflator module ensure that the inflator module and tether are undamaged. If tether or curtain airbag are damaged in any way, they must be replaced.</p>	
<p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Disable the roof rail SIR system. Refer to SIR Disabling and Enabling. 2. Remove the center pillar assist handle. Refer to Center Pillar Assist Handle Replacement. 3. Remove the windshield garnish molding. Refer to Windshield Garnish Molding Replacement - Left Side and Windshield Garnish Molding Replacement - Right Side. 4. Remove the sunshade anchors. Refer to Sunshade Anchor Replacement. 5. Remove the sunshade assemblies. Refer to Sunshade Replacement. 	

© 2010 General Motors Corporation. All rights reserved.

6. Remove the roof console assembly. Refer to [Roof Console Replacement](#).
7. Remove the body lock pillar upper trim panel. Refer to [Body Lock Pillar Upper Trim Panel Replacement](#).
8. Remove the rear quarter upper trim panel. Refer to [Quarter Upper Trim Panel Replacement](#).
9. Remove the coat hooks. Refer to [Coat Hook Replacement](#).
10. Remove the rear overhead console. Refer to [Roof Rear Console Replacement](#).
11. Remove the auxiliary air outlets from the headliner by rotating them counter clockwise and pulling down to remove.

1	Headliner Trim Panel Retainer (Qty: 4)
2	<p>Headliner Trim Panel Assembly</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Reposition the weatherstrips as required. 2. Route the rear shoulder belt through the bezel. 3. Disconnect the front and rear washer solvent hose from the headliner. 4. Prior to removal, note the routing of the wire harness to aid in reassembly and to ensure proper installation. 5. Disconnect the electrical connectors. 6. If replacing the headliner assembly, transfer all necessary components.