



Instrument Panel Insulator Panel Replacement - Right Side (Enclave)

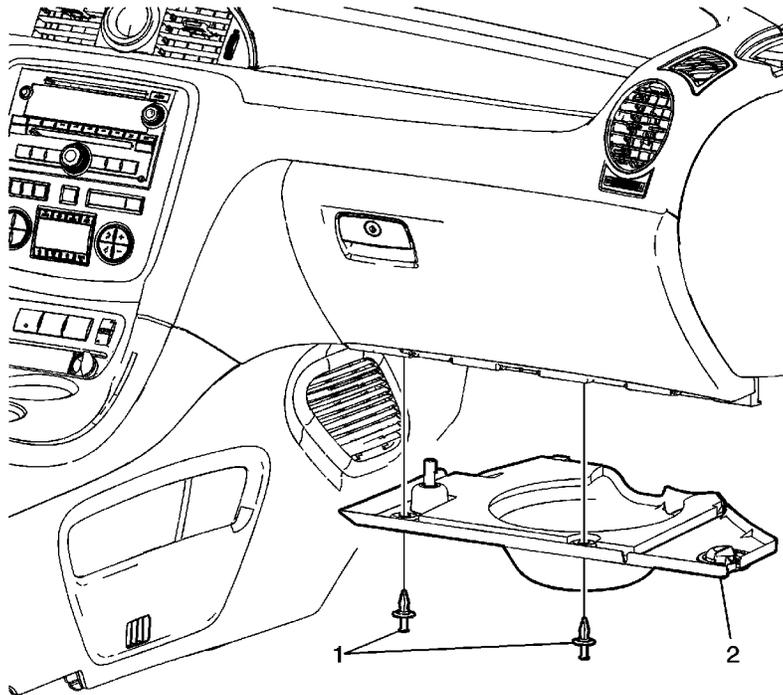


Callout	Component Name
1	Push-pin Fasteners (Qty: 2)
2	Insulator/Closeout Panel - Right Procedures 1. Disconnect the electrical connectors. 2. Ensure the tab on the right side of the insulator locks into the carrier assembly securing the insulator to the instrument panel.

Instrument Panel Insulator Panel Replacement - Left Side (Enclave)

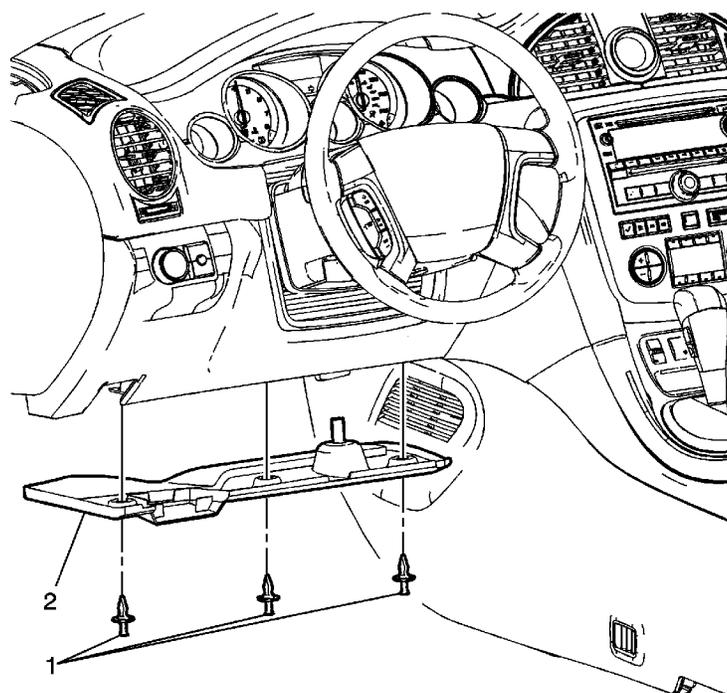


Callout	Component Name
1	Push-pin Fasteners (Qty: 3)
2	Insulator/Closeout Panel - Left Procedure Disconnect the electrical connectors.

Steering Column Housing Cover Replacement (Enclave)

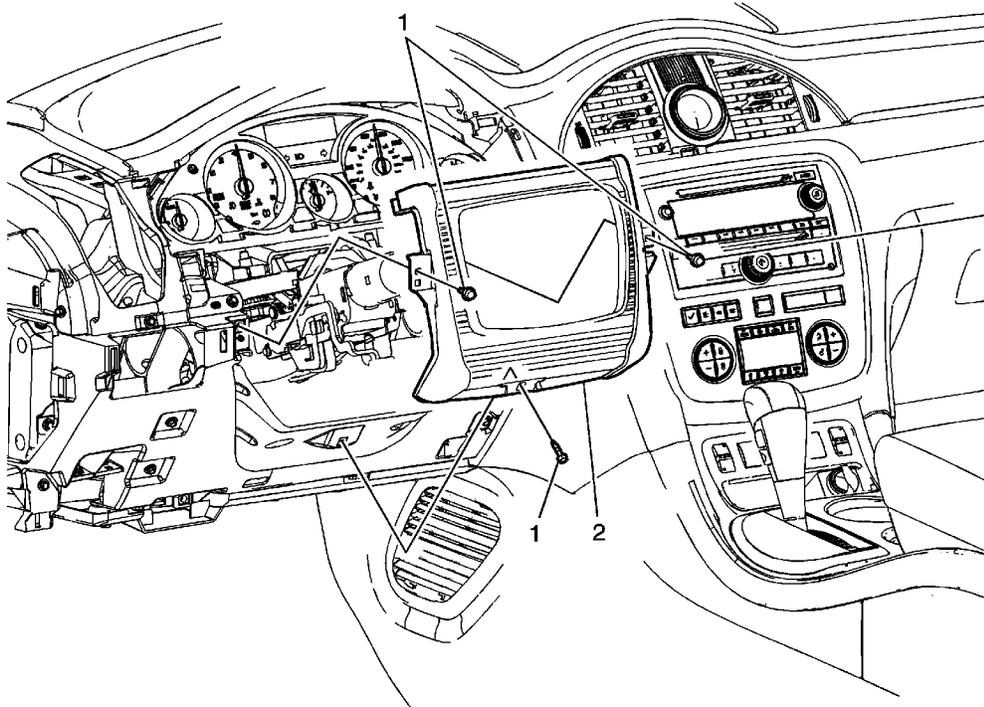


Callout	Component Name
<p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Disable the SIR system. Refer to SIR Disabling and Enabling. 2. Remove the steering wheel. Refer to Steering Wheel Replacement. 3. Remove the turn signal multifunction switch assembly. Refer to Turn Signal Multifunction Switch Replacement. 4. Remove the turn signal switch bracket. Refer to Turn Signal Switch Bracket Replacement. 5. Remove the instrument panel cluster trim plate applique. Refer to Instrument Panel Cluster Trim Plate Applique Replacement. 6. Remove the driver knee bolster. Refer to Driver Knee Bolster Replacement. 	
1	<p>Steering Column Housing Cover Screw (Qty: 3)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 2.5 N·m (22 lb in)</p>
2	Steering Column Housing Cover Assembly

Driver Knee Bolster Replacement (Enclave)

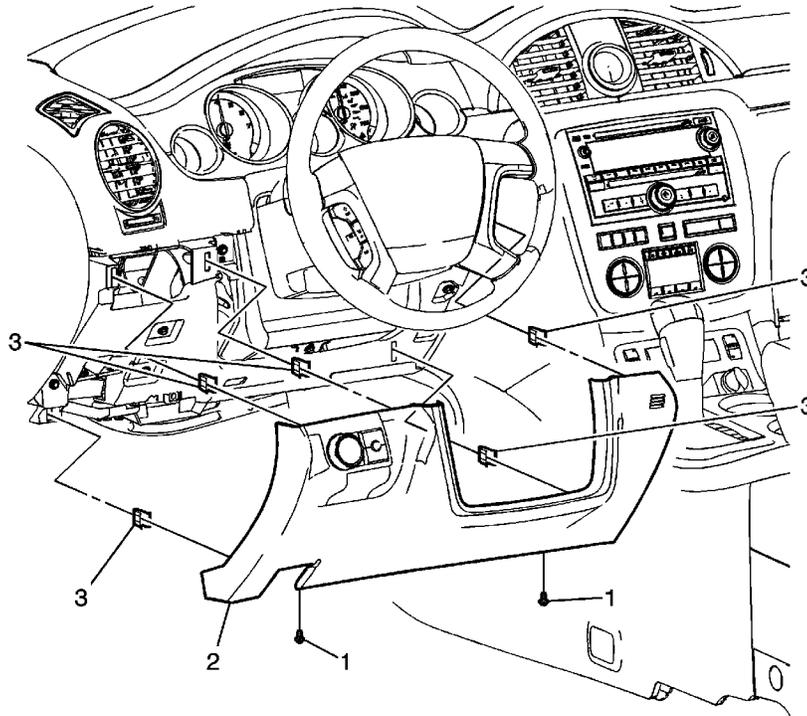


Callout	Component Name
<p>Preliminary Procedure</p>	
<p>Remove the hood latch release handle assembly. Refer to Hood Primary Latch Release Cable Handle Replacement.</p>	
<p>1</p>	<p>Driver Knee Bolster Screw (Qty: 2)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 2.5 N·m (22 lb in)</p>
<p>2</p>	<p>Driver Knee Bolster Assembly</p> <p>Procedures</p> <ol style="list-style-type: none"> 1. Disconnect the electrical connections. 2. When replacing the knee bolster, transfer all necessary components.
<p>3</p>	<p>Retainer Clip (Qty: 5)</p>

Instrument Panel Accessory Trim Plate Replacement (Enclave)

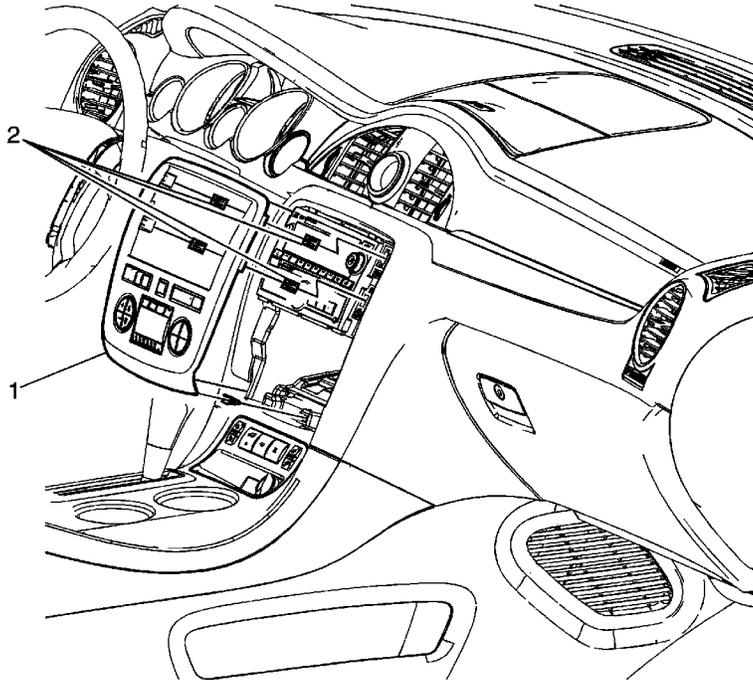


Callout	Component Name
1	Accessory Trim Plate Assembly Procedures 1. Use a flat bladed plastic trim tool in order to release the accessory trim plate from the instrument panel assembly. 2. Disconnect the electrical connections. 3. When replacing the accessory trim plate, transfer all necessary components.
2	Retainer Clips (Qty: 8)

Instrument Panel Center Trim Panel Replacement (Enclave)

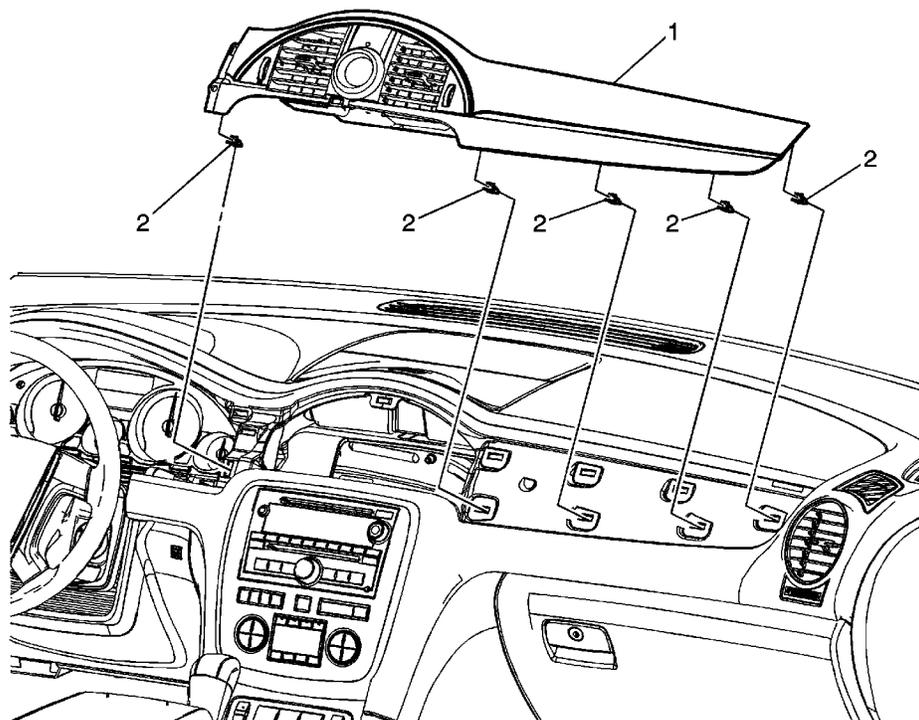


Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the instrument panel cluster trim plate applique. Refer to Instrument Panel Cluster Trim Plate Applique Replacement .</p>	
<p>1</p>	<p>Instrument Panel Trim Panel - Right</p> <p>Procedures</p> <ol style="list-style-type: none"> 1. Use a plastic flat bladed trim tool in order to release the trim panel from the instrument panel assembly. 2. Disconnect the electrical connections. 3. When replacing the trim panel, transfer all necessary components.
<p>2</p>	<p>Retainer Clips (Qty 10)</p>

Clock Bezel Replacement (Enclave)

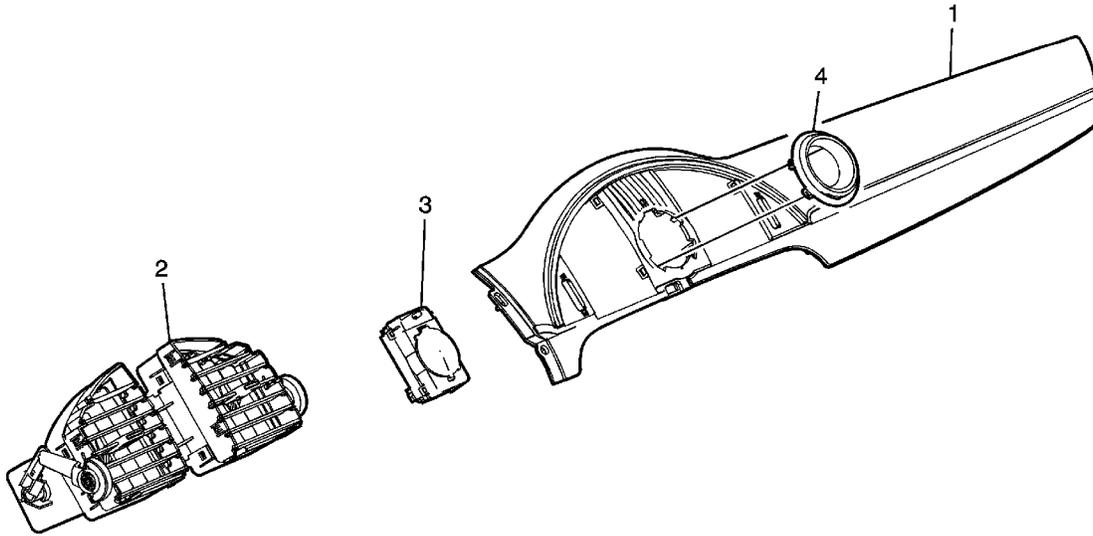


Callout	Component Name
1	Instrument Panel Trim Panel - Center Refer to Instrument Panel Center Trim Panel Replacement .
2	Instrument Panel Center Air Outlet Refer to Instrument Panel Center Air Outlet Replacement .
3	Clock Assembly Refer to Clock Replacement .
4	Clock Bezel Procedure Release the tabs on the back of the trim panel and push the clock bezel from the trim panel.

Instrument Panel Cluster Trim Plate Cover Replacement (Enclave)

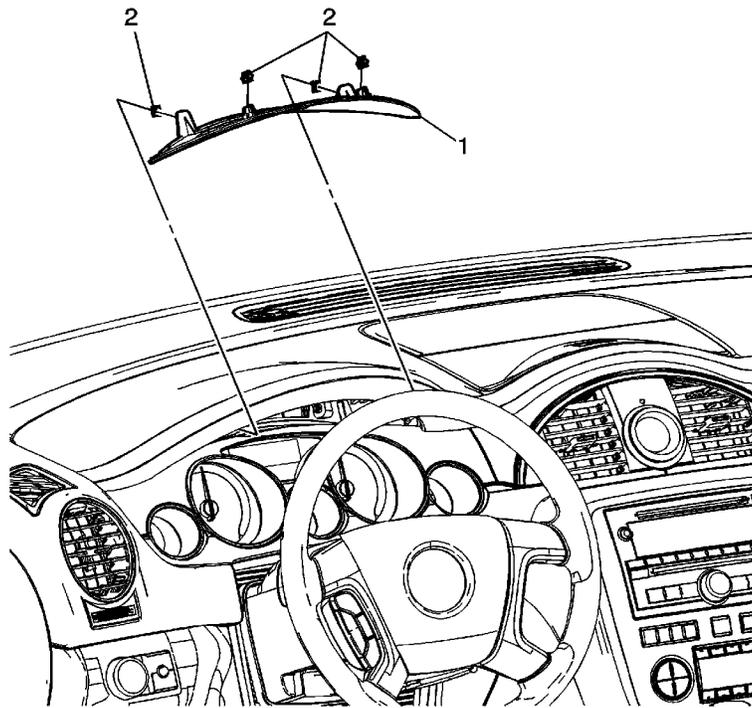


Callout	Component Name
1	Instrument Panel Cluster Trim Plate Cover Procedure Use a flat bladed plastic trim tool in order to release the cluster trim plate cover from the instrument panel assembly.
2	Retainer Clips (Qty 4)

Instrument Panel Cluster Trim Plate Applique Replacement (Enclave)

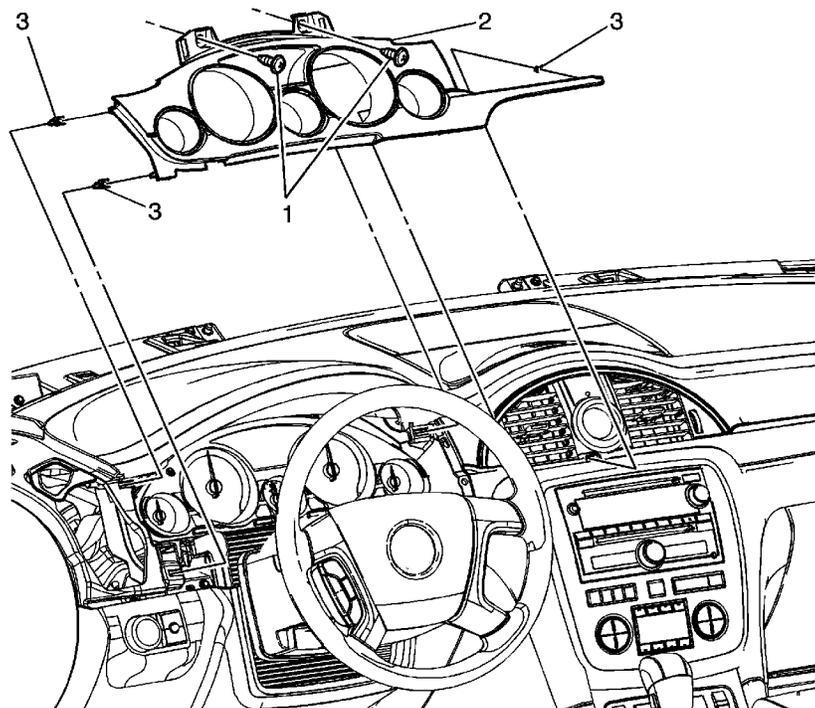

Callout	Component Name
Preliminary Procedure	
<ol style="list-style-type: none"> 1. Remove the instrument panel cluster trim plate cover. Refer to Instrument Panel Cluster Trim Plate Cover Replacement. 2. Remove the left side instrument panel trim panel. Refer to Instrument Panel Trim Panel Replacement - Left Side. 	
1	Instrument Panel Cluster Trim Plate Applique Screw (Qty 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Instrument Panel Cluster Trim Plate Applique Assembly
3	Retainer Clip (Qty: 6)

Instrument Panel Trim Panel Replacement - Left Side (Enclave)

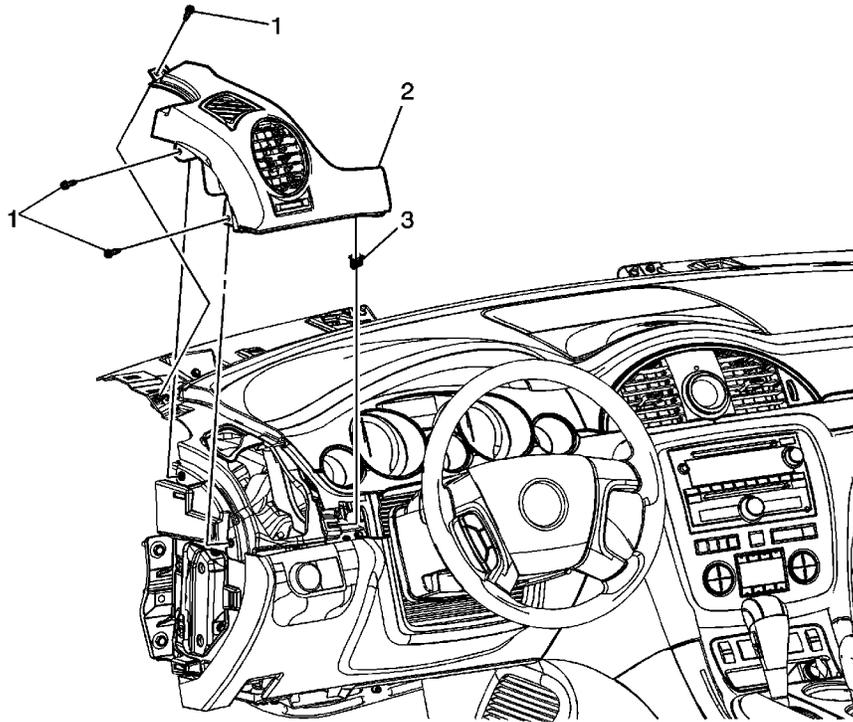


Callout	Component Name
Preliminary Procedures	
<ol style="list-style-type: none"> 1. Remove the left windshield garnish molding. Refer to Windshield Garnish Molding Replacement - Left Side. 2. Remove the instrument panel upper trim panel with windshield defroster nozzle. Refer to Instrument Panel Upper Trim Panel with Windshield Defroster Nozzle Grille Replacement. 3. Remove the left instrument panel outer trim cover. Refer to Instrument Panel Compartment Access Hole Cover Replacement. 	
1	Instrument Panel Left Trim Panel Screw (Qty: 3) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Instrument Panel Left Trim Panel Procedure

© 2010 General Motors Corporation. All rights reserved.


	When replacing the trim panel , transfer all necessary components.
3	Retainer Clip (Qty: 2)

Instrument Panel Center Compartment Replacement (Enclave)

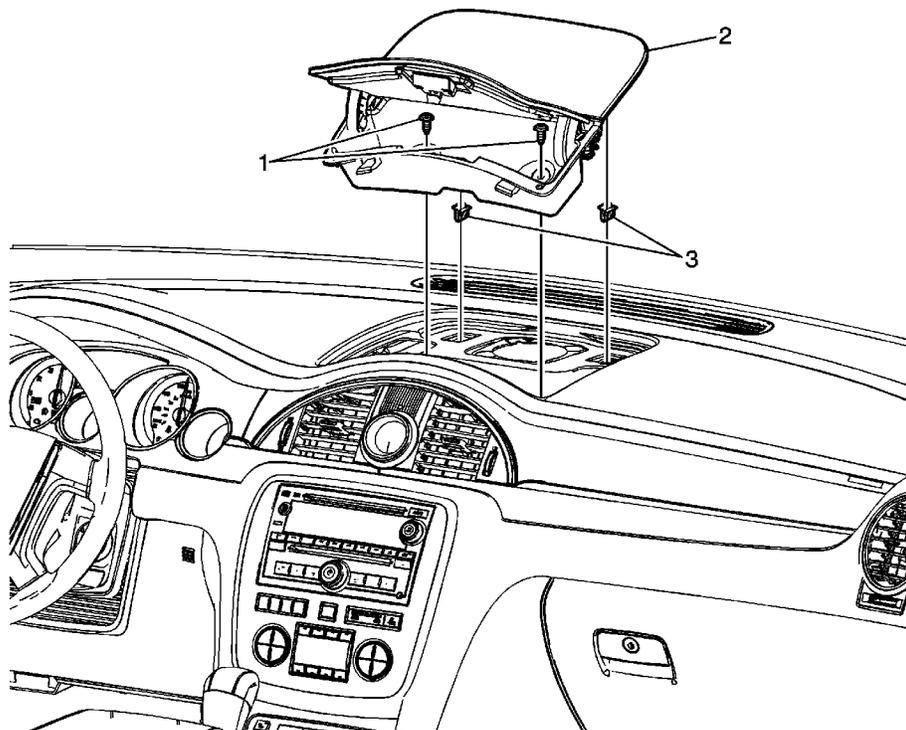


Callout	Component Name
1	Instrument Panel Center Compartment Screws Qty: (2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Instrument Panel Center Compartment Assembly Procedure Use a flat bladed plastic trim tool in order to release the forward edge of the instrument panel storage compartment from the instrument panel.
2	Retainer Clips (Qty: 2)

Instrument Panel Compartment Replacement (Enclave)

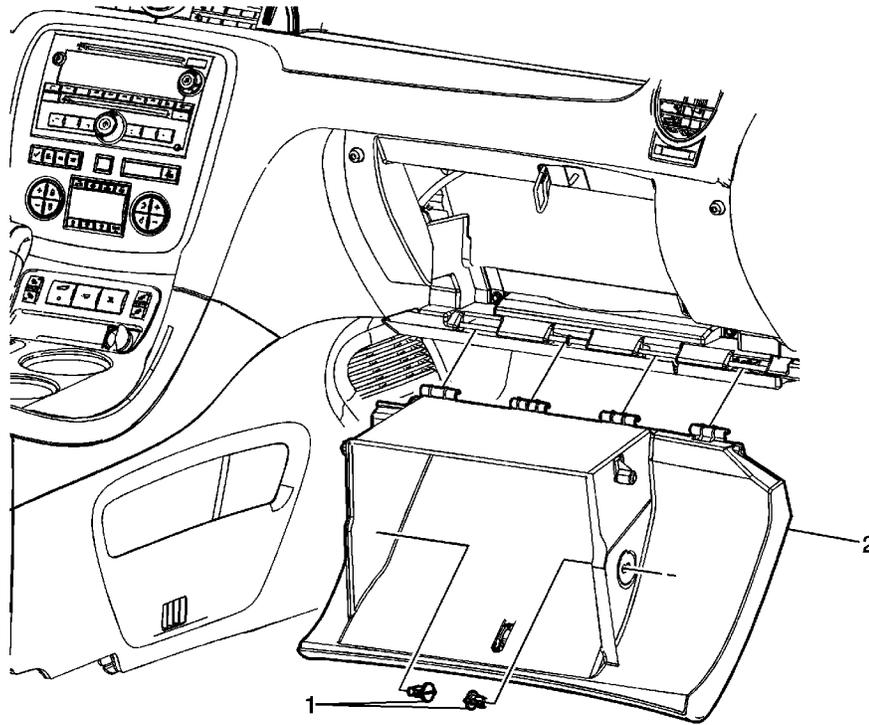


Callout	Component Name
1	Instrument Panel Compartment Retainers (Qty: 2) Procedure Twist the compartment retainers and pull outward to remove.
2	Instrument Panel Compartment Assembly Procedure 1. Squeeze the sides of the compartment, and open the compartment beyond the stops. 2. Unsnap the instrument panel compartment assembly from the instrument panel.

Instrument Panel Compartment Trim Plate Replacement (Enclave)

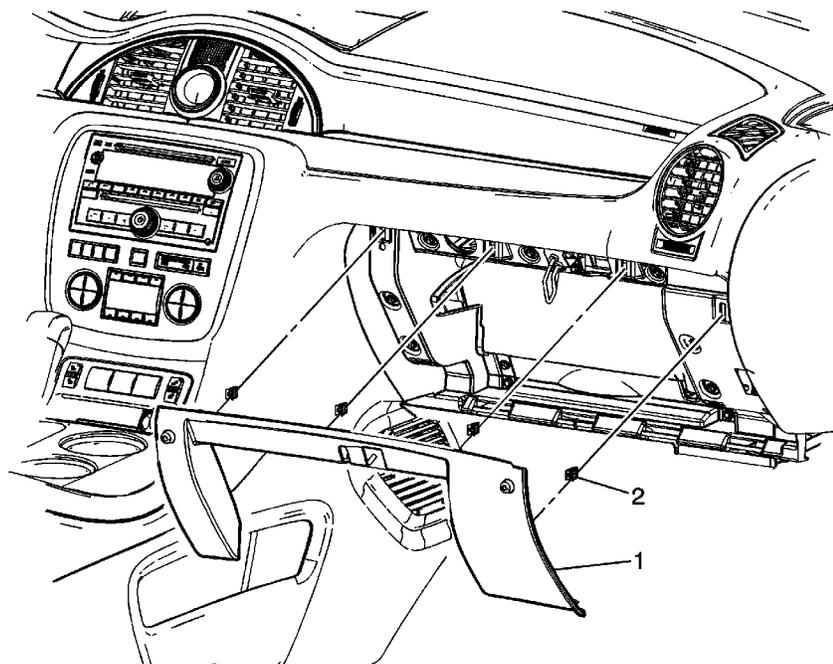


Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the instrument panel compartment assembly. Refer to Instrument Panel Compartment Replacement .</p>	
1	<p>Instrument Panel Compartment Trim Plate Assembly</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Disconnect the electrical connections. 2. When replacing the instrument panel compartment trim plate, transfer all necessary components.
2	<p>Retainer Clip (Qty: 4)</p>

Instrument Panel Compartment Access Hole Cover Replacement (Enclave)

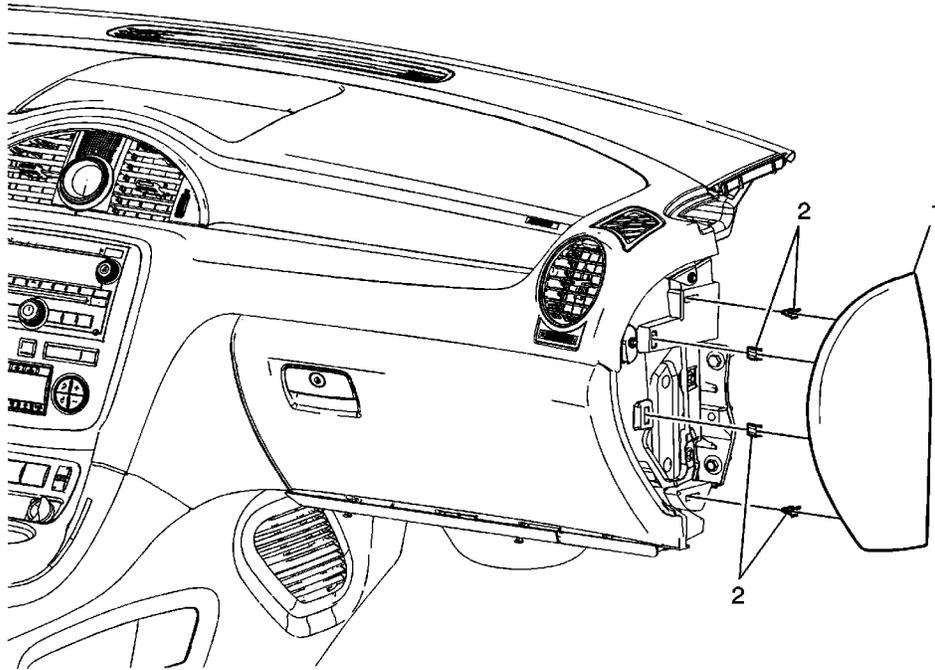


Callout	Component Name
1	Instrument Panel Outer Trim Cover
2	Retainer Clips (Qty: 4)

Instrument Panel Compartment Door Dampener Replacement (Enclave)

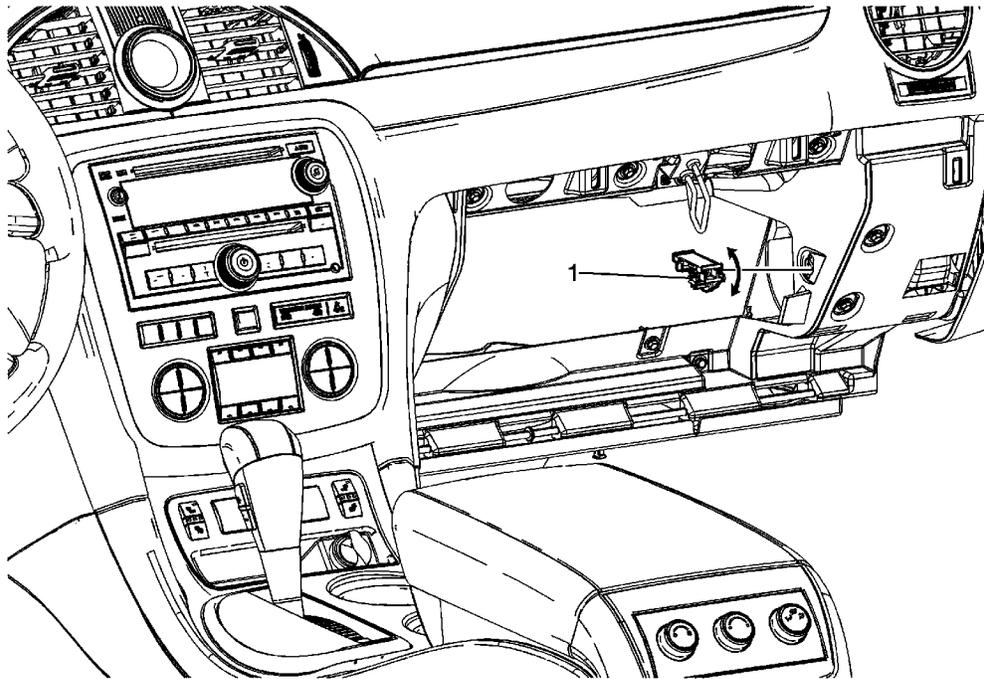


Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the instrument panel compartment door stops and open door fully.</p>	
<p>1</p>	<p>Instrument Panel Compartment Dampener Assembly</p> <p>Procedure</p> <p>Twist the dampener and pull outward to remove from the dampener from the instrument panel assembly.</p>

Instrument Panel Upper Trim Panel with Windshield Defroster Nozzle Grille Replacement (Enclave)

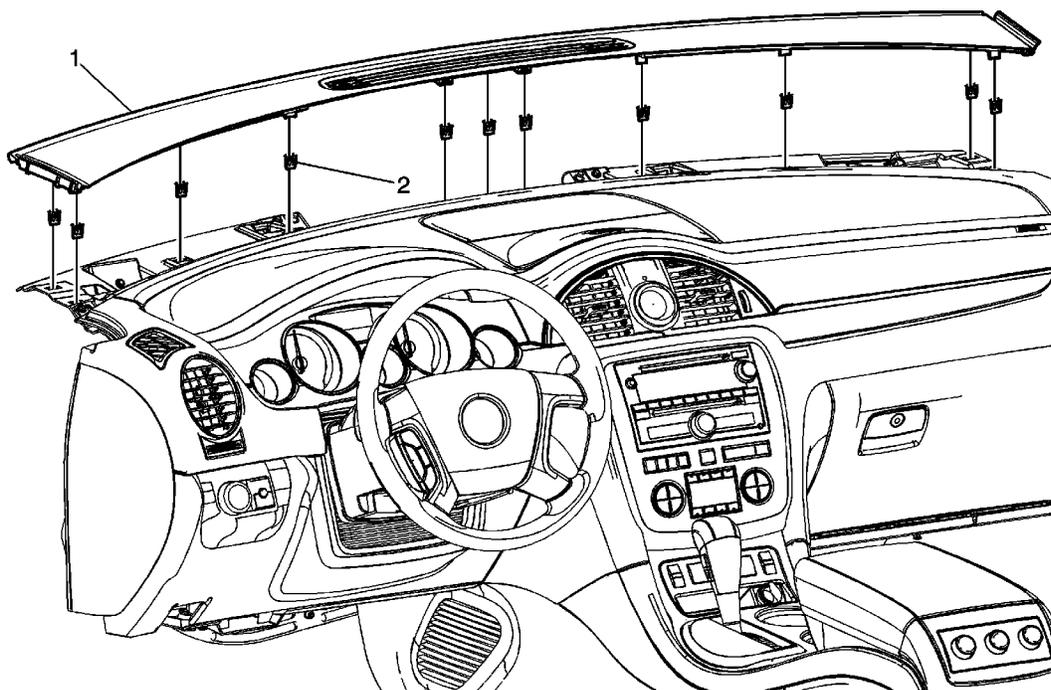

Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the windshield garnish moldings. Refer to Windshield Garnish Molding Replacement - Left Side and Windshield Garnish Molding Replacement - Right Side .</p>	
<p>1</p>	<p>Instrument Panel Upper Trim Panel with Windshield Defroster Nozzle</p> <p>Procedures</p> <ol style="list-style-type: none"> 1. Use a flat bladed plastic trim tool in order to release the upper trim panel from the instrument panel assembly. 2. Disconnect the electrical connections. 3. When replacing the upper trim plate, transfer all necessary components.
<p>2</p>	<p>Retainer Clips (Qty: 11)</p>

Instrument Panel Trim Pad Replacement (Enclave)

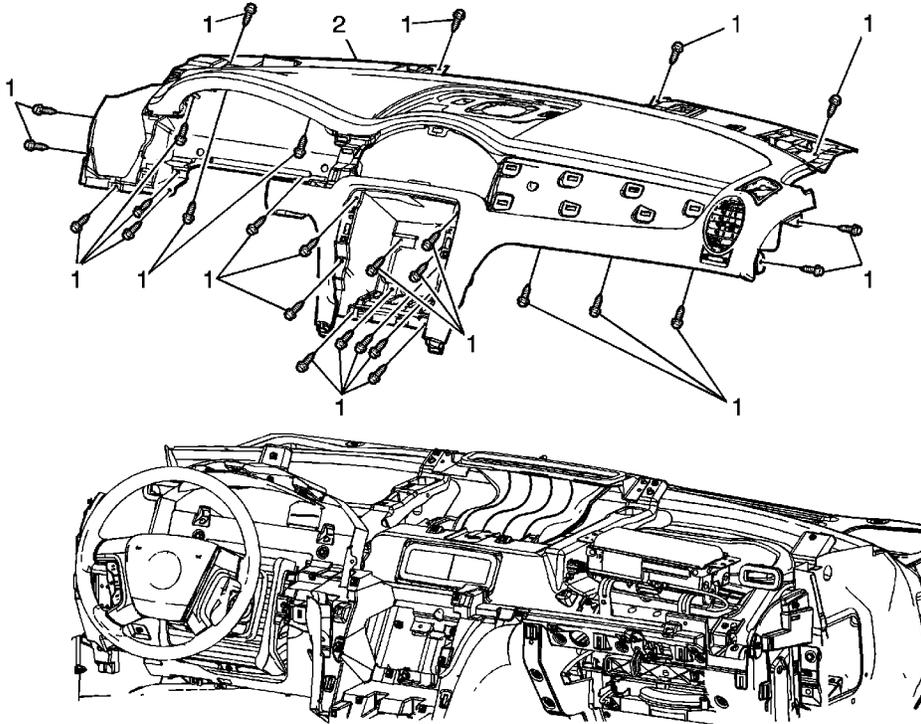

Callout	Component Name
Preliminary Procedures	
<ol style="list-style-type: none"> 1. Disable the SIR system. Refer to SIR Disabling and Enabling. 2. Remove the instrument panel upper trim panel with defroster nozzle. Refer to Instrument Panel Upper Trim Panel with Windshield Defroster Nozzle Grille Replacement. 3. Remove the instrument panel outer trim covers. Refer to Instrument Panel Compartment Access Hole Cover Replacement. 4. Remove the instrument panel compartment trim panel. Refer to Instrument Panel Compartment Trim Plate Replacement. 5. Remove the instrument panel cluster trim plate applique. Refer to Instrument Panel Cluster Trim Plate Applique Replacement. 6. Remove the radio. Refer to Radio Replacement. 7. Remove the radio front speaker. Refer to Radio Front Speaker Replacement. 	
1	Instrument Panel Trim Pad Screw (Qty: 25) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)


Instrument Panel Trim Pad Assembly

Procedure

2


1. Prior to removing the trim pad from the instrument panel assembly, note the routing of the wiring to ensure proper reinstallation.
2. Disconnect all electrical connections.
3. With the aid of an assistant, remove the trim panel from the vehicle.
4. When replacing the instrument panel trim pad, transfer all necessary components.

Front Floor Console Accessory Trim Plate Replacement (Enclave)

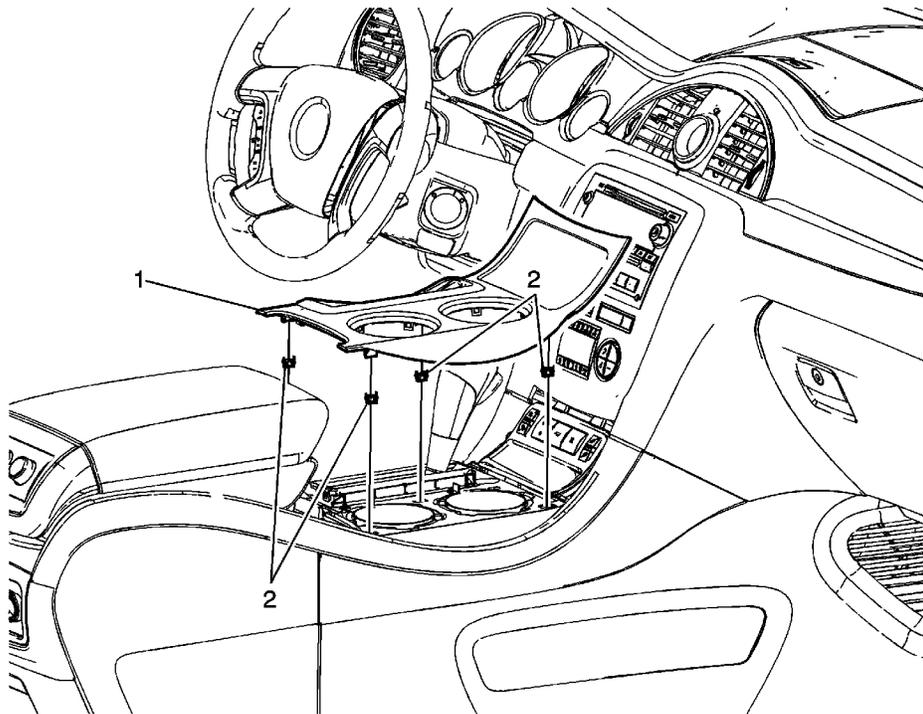


Callout	Component Name
1	Front Floor Console Accessory Trim Plate Assembly Procedure Use a flat bladed plastic trim tool in order to release the console accessory trim plate from the console assembly.
2	Retainer Clips (Qty: 5)

Front Floor Console Accessory Housing Replacement (Enclave)

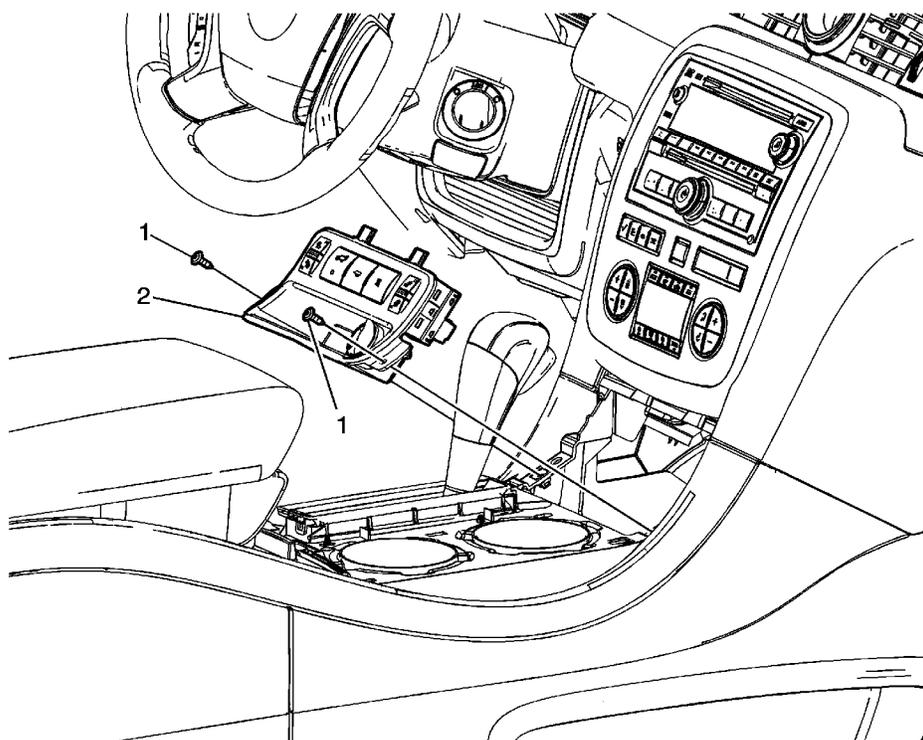


Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the front floor console accessory trim plate. Refer to Front Floor Console Accessory Trim Plate Replacement.</p>	
<p>1</p>	<p>Front Floor Console Accessory Housing Screw (Qty: 2)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 2 N·m (18 lb in)</p>
<p>2</p>	<p>Front Floor Console Accessory Housing Assembly</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Disconnect the electrical connectors. 2. When replacing the front floor console accessory housing assembly, transfer all necessary components.

Front Floor Console Extension Panel Replacement - Right Side (Enclave)

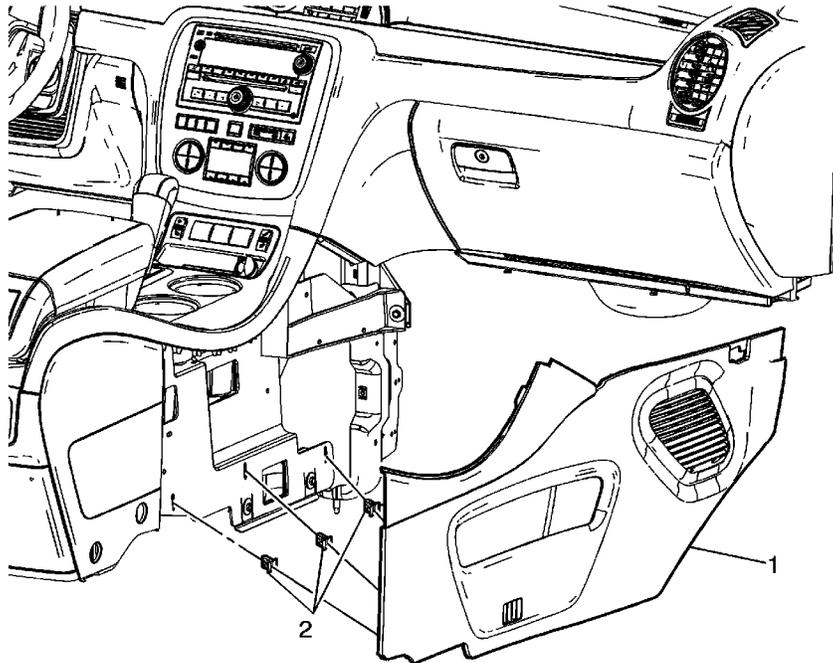


Callout	Component Name
Preliminary Procedure	
Remove the right front seat. Refer to Bucket Seat Replacement .	
1	Front Floor Console Extension Panel
2	Retainer Clip (Qty: 5)

Front Floor Console Extension Panel Replacement - Left Side (Enclave)

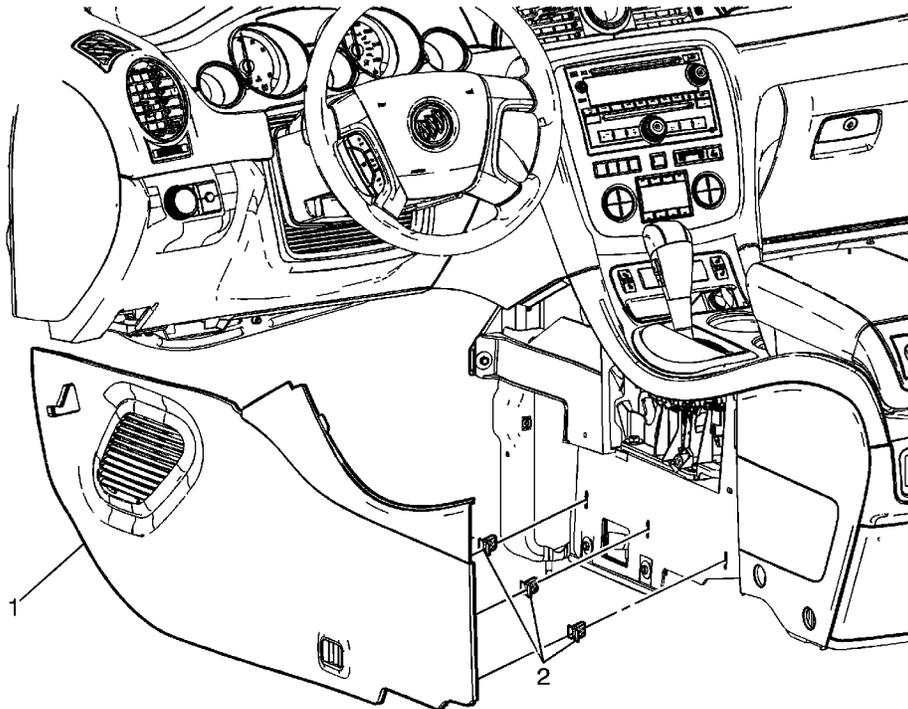

Callout	Component Name
Preliminary Procedure	
Remove the left front seat . Refer to Bucket Seat Replacement .	
1	Front Floor Console Extension Panel
2	Retainer Clip (Qty: 5)

Front Floor Console Replacement (Enclave)

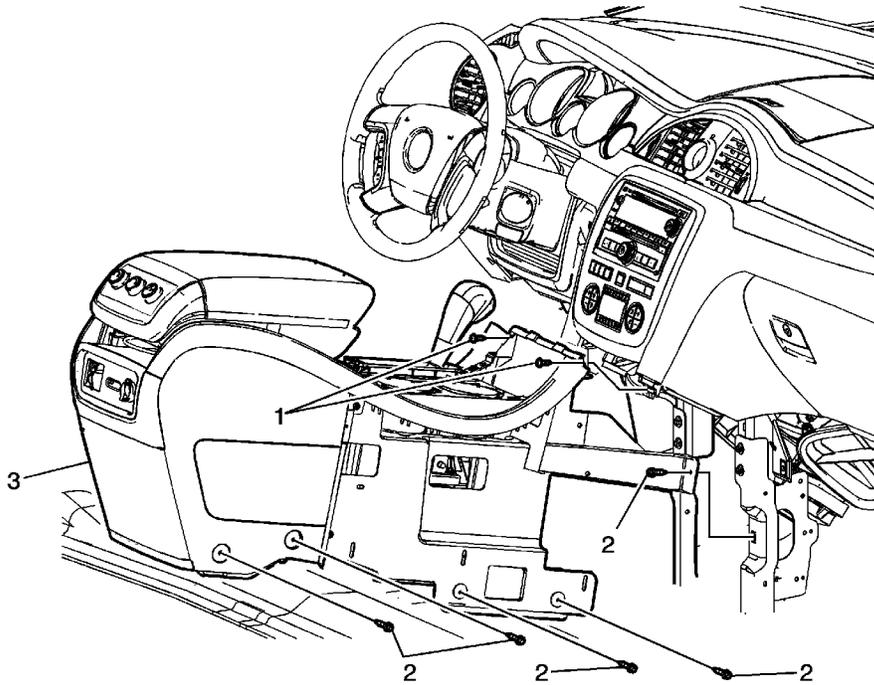

Callout	Component Name
<p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the front floor console accessory trim plate. Refer to Front Floor Console Accessory Trim Plate Replacement. 2. Remove the right and left front floor console extension panels. Refer to Front Floor Console Extension Panel Replacement - Right Side and Front Floor Console Extension Panel Replacement - Left Side. 3. Disconnect the automatic transmission range selector lever cable. Refer to Range Selector Lever Cable Replacement. 	
1	<p>Front Floor Console Screw (Qty: 2)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 2 N·m (18 lb in)</p>
2	<p>Front Floor Console Bolt (Qty: 10)</p> <p>Tip Before installing the right lower forward bolt, ensure that the console wiring harness is tucked below the fastener location to avoid driving the bolt into the</p>

© 2010 General Motors Corporation. All rights reserved.

	<p>harness.</p> <p>Tighten 9 N·m (80 lb in)</p>
3	<p>Front Floor Console Assembly</p> <p>Procedure</p> <ol style="list-style-type: none">1. Note location and routing of the front floor console wiring harness prior to removal of the front floor console assembly to ensure proper reinstallation.2. Disconnect the electrical connectors.3. With the aid of an assistant remove the console assembly from the vehicle.4. When replacing the front floor console, transfer all necessary components.