


## Fastener Tightening Specifications

Application	Specification	
	Metric	English
Carrier Assembly Lower Bolts	9 N·m	80 lb in
Carrier Assembly to Body Bolts	9 N·m	80 lb in
Carrier Assembly Upper Bolts	9 N·m	80 lb in
Drivers Knee Bolster Assembly Screws	2.5 N·m	22 lb in
Front Floor Console Accessory Housing Screws	2 N·m	18 lb in
Front Floor Console Armrest Assembly Bolts	9 N·m	18 lb in
Front Floor Console Armrest Bin Screws	2 N·m	18 lb in
Front Floor Console Armrest Screws	2 N·m	18 lb in
Front Floor Console Bolts	2 N·m	18 lb in
Front Floor Console Compartment Bin Screws	2 N·m	18 lb in
Front Floor Console Compartment Door Latch Opening Cover Screws	2 N·m	18 lb in
Front Floor Console Cover Screws	2 N·m	18 lb in
Front Floor Console Extension Accessory Upper Bezel Screws	2 N·m	18 lb in
Front Floor Console Filler Panel Screws	2 N·m	18 lb in
Floor Console Front Rear Trim Panel Screw	2 N·m	18 lb in
Front Floor Console Screws	2 N·m	18 lb in
Instrument Panel Center Compartment Screws	2 N·m	18 lb in
Instrument Panel Cluster Trim Plate Screws	2 N·m	18 lb in
Instrument Panel Cluster Trim Plate Applique Screws	2 N·m	18 lb in
Instrument Panel Compartment Striker Screws	2 N·m	18 lb in
Instrument Panel Inflatable Restraint Bolts	9 N·m	80 lb in
Instrument Panel Lower Trim Panel Screws/Bolts	2 N·m	18 lb in
Instrument Panel Trim Panel Screws	2 N·m	18 lb in
Instrument Panel Trim Pad Screws	2 N·m	18 lb in
Left Window Air Outlet Screw	9 N·m	80 lb in
Rear Floor Console Armrest Hinge Screw	2.5 N·m	22 lb in
Rear Floor Console Armrest Latch Screw	2.5 N·m	22 lb in
Rear Floor Console Bolts	45 N·m	33 lb ft
Rear Floor Console Front Trim Upper Panel Screw	2.5 N·m	22 lb in
Rear Floor Console Hinge Cover Closeout Screw	2.5 N·m	22 lb in
Rear Floor Console Latch Cover Screw	2.5 N·m	22 lb in
Rear Floor Console Lid Latch Screw	2.5 N·m	22 lb in
Rear Floor Console Lid Trim Cover Screw	2.5 N·m	22 lb in
Rear Floor Console Lid Trim Cover Screw	2.5 N·m	22 lb in
Rear Floor Console Rear Release Latch Screw	2.5 N·m	22 lb in

© 2010 General Motors Corporation. All rights reserved.

Rear Floor Console Rear Trim Cover Lower Panel Screw	2.5 N·m	22 lb in
Rear Floor Console Rear Trim Upper Panel Screw	2.5 N·m	22 lb in
Rear Floor Console Side Trim Panel Screw	2.5 N·m	22 lb in
Rear Floor Console Storage Lower Tray Screw	2.5 N·m	22 lb in
Steering Column Housing Cover Screws	2.5 N·m	22 lb in

# Instrument Panel Lower Trim Panel Replacement

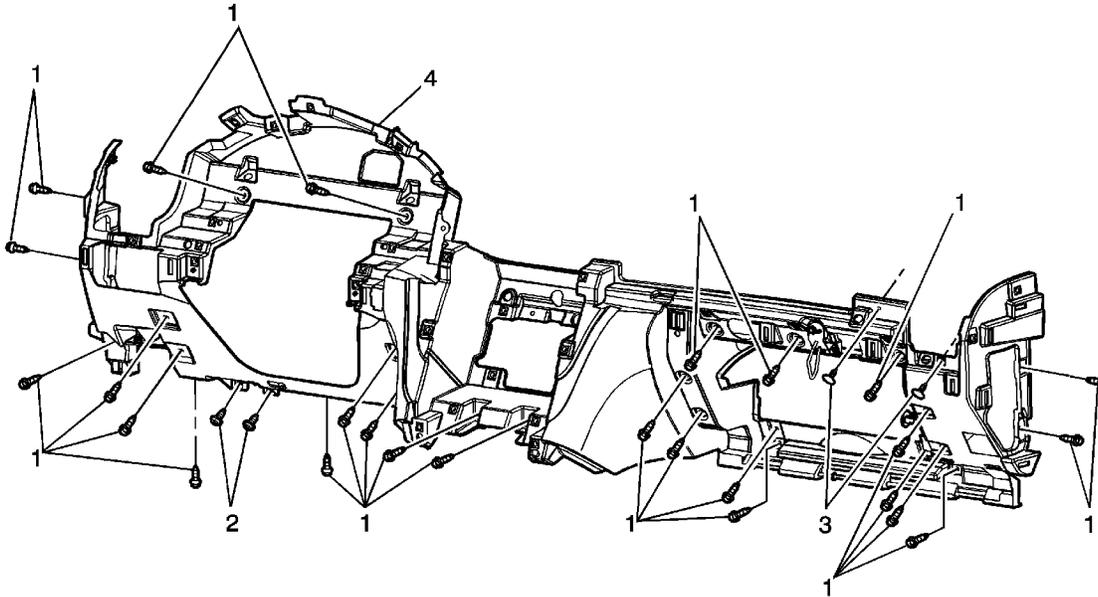


Callout	Component Name
<p><b>Preliminary Procedures</b></p> <ol style="list-style-type: none"> <li>1. Remove the instrument panel upper trim pad. Refer to <a href="#">Instrument Panel Trim Pad Replacement</a>.</li> <li>2. Remove the front floor console. Refer to <a href="#">Front Floor Console Replacement</a>.</li> <li>3. Remove the steering column assembly. Refer to <a href="#">Steering Column Replacement</a>.</li> <li>4. Remove the instrument cluster assembly. Refer to <a href="#">Instrument Cluster Replacement</a>.</li> </ol>	
1	<p>Instrument Panel Lower Trim Panel Screw/Bolt (Qty: 26)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.</p> <p><b>Tighten</b> 2 N·m (18 lb in)</p>
2	<p>ALDL Screw (Qty: 2)</p> <p><b>Tighten</b> 2 N·m (18 lb in)</p>
3	<p>Push Pin Fasteners (Qty: 2)</p>
<p>Instrument Panel Lower Trim Panel</p> <p>© 2010 General Motors Corporation. All rights reserved.</p>	

**Procedure**

4

1. Prior to removing the lower trim panel from the carrier assembly, note the routing of the wiring harness to ensure proper reinstallation.
2. Disconnect all electrical connections.
3. With the aid of an assistant, remove the trim panel from the vehicle.
4. When replacing the instrument panel lower trim panel, transfer all necessary components.

## Instrument Panel Carrier Replacement

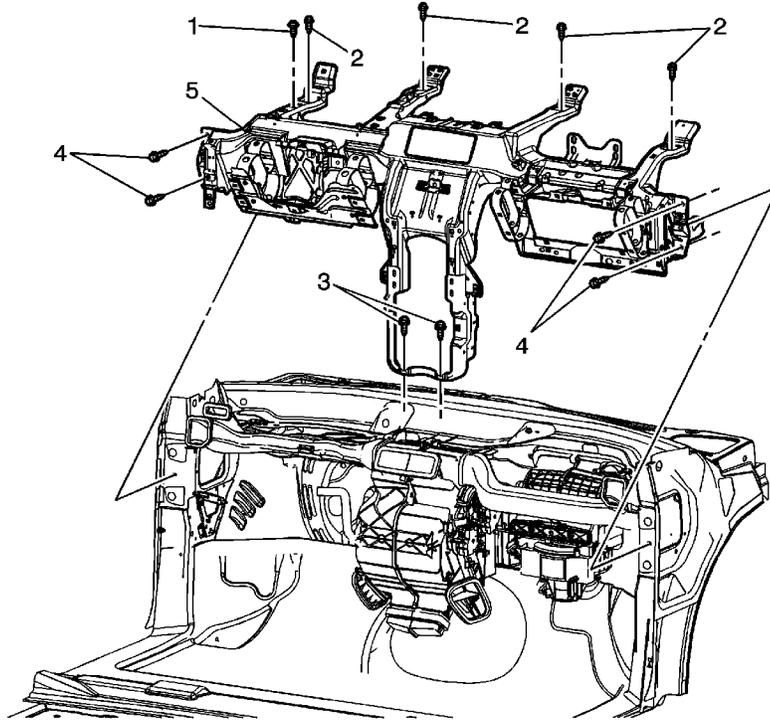


Callout	Component Name
<p><b>Preliminary Procedures</b></p> <ol style="list-style-type: none"> <li>1. Remove the instrument panel lower trim panel. Refer to <a href="#">Instrument Panel Lower Trim Panel Replacement</a>.</li> <li>2. Remove the windshield defroster duct. Refer to <a href="#">Windshield Defroster Duct Replacement</a>.</li> <li>3. Remove the right window air outlet duct. Refer to <a href="#">Side Window Defogger Outlet Duct Replacement - Right Side</a>.</li> </ol>	
1	<p>Left Window Air Outlet Screw (Qty: 1)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.</p> <p><b>Tighten</b> 2 N·m (18 lb in)</p>
2	<p>Carrier Assembly Upper Bolt (Qty: 4)</p> <p><b>Tighten</b> 9 N·m (80 lb in)</p>
	<p>Carrier Assembly Lower Bolt (Qty: 2)</p>

© 2010 General Motors Corporation. All rights reserved.


3	<b>Tighten</b> 9 N·m (80 lb in)
4	Carrier Assembly to Body Bolt (Qty: 4) <b>Tighten</b> 9 N·m (80 lb in)
5	Carrier Assembly <b>Procedure</b> <ol style="list-style-type: none"><li>1. Prior to removing the carrier assembly, note the routing of the wiring to ensure proper reinstallation.</li><li>2. Disconnect all electrical connections.</li><li>3. Remove the fasteners securing the HVAC module assembly to the carrier assembly. Refer to <a href="#">HVAC Module Assembly Replacement</a>.</li><li>4. Prior to removing the carrier assembly, support the HVAC module.</li><li>5. With the aid of an assistant, remove the carrier assembly from the vehicle.</li><li>6. When replacing the carrier assembly, transfer all necessary components.</li></ol>

## Front Floor Console Filler Replacement

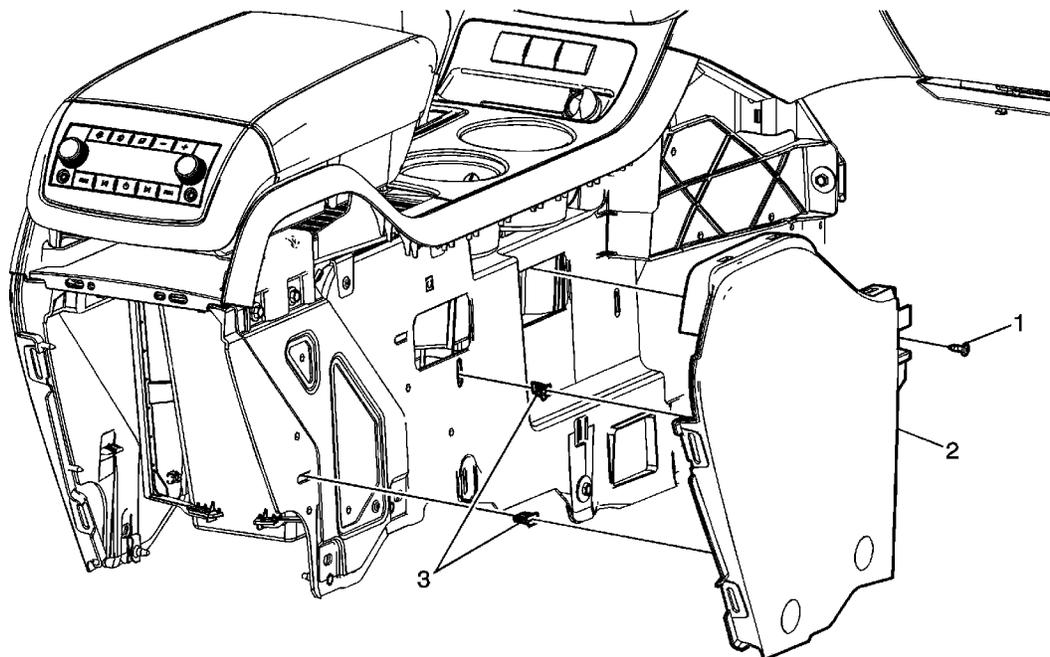


Callout	Component Name
<p><b>Preliminary Procedures</b></p> <ol style="list-style-type: none"> <li>1. Remove the right or left front floor console extension panel. Refer to <a href="#">Front Floor Console Extension Panel Replacement - Right Side</a> or <a href="#">Front Floor Console Extension Panel Replacement - Left Side</a>.</li> <li>2. Remove the front floor console rear trim plate. Refer to <a href="#">Front Floor Console Rear Trim Panel Replacement</a>.</li> </ol>	
1	<p>Front Floor Console Filler Screw (Qty: 1)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.</p> <p><b>Tighten</b> 2 N·m (18 lb in)</p>
2	Front Floor Console Filler Panel
3	Retainer Clip (Qty: 4)

# Front Floor Console Rear Compartment Door Replacement

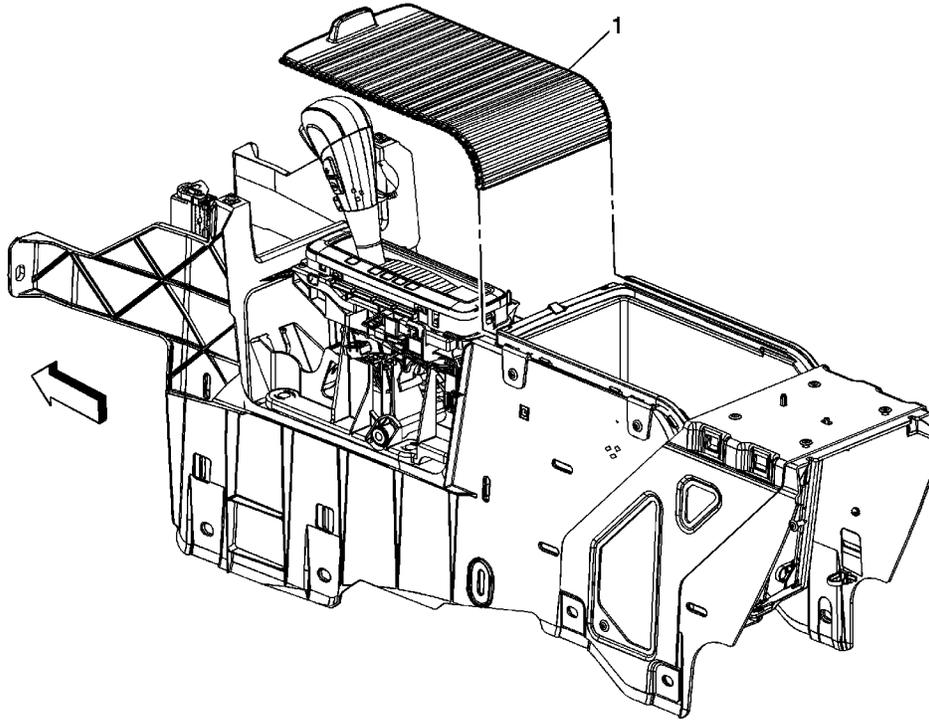


Callout	Component Name
<b>Preliminary Procedure</b>	
Remove the front floor console cover. Refer to <a href="#">Front Floor Console Cover Replacement</a> .	
1	Front Floor Console Compartment Door  <b>Procedure</b>  Slide the compartment door out of the compartment door track.

## Front Floor Console Cover Replacement

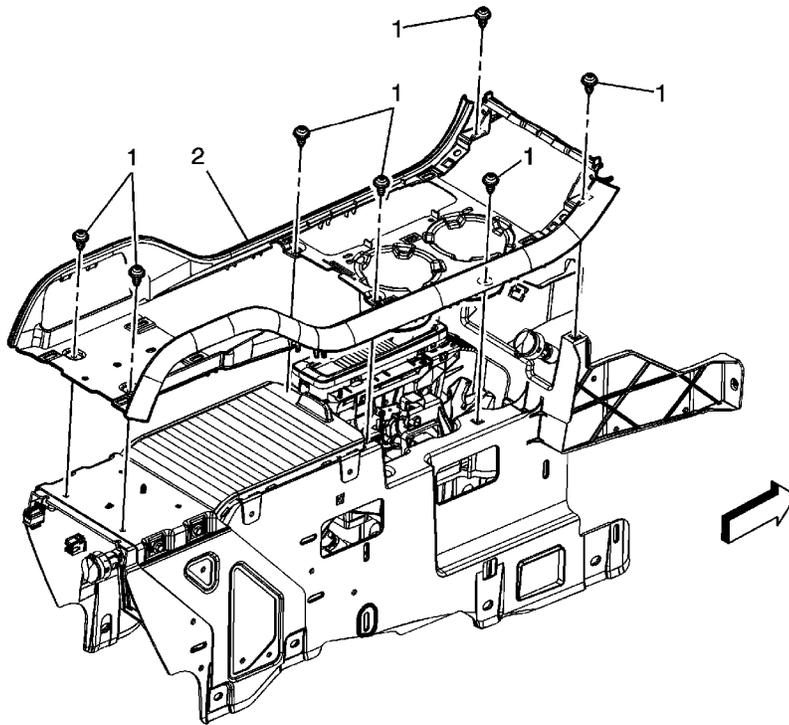


Callout	Component Name
<p><b>Preliminary Procedures</b></p> <ol style="list-style-type: none"> <li>1. Remove the front floor console. Refer to <a href="#">Front Floor Console Replacement</a>.</li> <li>2. Remove the front floor console accessory housing. Refer to <a href="#">Front Floor Console Accessory Housing Replacement</a>.</li> <li>3. Remove the front floor console cover. Refer to <a href="#">Front Floor Rear Console Front Cover Replacement</a>.</li> </ol>	
1	<p>Console Trim Plate Screws (Qty: 7)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.</p> <p><b>Tighten</b> 2 N·m (18 lb in)</p>
2	<p>Console Trim Plate</p>

## Front Floor Console Accessory Trim Plate Applique Replacement

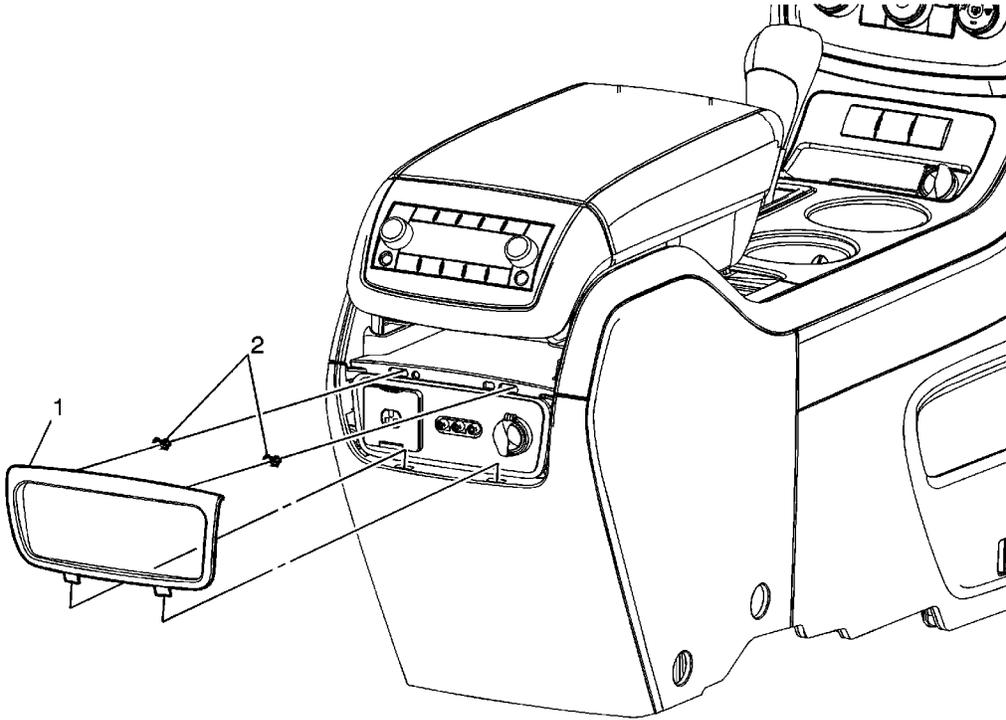


Callout	Component Name
1	Front Floor Console Bezel  <b>Procedure</b>  Use a flat-bladed plastic trim tool in order to release the front floor console bezel from the console assembly.
2	Retainer Clip (Qty: 2)

## Front Floor Console Extension Accessory Upper Bezel Replacement

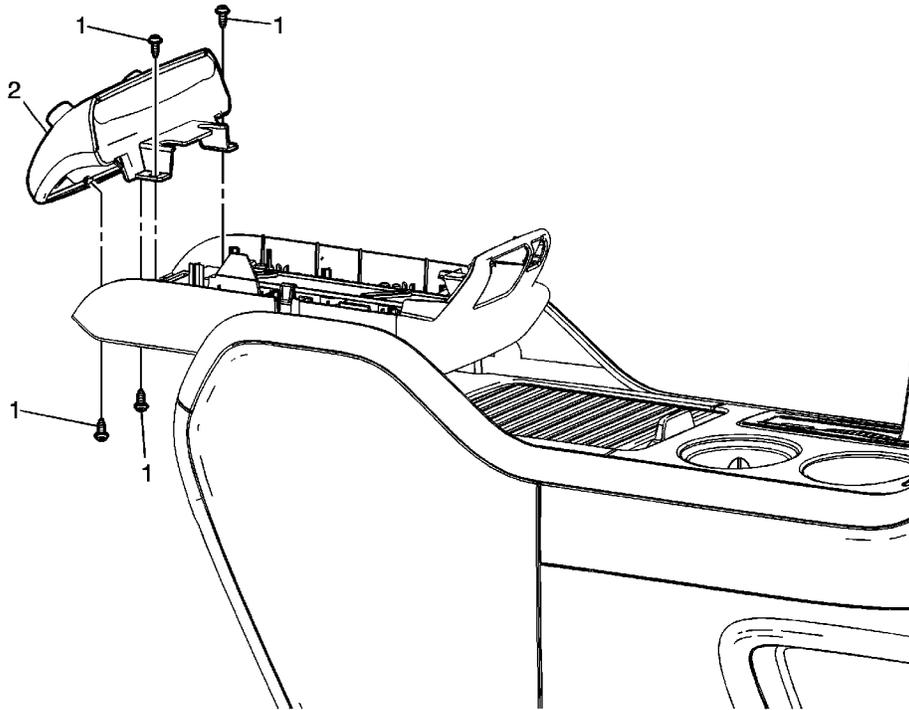


Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>Remove the front floor console armrest bin assembly. Refer to <a href="#">Front Floor Console Armrest Compartment Replacement</a>.</p>	
<p>1</p>	<p>Front Floor Console Extension Accessory Upper Bezel Screw (Qty: 2)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.</p> <p><b>Tighten</b> 2 N·m (18 lb in)</p>
<p>2</p>	<p>Front Floor Console Extension Accessory Upper Bezel</p> <p><b>Procedure</b></p> <p>Disconnect the electrical connections.</p>

## Rear Floor Console Replacement

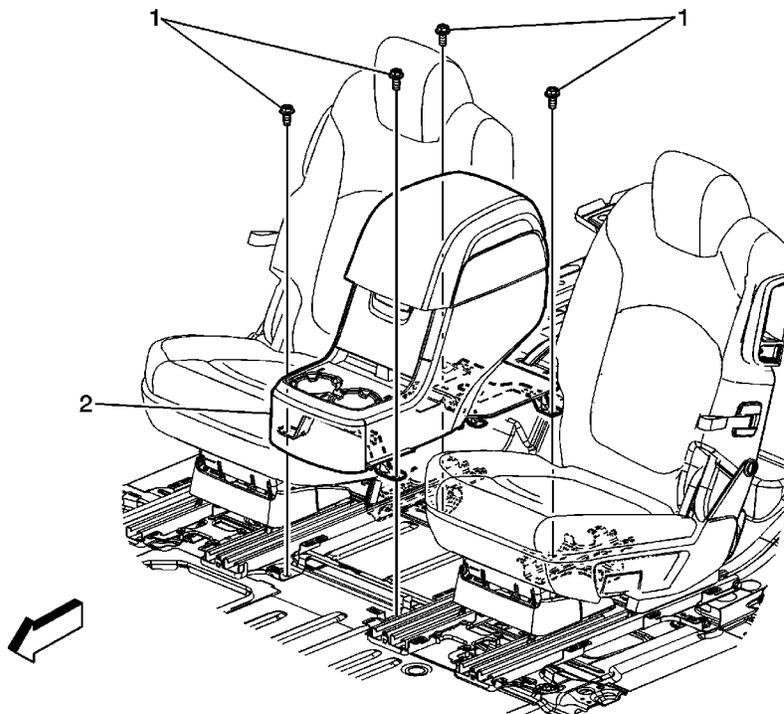


Callout	Component Name
<p><b>Preliminary Procedure</b></p>	
<p>Remove the rear seat track covers. Refer to <a href="#">Rear Seat Track Front Inboard Cover, Front Outboard Cover, Rear Inboard Cover, and Rear Outboard Cover Replacement</a>.</p>	
<p>1</p>	<p>Rear Floor Console Bolt (Qty: 4)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.</p> <p><b>Tighten</b> 45 N·m (33 lb ft)</p>
<p>2</p>	<p>Rear Floor Console Assembly</p> <p><b>Procedure</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the electrical connections.</li> <li>2. When replacing the rear floor console assembly, transfer all necessary components.</li> </ol>

## Front Floor Console Rear Trim Panel Replacement

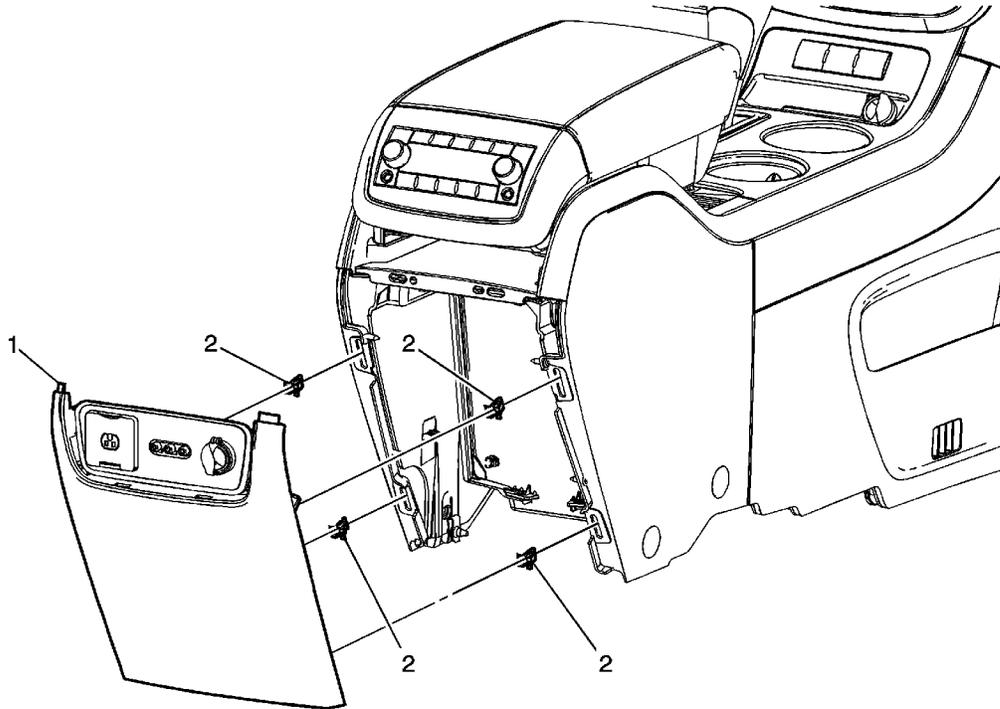


Callout	Component Name
<p><b>Preliminary Procedure</b></p>	
<p>Remove the floor console accessory trim plate applique. Refer to <a href="#">Front Floor Console Accessory Trim Plate Applique Replacement</a>.</p>	
<p>1</p>	<p>Front Floor Console Rear Trim Plate</p> <p><b>Procedure</b></p> <ol style="list-style-type: none"> <li>1. Disconnect the electrical connections.</li> <li>2. When replacing the front floor console rear trim plate, transfer all necessary components.</li> </ol>
<p>2</p>	<p>Retainer Clip (Qty: 4)</p>

## Rear Floor Console Release Latch Replacement

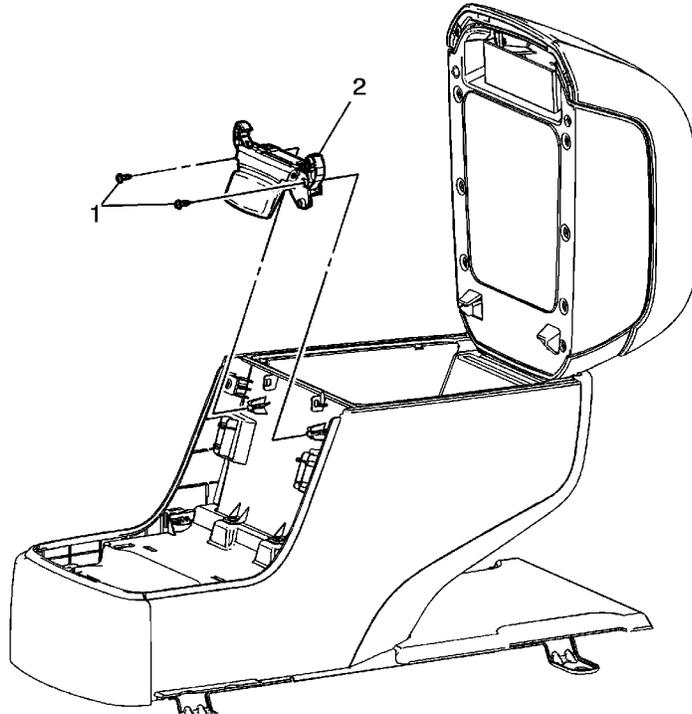


Callout	Component Name
<b>Preliminary Procedure</b>	
Remove the rear floor console front upper trim panel assembly. Refer to <a href="#">Rear Floor Console Front Trim Upper Panel Replacement</a> .	
1	Rear Floor Console Rear Release Latch Screw (Qty: 2)  <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.  <b>Tighten</b> 2.5 N·m (22 lb in)
2	Rear Floor Console Release Latch Assembly

## Rear Floor Console Cover Replacement

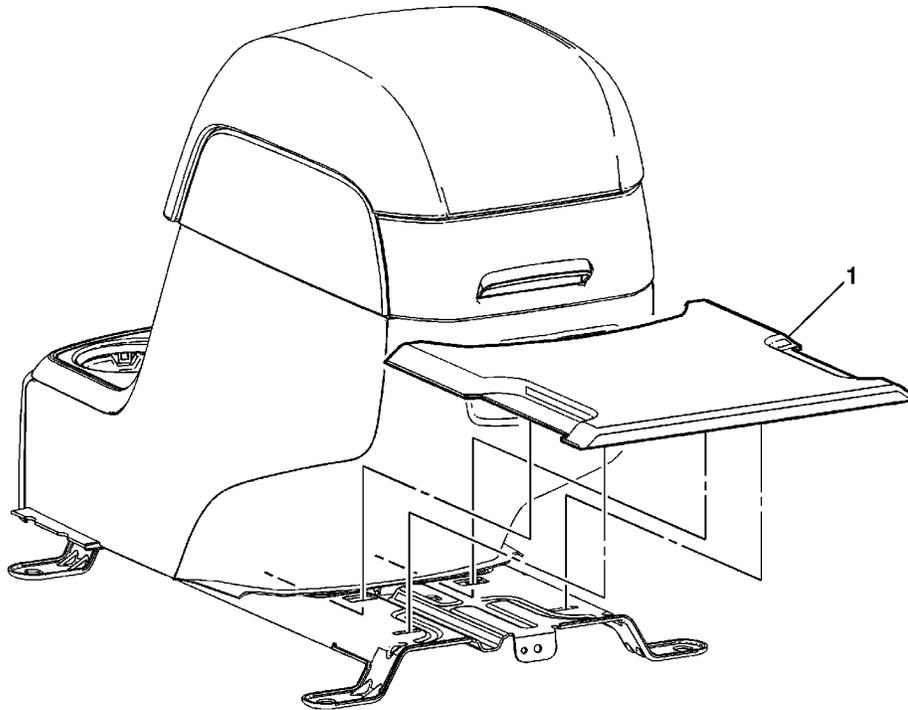


Callout	Component Name
1	Rear Floor Console Cover Assembly  <b>Procedure</b>  Grasp the cover assembly and pull upward and rearward disengaging the clips retaining the cover to the console assembly.

## Rear Floor Console Rear Trim Lower Panel Replacement

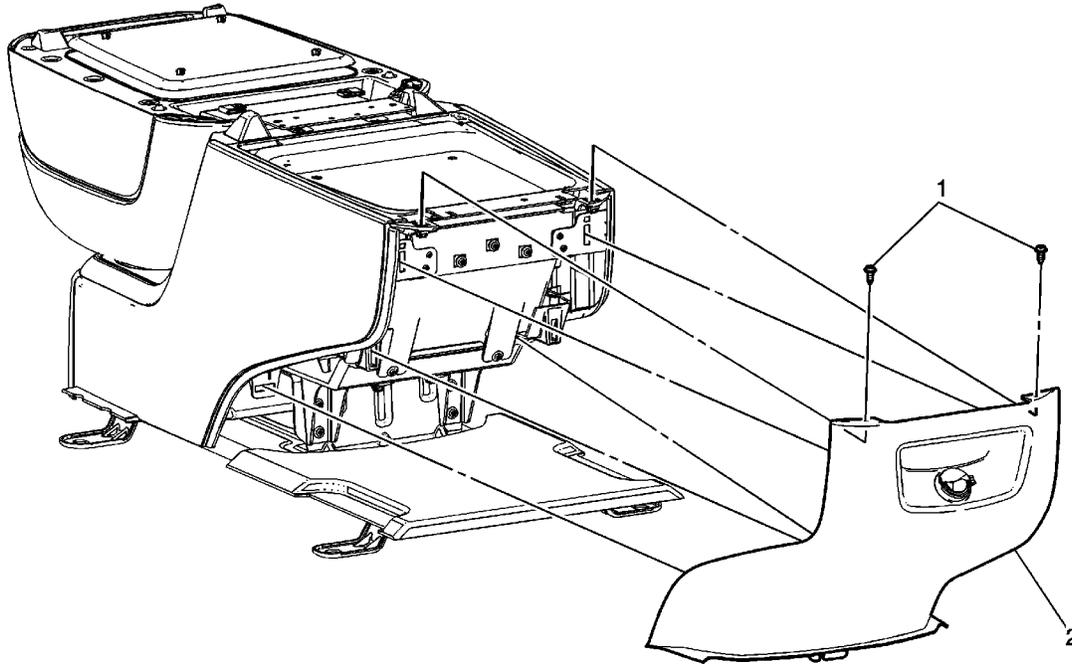


Callout	Component Name
1	Rear Floor Console Rear Trim Cover Lower Panel Screw (Qty: 2)  <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.  <b>Tighten</b> 2.5 N·m (22 lb in)
2	Rear Floor Console Rear Trim Lower Panel Assembly  <b>Procedure</b> <ol style="list-style-type: none"> <li>1. Disconnect the electrical connections.</li> <li>2. When replacing the rear floor console rear trim lower panel assembly, transfer all necessary components.</li> </ol>

## Rear Floor Console Cup Holder Bezel Replacement

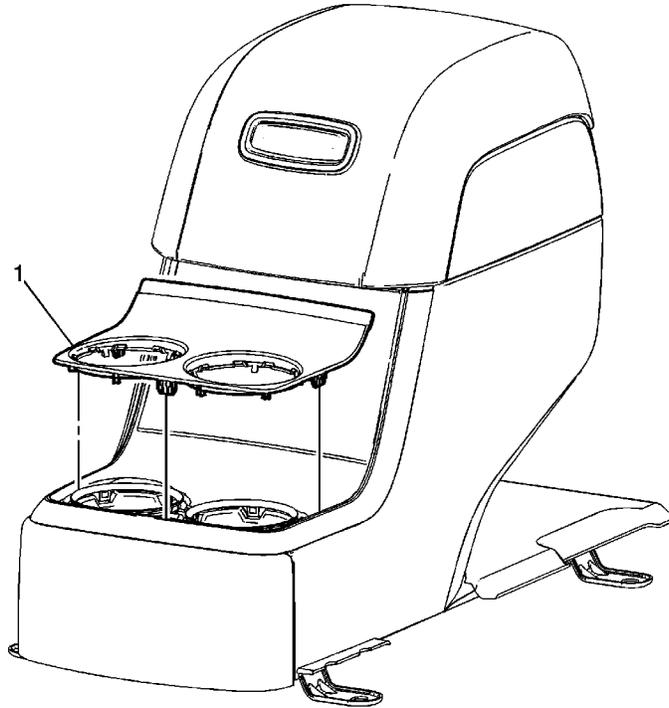


Callout	Component Name
1	Rear Floor Console Cupholder Bezel Assembly  <b>Procedure</b>  Use a flat bladed plastic trim tool in order to release the clips securing the bezel to the console assembly.

## Rear Floor Console Cup Holder Trim Upper Panel Replacement

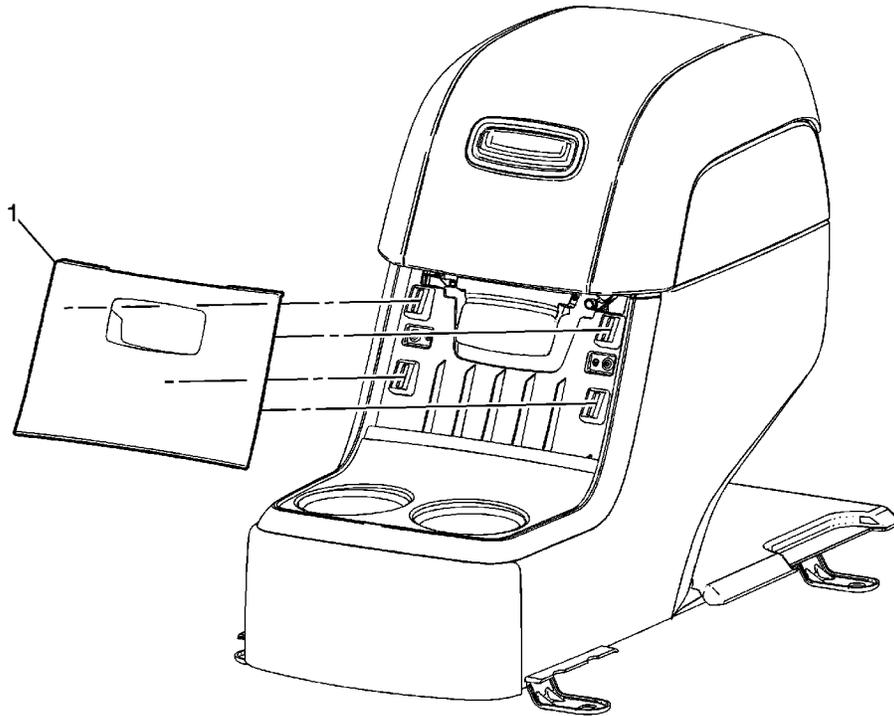


Callout	Component Name
1	<p>Rear Floor Console Cupholder Trim Upper Panel Assembly</p> <p><b>Procedure</b></p> <p>Use a flat bladed plastic trim tool in order to release the clips securing the trim panel to the console assembly.</p>

## Rear Floor Console Front Trim Panel Replacement

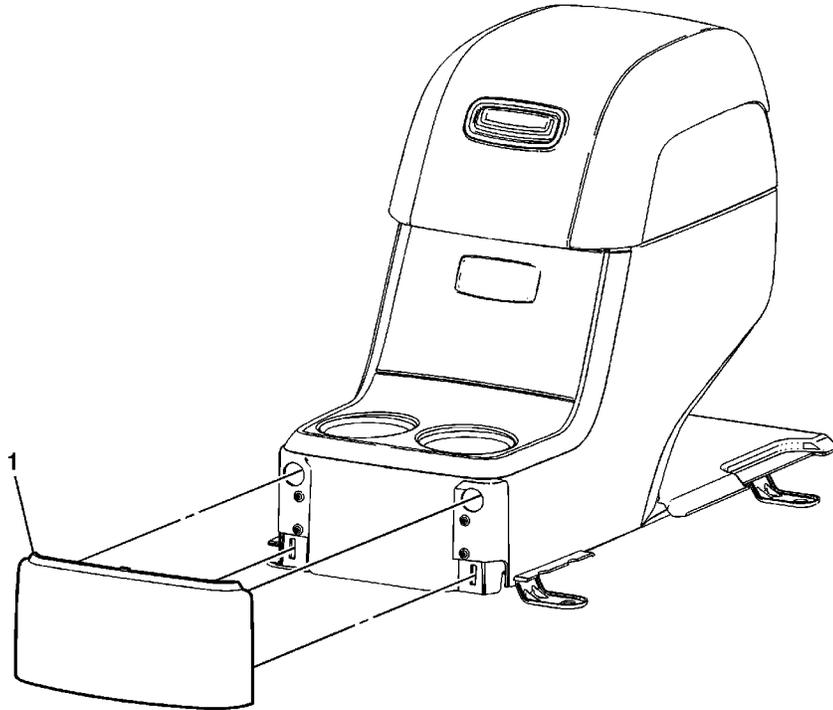

Callout	Component Name
1	Rear Floor Console Front Trim Panel Assembly  <b>Procedure</b>  Use a flat bladed plastic trim tool in order to release the clips securing the trim panel to the console assembly.

## Rear Floor Console Front Trim Upper Panel Replacement

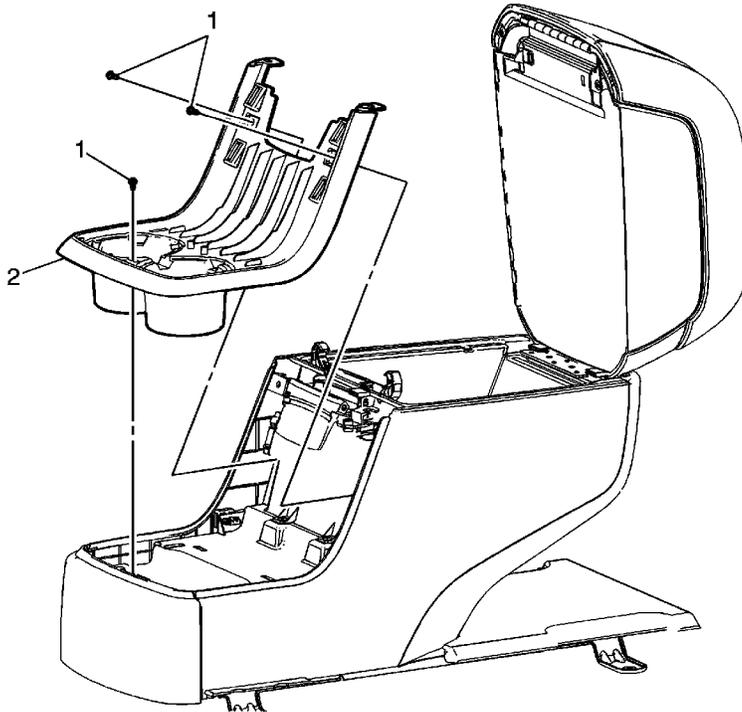


Callout	Component Name
<p><b>Preliminary Procedures</b></p> <ol style="list-style-type: none"> <li>1. Remove the rear floor console cupholder bezel assembly. Refer to <a href="#">Rear Floor Console Cup Holder Bezel Replacement</a>.</li> <li>2. Remove the rear floor console cupholder trim upper panel assembly. Refer to <a href="#">Rear Floor Console Cup Holder Trim Upper Panel Replacement</a>.</li> <li>3. Remove the rear floor console latch cover. Refer to <a href="#">Rear Floor Console Latch Cover Replacement</a>.</li> </ol>	
1	<p>Rear Floor Console Front Trim Upper Panel Screw (Qty: 3)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.</p> <p><b>Tighten</b> 2.5 N·m (22 lb in)</p>
2	<p>Rear Floor Console Front Trim Upper Panel Assembly</p> <p><b>Procedure</b></p>

© 2010 General Motors Corporation. All rights reserved.


Use a flat-bladed plastic trim tool in order to release the clips securing the trim panel to the console assembly.

## Rear Floor Console Latch Cover Replacement

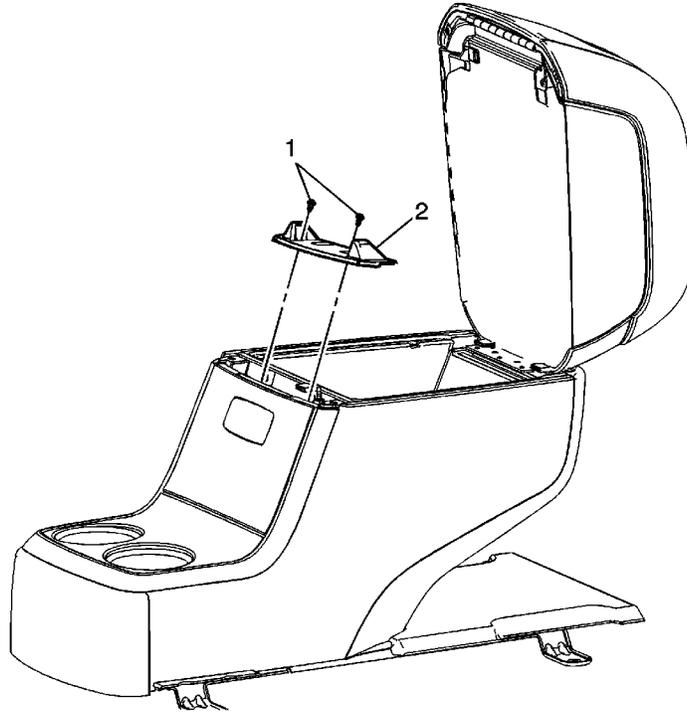


Callout	Component Name
1	Rear Floor Console Latch Cover Screw (Qty: 2) <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section. <b>Tighten</b> 2.5 N·m (22 lb in)
2	Rear Floor Console Latch Cover

## Rear Floor Console Rear Release Latch Replacement

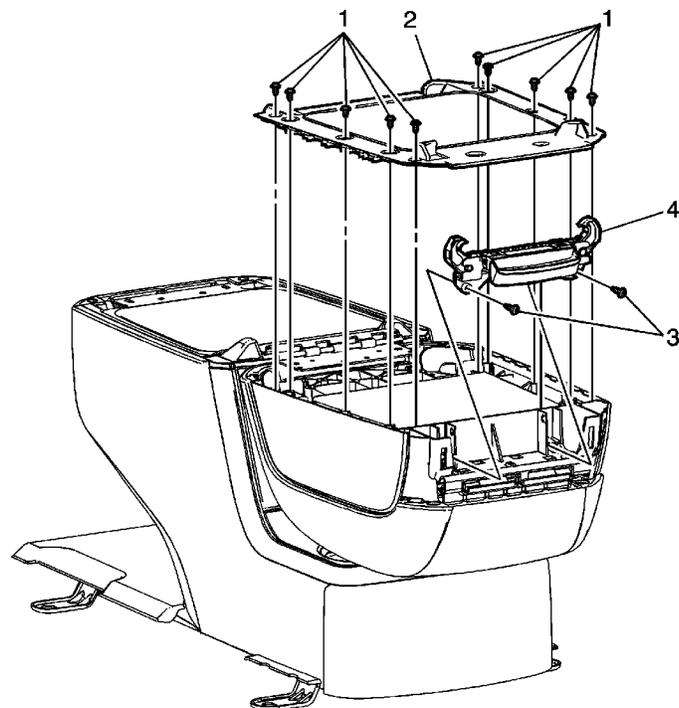

Callout	Component Name
1	Rear Floor Console Lid Trim Cover Screw (Qty: 14) <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section. <b>Tighten</b> 2.5 N·m (22 lb in)
2	Rear Floor Console Lid Trim Cover
3	Rear Floor Console Lid Latch Screw (Qty: 2) <b>Tighten</b> 2.5 N·m (22 lb in)
4	Rear Floor Console Lid Latch Assembly

# Rear Floor Console Side Trim Panel Replacement - Right Side

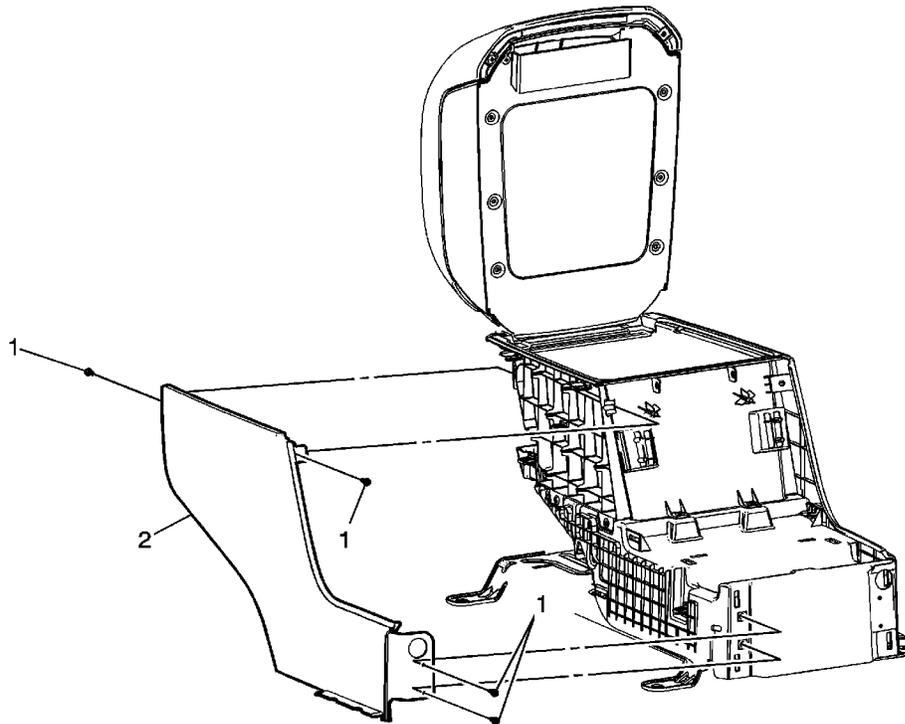


Callout	Component Name
<p><b>Preliminary Procedures</b></p> <ol style="list-style-type: none"> <li>1. Remove the rear floor console rear trim lower panel Assembly. Refer to <a href="#">Rear Floor Console Rear Trim Lower Panel Replacement</a>.</li> <li>2. Remove the rear floor console front trim panel assembly - Lower. Refer to <a href="#">Rear Floor Console Front Trim Panel Replacement</a>.</li> <li>3. Remove the rear floor console front trim upper panel assembly. Refer to <a href="#">Rear Floor Console Front Trim Upper Panel Replacement</a>.</li> </ol>	
1	<p>Rear Floor Console Side Trim Panel Screw (Qty: 4)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.</p> <p><b>Tighten</b> 2.5 N·m (22 lb in)</p>
2	<p>Rear Floor Console Side Trim Panel Assembly</p> <p><b>Procedure</b></p>

© 2010 General Motors Corporation. All rights reserved.

Grasp the trim panel and pull outward in order to release the clips securing the side trim panel to the console assembly.

## Rear Floor Console Side Trim Panel Replacement - Left Side

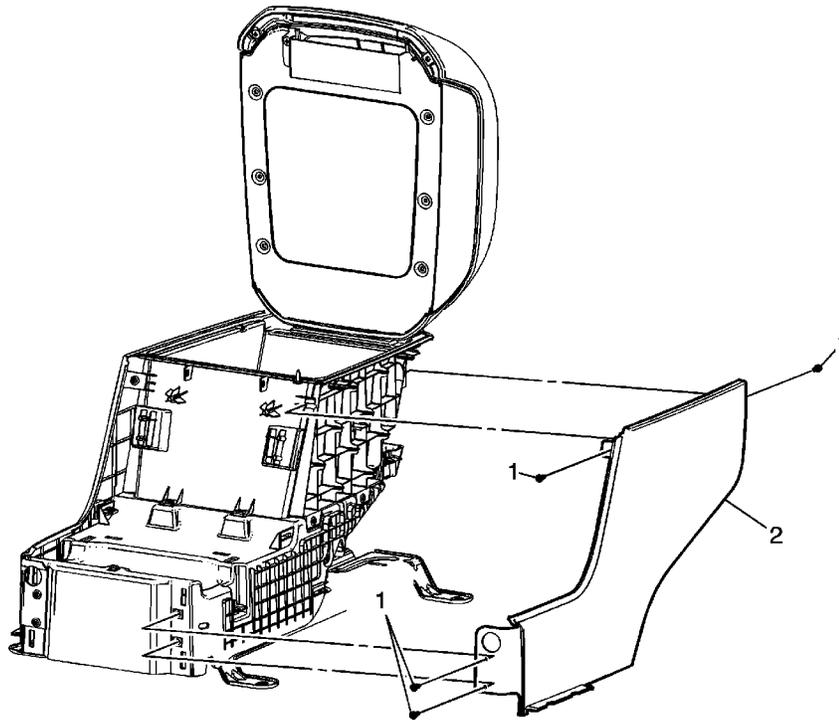


Callout	Component Name
<p><b>Preliminary Procedures</b></p> <ol style="list-style-type: none"> <li>1. Remove the rear floor console rear trim lower panel Assembly. Refer to <a href="#">Rear Floor Console Rear Trim Lower Panel Replacement</a>.</li> <li>2. Remove the rear floor console front trim panel assembly - Lower. Refer to <a href="#">Rear Floor Console Front Trim Panel Replacement</a>.</li> <li>3. Remove the rear floor console front trim upper panel assembly. Refer to <a href="#">Rear Floor Console Front Trim Upper Panel Replacement</a>.</li> </ol>	
1	<p>Rear Floor Console Side Trim Panel Screw (Qty: 4)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.</p> <p><b>Tighten</b> 2.5 N·m (22 lb in)</p>
2	<p>Rear Floor Console Side Trim Panel Assembly</p> <p><b>Procedure</b></p>

© 2010 General Motors Corporation. All rights reserved.


Grasp the trim panel and pull outward in order to release the clips securing the side trim panel to the console assembly.

## Rear Floor Console Armrest Replacement

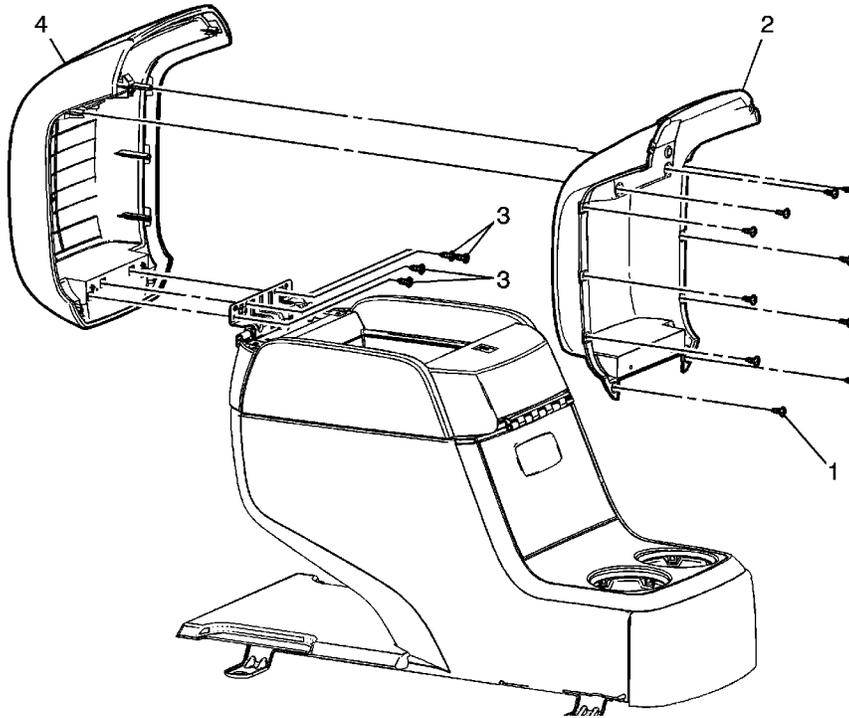


Callout	Component Name
1	Rear Floor Console Hinge Cover Closeout Screw (Qty: 12) <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section. <b>Tighten</b> 2.5 N·m (22 lb in)
2	Rear Floor Console Hinge Cover Closeout Panel
3	Rear Floor Console Armrest Hinge Screw (Qty: 4) <b>Tighten</b> 2.5 N·m (22 lb in)
4	Rear Floor Console Armrest Assembly <b>Procedure</b> When replacing the rear floor console armrest assembly, transfer all necessary components.

## Rear Floor Console Armrest Latch Replacement

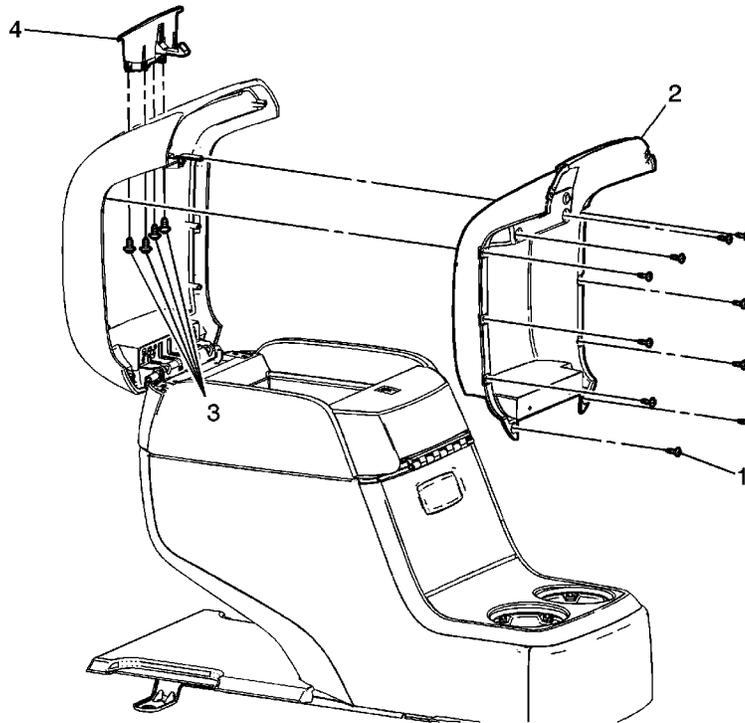


Callout	Component Name
1	Rear Floor Console Hinge Cover Closeout Screw (Qty: 12) <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section. <b>Tighten</b> 2.5 N·m (22 lb in)
2	Rear Floor Console Hinge Cover Closeout Panel
3	Rear Floor Console Armrest Latch Screw (Qty: 4) <b>Tighten</b> 2.5 N·m (22 lb in)
4	Rear Floor Console Armrest Latch Assembly

## Rear Floor Console Rear Trim Upper Panel Replacement

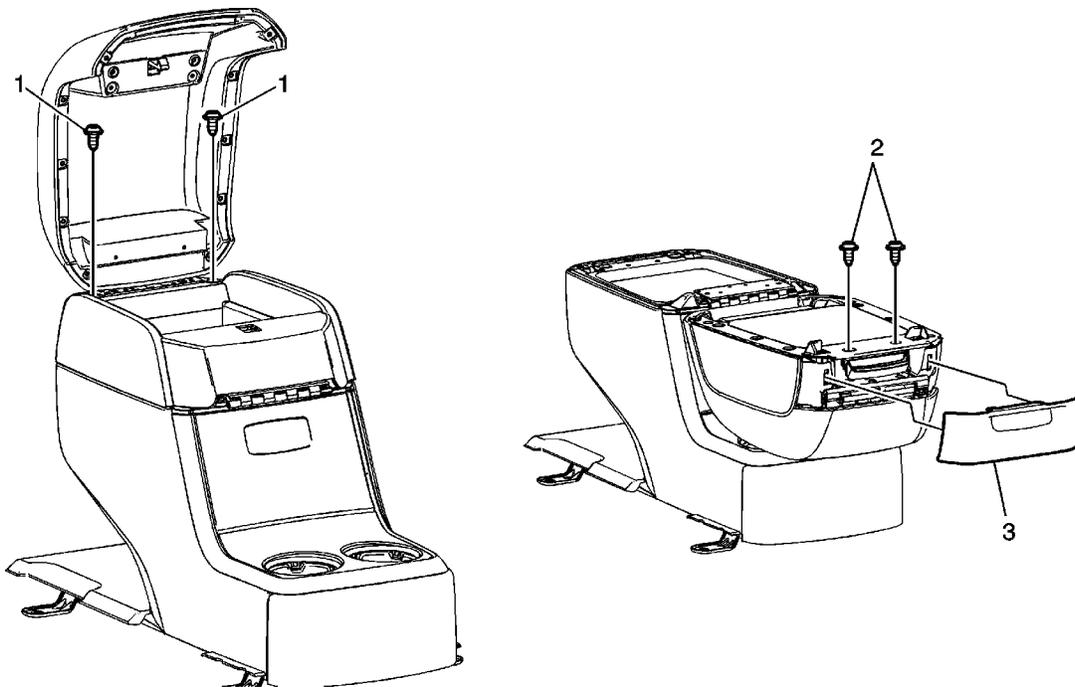

Callout	Component Name
1	Rear Floor Console Rear Trim Upper Panel Screw (Qty: 2) <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section. <b>Tighten</b> 2.5 N·m (22 lb in)
2	Rear Floor Console Rear Trim Upper Panel Screw (Qty: 2) <b>Tighten</b> 2.5 N·m (22 lb in)
3	Rear Floor Console Rear Trim Upper Panel Assembly <b>Procedure</b> Use a flat-bladed plastic trim tool in order to release the clips securing the trim panel to the console assembly.

## Rear Floor Console Storage Lower Tray Replacement

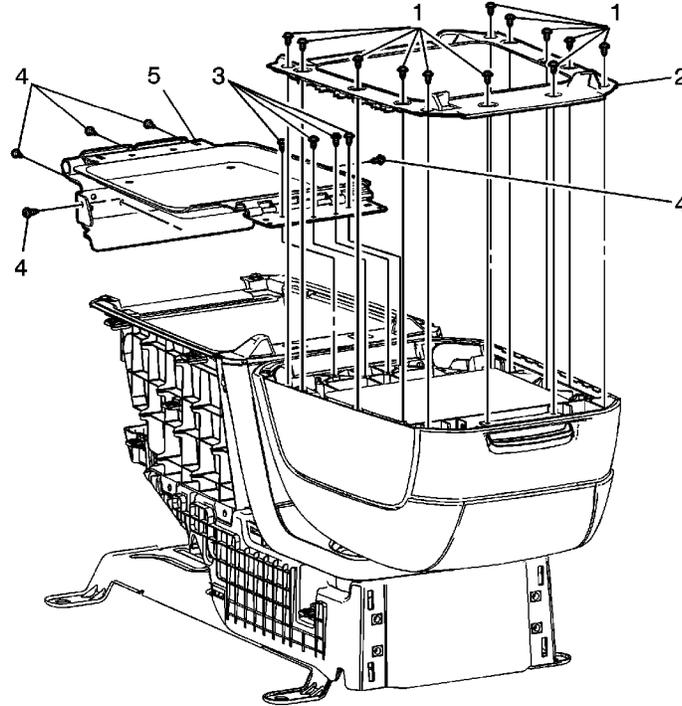


Callout	Component Name
<p><b>Preliminary Procedures</b></p> <ol style="list-style-type: none"> <li>1. Remove the rear floor console right side trim panel. Refer to <a href="#">Rear Floor Console Side Trim Panel Replacement - Right Side</a>.</li> <li>2. Remove the rear floor console left side trim panel. Refer to <a href="#">Rear Floor Console Side Trim Panel Replacement - Left Side</a>.</li> </ol>	
1	Rear Floor Console Lid Trim Cover Screw (Qty: 14) <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section. <b>Tighten</b> 2.5 N·m (22 lb in)
2	Rear Floor Console Lid Trim Cover
3	Rear Floor Console Storage Lower Tray Screw (Qty: 4) <b>Tighten</b> 2.5 N·m (22 lb in)
	Rear Floor Console Storage Lower Tray Screw (Qty: 4)

© 2010 General Motors Corporation. All rights reserved.


4	<b>Tighten</b> 2.5 N·m (22 lb in)
5	Rear Floor Console Storage Lower Tray Assembly

## Front Floor Console Armrest Latch Replacement

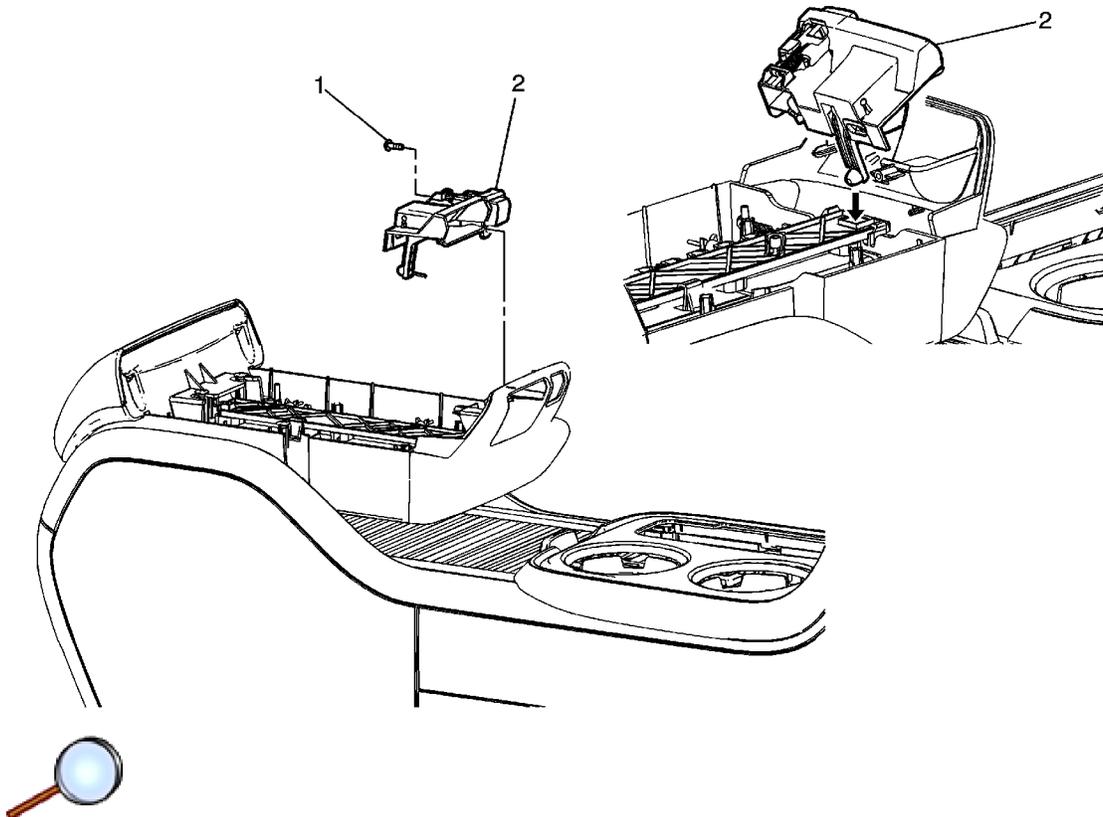


Callout	Component Name
<b>Preliminary Procedure</b>	
Remove the front floor console armrest compartment. Refer to <a href="#">Front Floor Console Armrest Compartment Replacement</a> .	
1	Front Floor Console Armrest Latch Screw (Qty: 1) <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section. <b>Tighten</b> 2.5N·m(22 lb in)
2	Front Floor Console Armrest Latch Assembly <b>Procedure</b> Ensure the rubber bumper on the end of the front floor console armrest latch is fully seated into the opening in the armrest assembly.

## Front Floor Console Outer Armrest Replacement

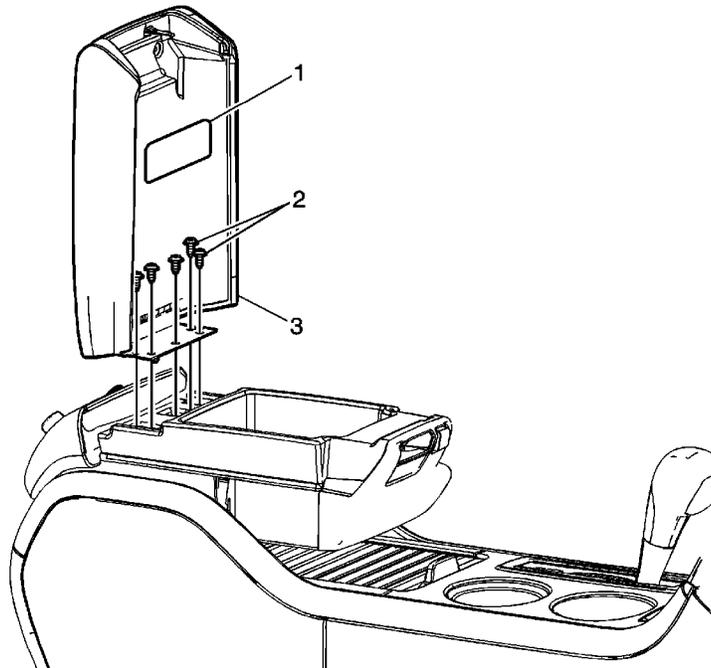


Callout	Component Name
1	Front Floor Console Armrest Screw Cover
2	Front Floor Console Armrest Screw (Qty: 4)  <b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.  <b>Tighten</b> 2 N·m (18 lb in)
3	Front Floor Console Armrest Assembly

## Front Floor Console Armrest with Support Replacement

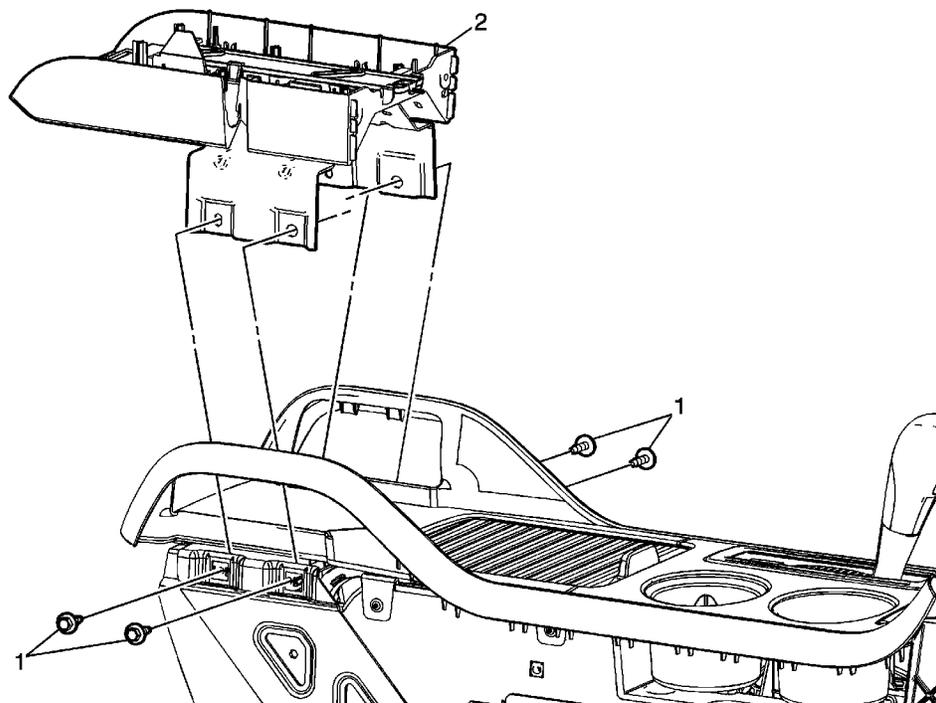


Callout	Component Name
<p><b>Preliminary Procedures</b></p> <ol style="list-style-type: none"> <li>1. Remove the front floor console filler. Refer to <a href="#">Front Floor Console Filler Replacement</a>.</li> <li>2. Remove the front floor console extension accessory upper bezel. Refer to <a href="#">Front Floor Console Extension Accessory Upper Bezel Replacement</a>.</li> </ol>	
<p>1</p>	<p>Front Floor Console Armrest Assembly with Supports Bolt (Qty: 4)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.</p> <p><b>Tighten</b> 9 N·m (80 lb in)</p>
<p>2</p>	<p>Front Floor Console Armrest Assembly with Supports</p>

## Front Floor Console Armrest Compartment Replacement

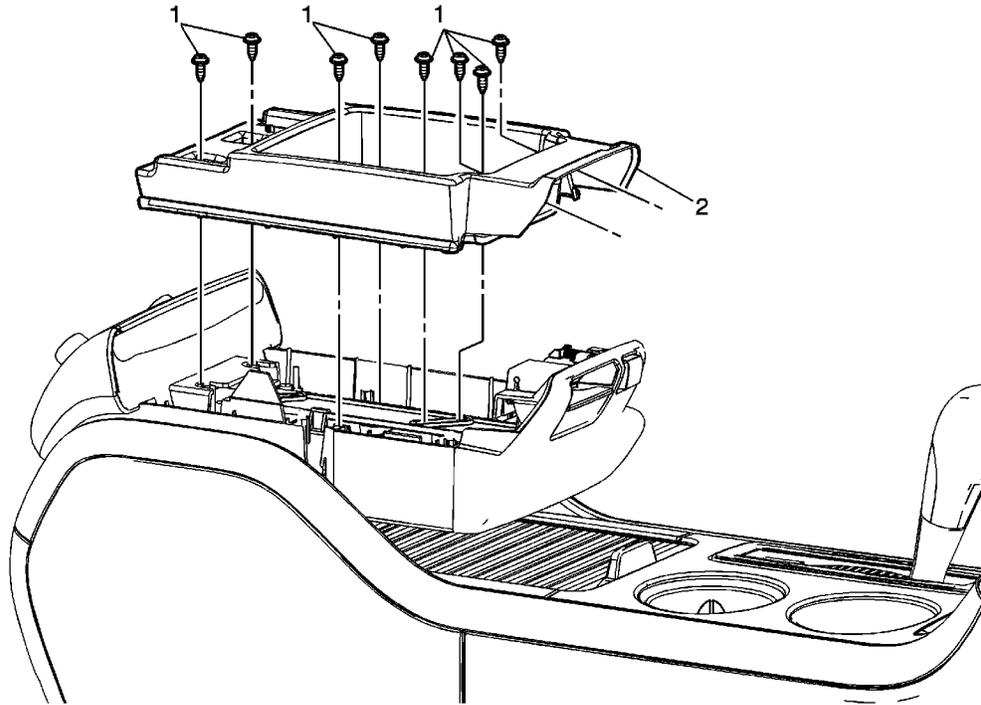

Callout	Component Name
<p><b>Preliminary Procedure</b></p> <p>Remove the front floor console armrest assembly. Refer to <a href="#">Front Floor Console Outer Armrest Replacement</a>.</p>	
<p>1</p>	<p>Front Floor Console Armrest Bin Screw (Qty: 6)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.</p> <p><b>Tighten</b> 2 N·m (18 lb in)</p>
<p>2</p>	<p>Front Floor Console Armrest Bin Assembly</p>


## Front Floor Rear Console Front Cover Replacement

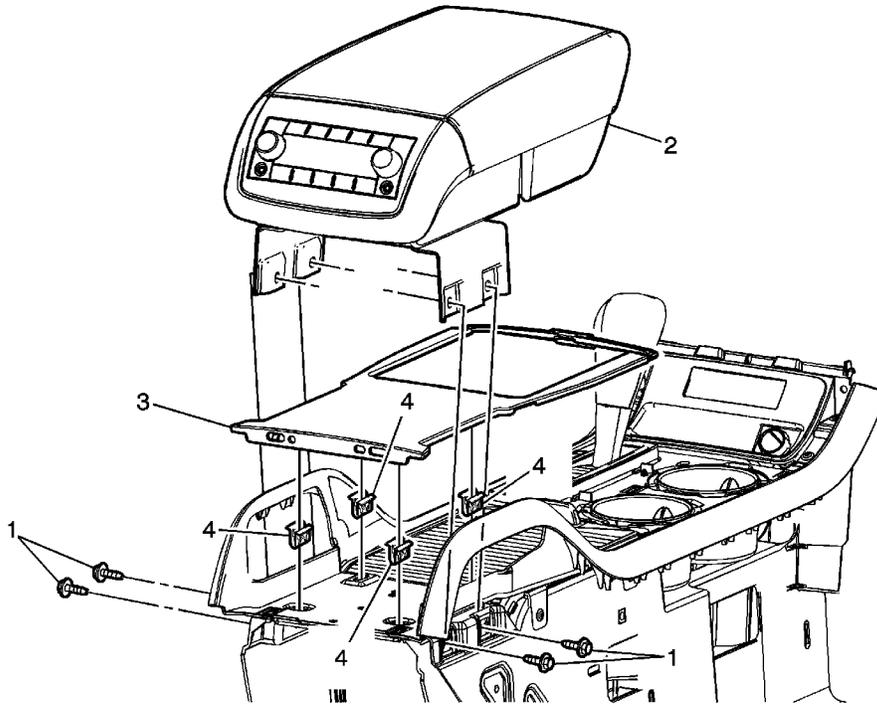

Callout	Component Name
<p><b>Preliminary Procedures</b></p> <ol style="list-style-type: none"> <li>1. Remove the front floor console accessory trim plate. Refer to <a href="#">Front Floor Console Accessory Trim Plate Replacement</a>.</li> <li>2. Remove the right and left front floor console fillers. Refer to <a href="#">Front Floor Console Filler Replacement</a>.</li> </ol>	
1	<p>Front Floor Console Armrest Assembly Bolt (Qty: 4)</p> <p><b>Caution:</b> Refer to <a href="#">Fastener Caution</a> in the Preface section.</p> <p><b>Tighten</b> 9 N·m (80 lb in)</p>
2	<p>Front Floor Console Armrest Assembly</p> <p><b>Procedure</b></p> <p>Position the armrest assembly out of the way leaving the electrical harness attached.</p>
<p>Front Floor Upper Console Trim Plate</p> <p>© 2010 General Motors Corporation. All rights reserved.</p>	


3	<b>Procedure</b> Lift the rear of the trim plate first, releasing the retainers securing the trip plate to the console assembly.
4	Retainer Clips (Qty: 4)

## Roof Console Replacement

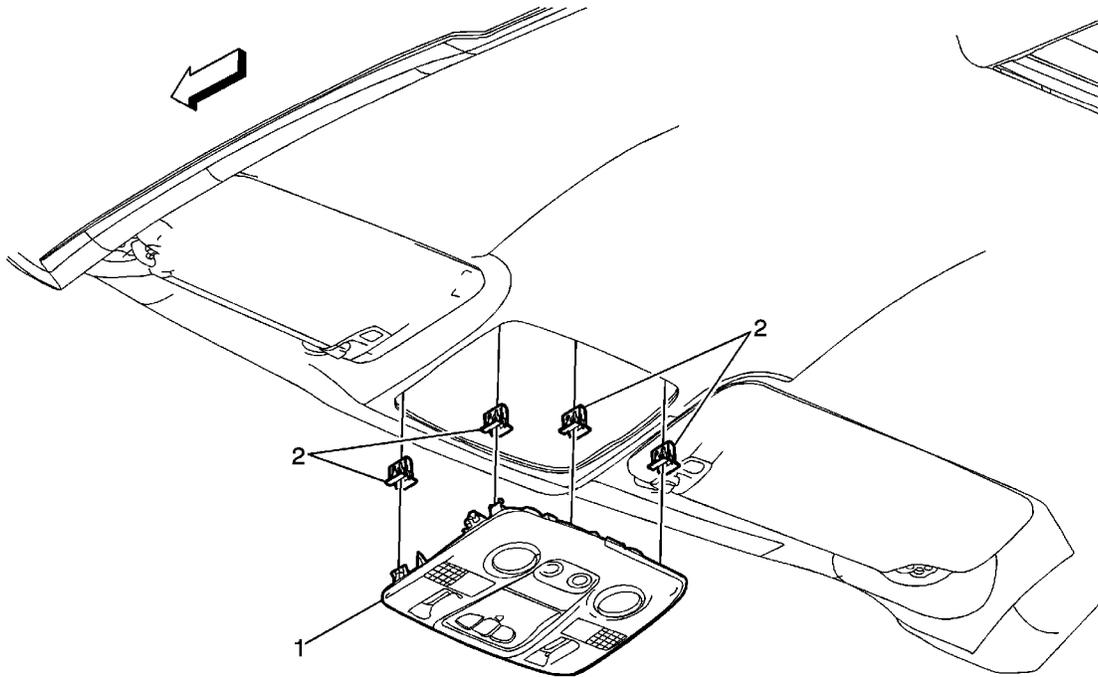

Callout	Component Name
1	Roof Console Assembly  <b>Procedure</b>  1. Use a flat-bladed tool on the bezel to release the tabs and gently pull down to remove the roof console. 2. Disconnect the electrical connectors. 3. If replacing the roof console assembly, transfer all necessary components. 4. Uplevel console shown, all others similar and are removed in the same manner.
2	Roof Console Retainer (Qty: 6)

## Roof Rear Console Replacement

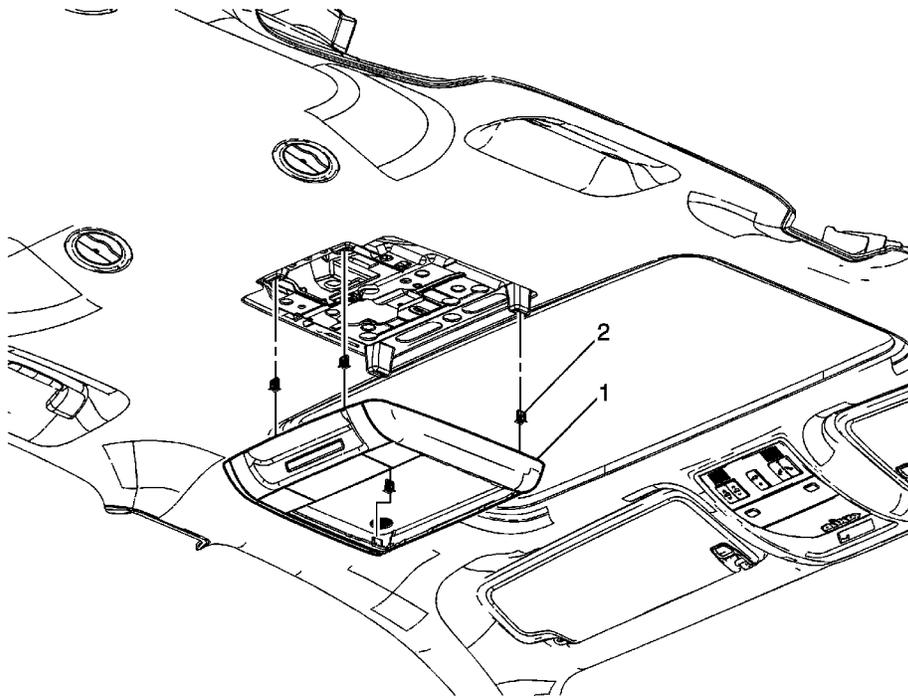

Callout	Component Name
<b>Preliminary Procedure</b>	
Remove the video display assembly. Refer to <a href="#">Video Display Replacement</a> .	
1	Roof Console Assembly  <b>Procedure</b> <ol style="list-style-type: none"> <li>1. Pull down to disengage the retainer clips.</li> <li>2. Disconnect the electrical connectors.</li> <li>3. If replacing the rear roof console, transfer all necessary components.</li> </ol>
2	Roof Console Retainer (Qty: 4)