



Coat Hook Replacement (Enclave or Traverse)

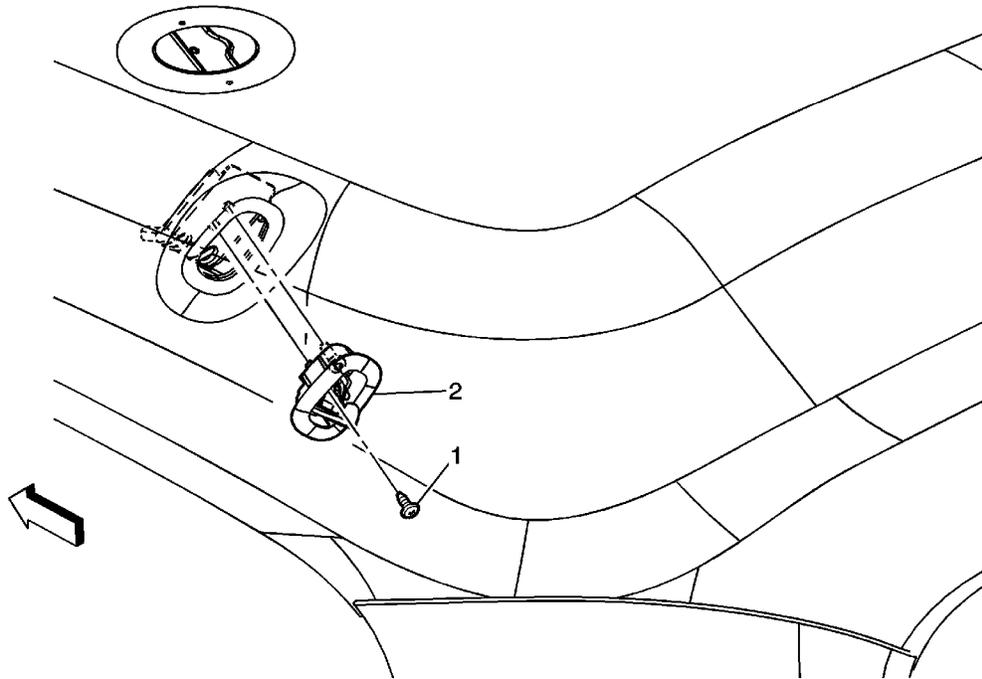

Callout	Component Name
1	Coat Hook Fastener Caution: Refer to Fastener Caution in the Preface section. Tighten 6 N·m (53 lb in)
2	Coat Hook Assembly Procedure Flip the integral hook downward to access the fastener.

Front Side Door Trim Panel Replacement - Left Side (Enclave)

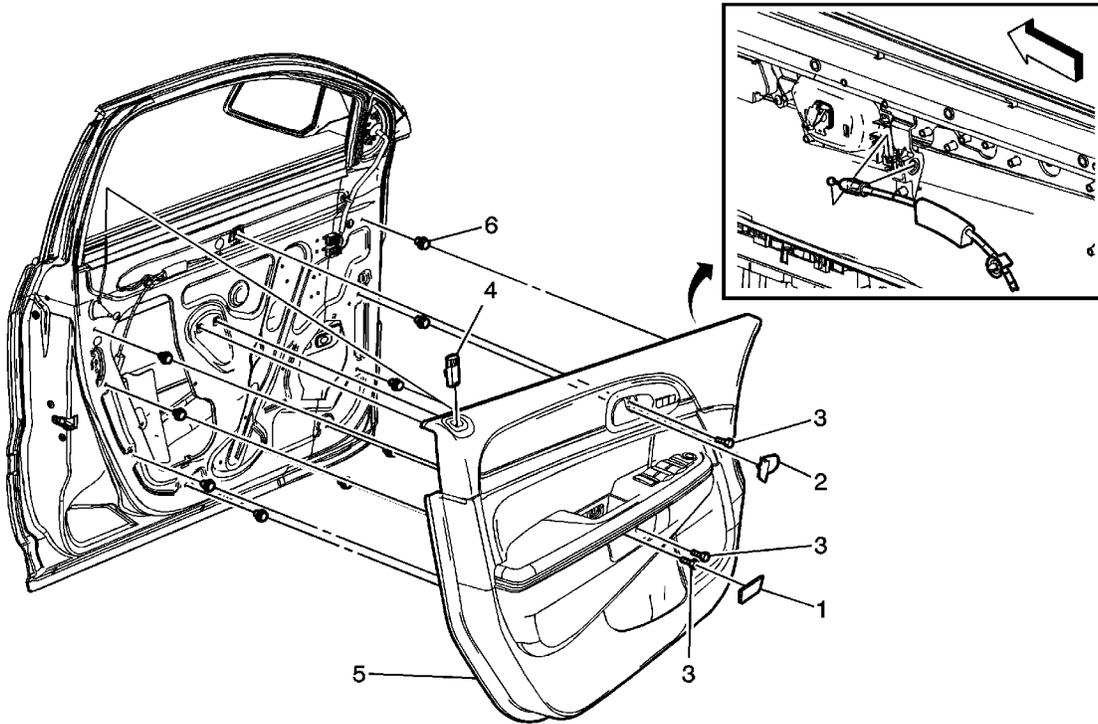


Callout	Component Name
1	Front Side Door Pull Handle Cover
2	Front Side Door Inside Handle Bezel Finish Cover
3	Front Side Door Trim Panel Bolt (Qty: 3) Caution: Refer to Fastener Caution in the Preface section. Tighten 6 N·m (18 lb in)
4	Front Side Door Locking Rod Knob Assembly Procedure <ol style="list-style-type: none"> 1. Ensure the locking rod is in the unlocked position. 2. Use a flat-bladed tool to disengage the detent tab and then remove the knob by pulling upward. 3. When re-installing, push the knob down until the detent tab touches the locking rod opening cover. 4. Push the detent tab into the lock knob to locking rod.

© 2010 General Motors Corporation. All rights reserved.

5	<p>Front Side Door Trim Panel Assembly</p> <p>Procedure</p> <ol style="list-style-type: none">1. Use a door trim pad removal tool, or equivalent, at each of the 9 retainer locations to aid in the removal of the trim panel.2. Disengage the door lock cable.3. Disconnect the electrical connector.
6	Front Side Door Trim Panel Retainer (Qty: 9)

Front Side Door Trim Panel Replacement - Right Side (Enclave)

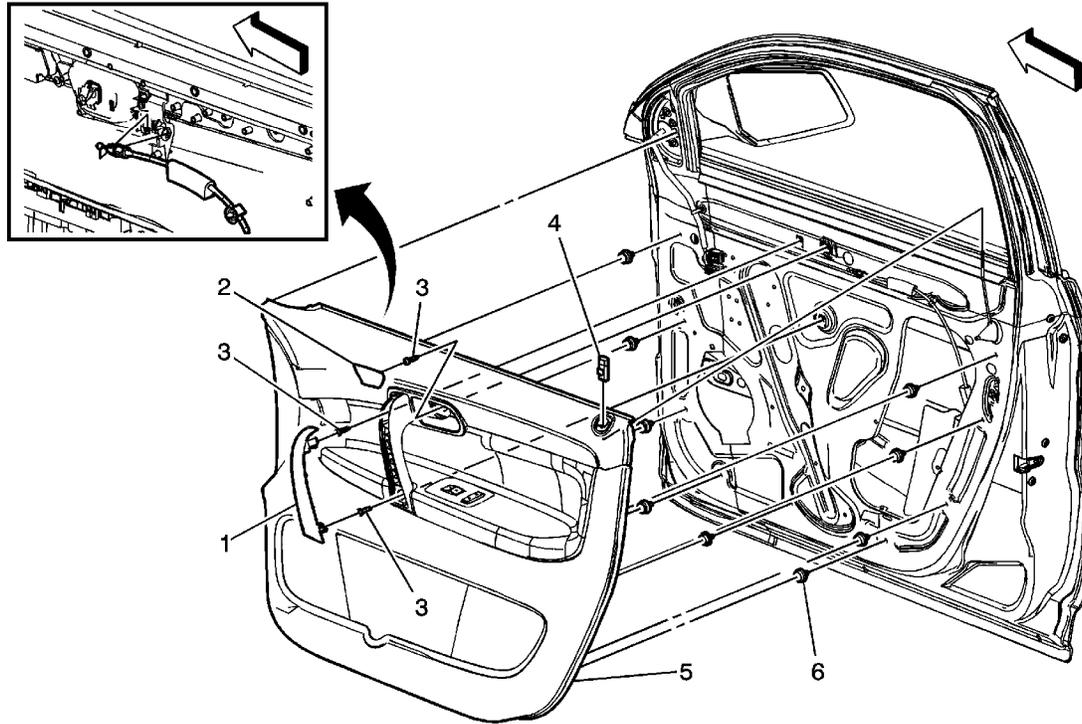


Callout	Component Name
1	Front Side Door Pull Handle Cover
2	Front Side Door Inside Handle Bezel Finish Cover Tip Install the top portion of the pull handle cover first to ensure tabs are lined up and push the cover in firmly.
3	Front Side Door Trim Panel Bolt (Qty: 3) Caution: Refer to Fastener Caution in the Preface section. Tighten 6 N·m (18 lb in)
4	Front Side Door Locking Rod Knob Assembly Procedure 1. Ensure the locking rod is in the unlocked position. 2. Use a flat-bladed tool to disengage the detent tab and then remove the knob

© 2010 General Motors Corporation. All rights reserved.


	<p>by pulling upward.</p> <ol style="list-style-type: none">When re-installing, push the knob down until the detent tab touches the locking rod opening cover.Push the detent tab into the lock knob to locking rod.
5	<p>Front Side Door Trim Panel Assembly</p> <p>Procedure</p> <ol style="list-style-type: none">Use a door trim pad removal tool, or equivalent, at each of the 9 retainer locations to aid in the removal of the trim panel.Disengage the door lock cable.Disconnect the electrical connector.
6	Front Side Door Trim Panel Retainer (Qty: 9)

Front Side Door Garnish Molding Replacement (Enclave)

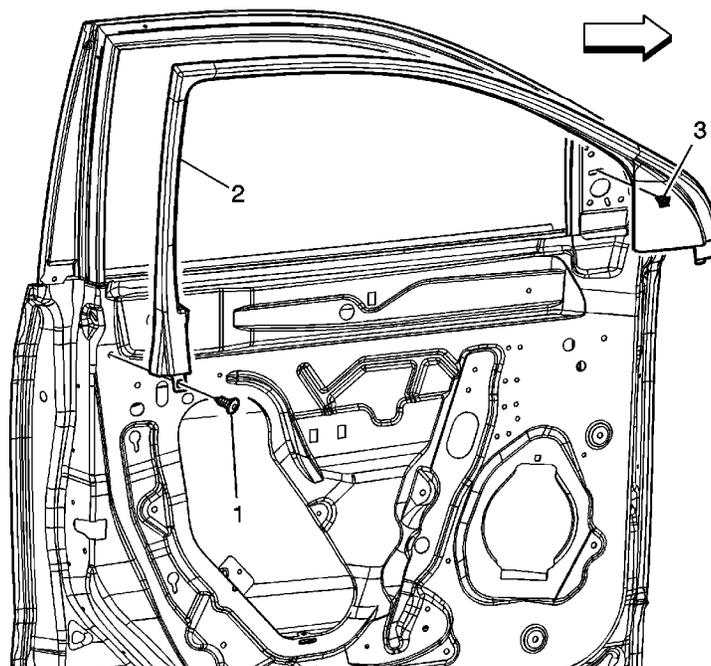


Callout	Component Name
Preliminary Procedure Remove the front side door trim panel. Refer to Front Side Door Trim Panel Replacement - Left Side or Front Side Door Trim Panel Replacement - Right Side .	
1	Front Side Door Garnish Molding Retainer Tip Use a door trim panel removal tool or equivalent to aid in the removal of the retainer.
2	Front Side Door Garnish Molding Tip Pull outward starting at the front and moving slowly rearward to remove the molding.
3	Front Side Door Garnish Molding Retainer Clip

Rear Side Door Trim Panel Replacement (Enclave)

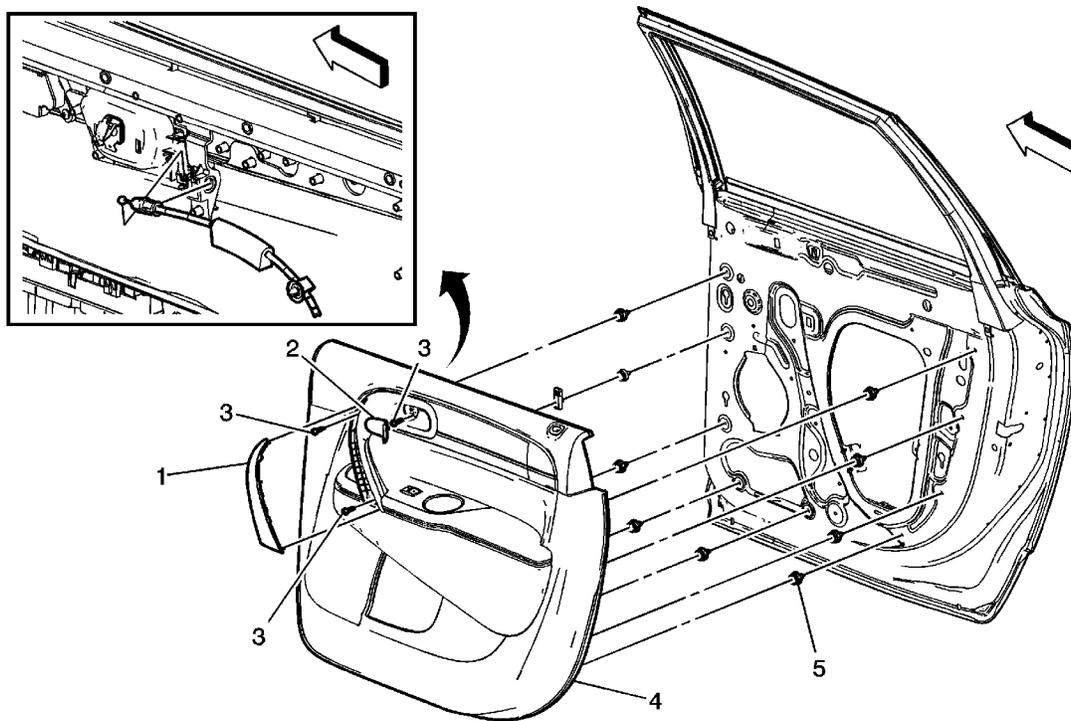


Callout	Component Name
1	Rear Side Door Pull Handle Cover
2	Rear Side Door Inside Handle Bezel Finish Cover
3	Rear Side Door Trim Panel Screw (Qty: 3) Caution: Refer to Fastener Caution in the Preface section. Tighten 6 N·m (18 lb in)
4	Rear Side Door Trim Panel Assembly Procedure 1. Use a door trim pad removal tool, or equivalent, at each of the 9 retainer locations to aid in the removal of the trim panel. 2. Disengage the door lock cable. 3. Disconnect the electrical connector.
5	Rear Side Door Trim Panel Retainer (Qty: 9)

Rear Side Door Garnish Molding Replacement (Enclave)

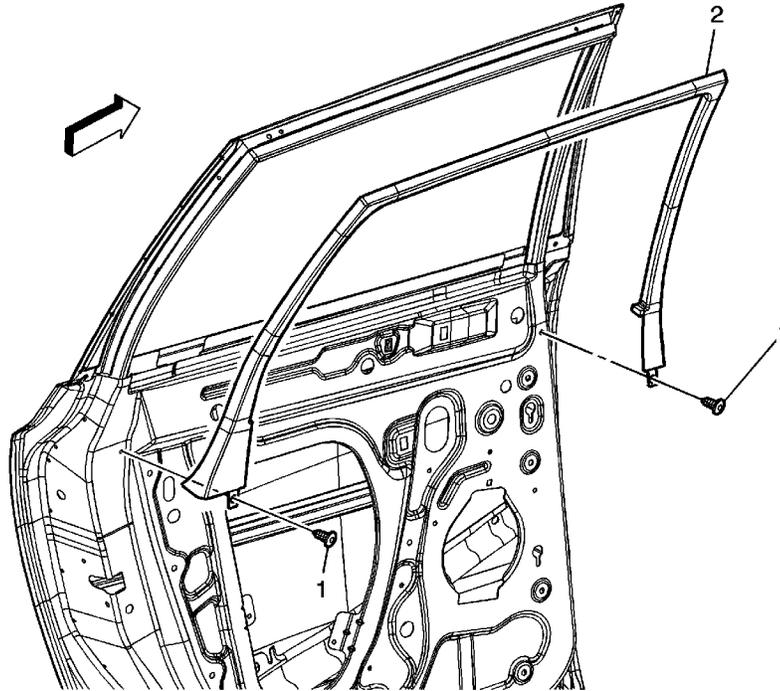


Callout	Component Name
Preliminary Procedure	
Remove the rear side door trim panel. Refer to Rear Side Door Trim Panel Replacement .	
1	Rear Side Door Upper Garnish Molding Retainer (Qty: 2) Tip Use a door trim panel removal tool or equivalent to aid in the removal of the retainer.
2	Rear Side Door Upper Garnish Molding Tip Pull outward starting at the front and moving slowly rearward to remove the molding.

Liftgate Door Sill Plate Replacement (Enclave)

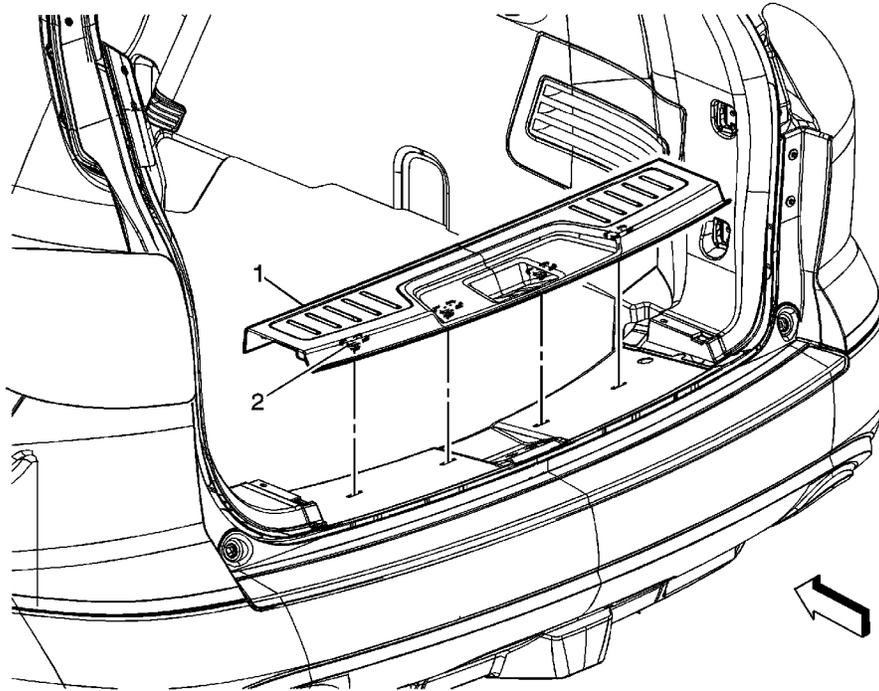

Callout	Component Name
1	Liftgate Door Sill Plate Assembly Tip Use a flat-bladed plastic trim tool in order to release the clips and remove the sill plate.
2	Liftgate Door Sill Plate Retainer Clip

Quarter Lower Rear Trim Panel Replacement (Enclave with TB5)

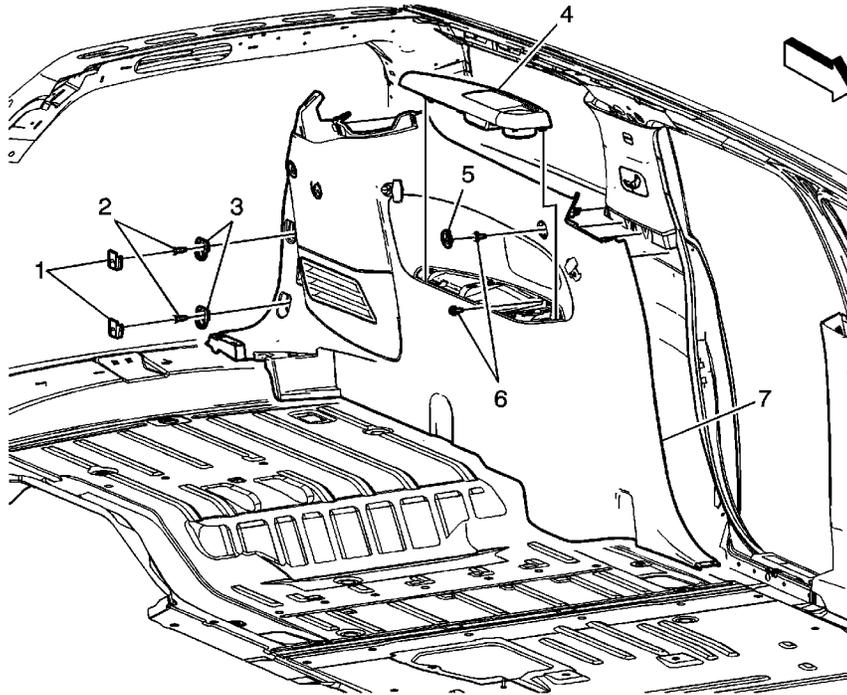


Callout	Component Name
Preliminary Procedures	
<ol style="list-style-type: none"> 1. Move the rear seat to the full forward position. 2. Remove the rear number 2 seat. Refer to Rear Number 2 Seat Replacement. 3. Remove the rear quarter upper trim panel. Refer to Quarter Upper Trim Panel Replacement. 4. Disconnect the liftgate actuator rod from the liftgate. Refer to Liftgate Actuator Rod Replacement. 5. Disconnect the rear seat number 2 shoulder belt anchor bolt. Refer to Rear Seat Number 2 Retractor Side Belt Replacement. 	
1	Cargo Tie Down Loop Bolt Cap (Qty: 2)
2	Cargo Tie Down Loop Bolt (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 3 N·m (27 lb in)
3	Cargo Tie Down Loop (Qty: 2)

© 2010 General Motors Corporation. All rights reserved.

4	Body Side Trim Panel Armrest Tip Pull upward on the armrest to disengage the retainer clips.
5	Cargo Screen Retainer Assembly Tip Twist and pull outward to remove the retainer.
6	Rear Quarter Lower Trim Panel Bolt (Qty: 2) Tighten 3 N·m (27 lb in)
7	Rear Quarter Lower Trim Panel Assembly Procedure <ol style="list-style-type: none">1. Pull outward to disengage the trim panel retainers.2. Disconnect the electrical connectors.3. Transfer components as necessary.


Quarter Lower Rear Trim Panel Replacement (Enclave without TB4)

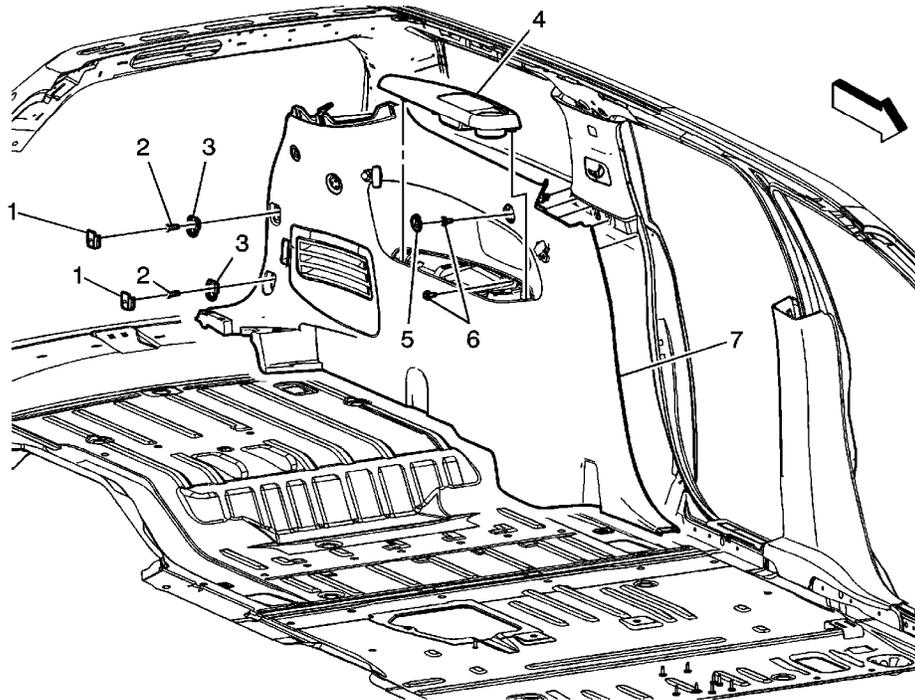

Callout	Component Name
Preliminary Procedures	
<ol style="list-style-type: none"> 1. Move the rear seat to the full forward position. 2. Remove the rear number 2 seat. Refer to Rear Number 2 Seat Replacement. 3. Remove the rear quarter upper trim panel. Refer to Quarter Upper Trim Panel Replacement. 4. Disconnect the liftgate actuator rod from the liftgate. Refer to Liftgate Actuator Rod Replacement. 5. Disconnect the rear seat number 2 shoulder belt anchor bolt. Refer to Rear Seat Number 2 Retractor Side Belt Replacement. 	
1	Cargo Tie Down Loop Bolt Cap (Qty: 2)
2	Cargo Tie Down Loop Bolt (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 3 N·m (27 lb in)
3	Cargo Tie Down Loop (Qty: 2)

4	Body Side Trim Panel Armrest Tip Pull upward on the armrest to disengage the retainer clips.
5	Cargo Screen Retainer Assembly Tip Twist and pull outward to remove the retainer.
6	Rear Quarter Lower Trim Panel Bolt (Qty: 2) Tighten 3 N·m (27 lb in)
7	Rear Quarter Lower Trim Panel Assembly Procedure <ol style="list-style-type: none">1. Pull outward to disengage the trim panel retainers.2. Disconnect the electrical connectors.3. Transfer components as necessary.

Liftgate Trim Panel Replacement (Enclave)

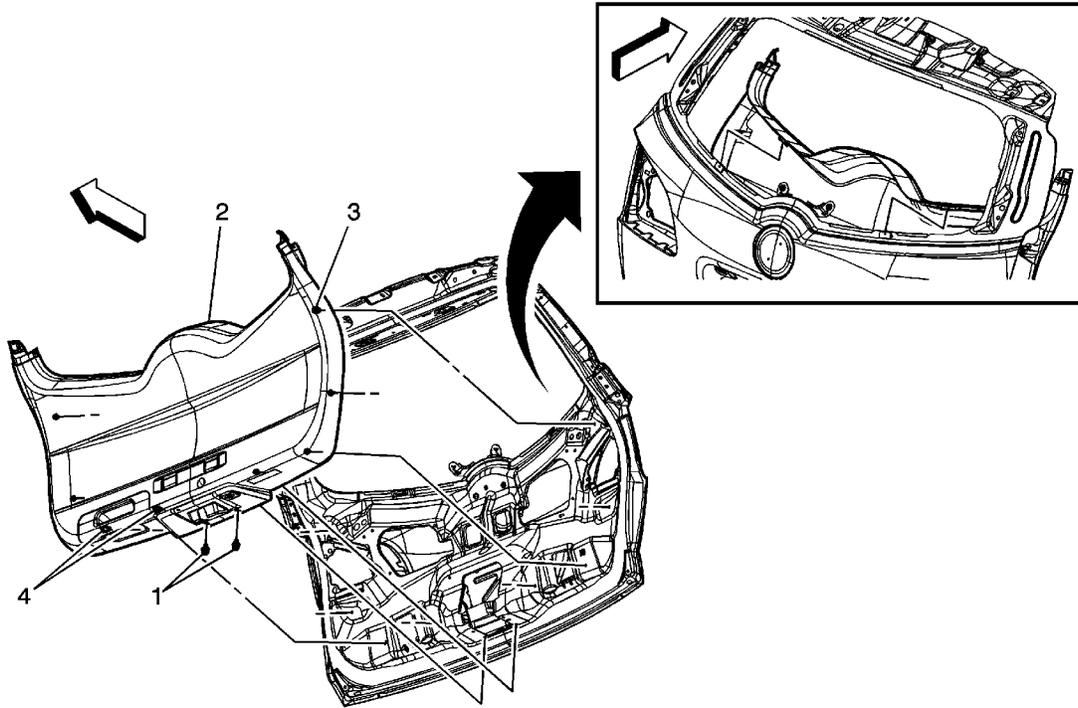

Callout	Component Name
Preliminary Procedure	
Remove the liftgate window garnish molding. Refer to Liftgate Garnish Molding Replacement .	
1	Liftgate Trim Finish Panel Push Pin Retainer (Qty: 2)
2	Liftgate Trim Finish Panel Assembly Procedure 1. Use a trim panel removal tool to aid in the removal of the trim panel from the liftgate assembly. 2. Disconnect the electrical connector, if equipped.
3	Liftgate Trim Finish Panel Retainer (Qty: 6)
4	Liftgate Trim Finish Panel Clips (Qty: 2)