


Rear Door Energy Absorber Pad Replacement

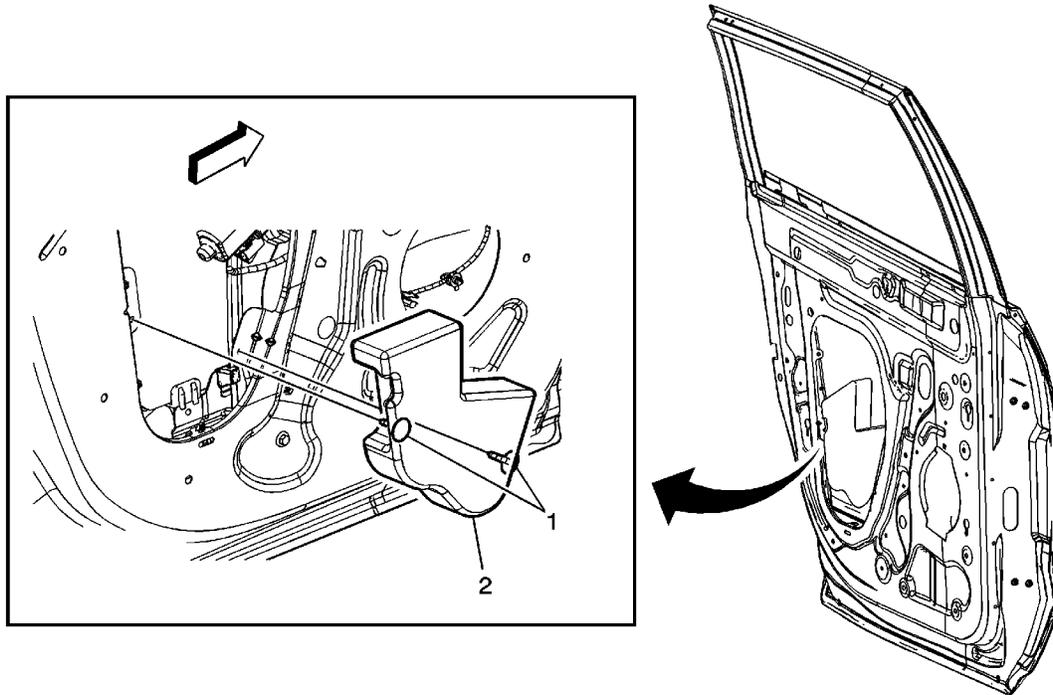


Callout	Component Name
Preliminary Procedure	
Remove the water deflector. Refer to Rear Side Door Water Deflector Replacement .	
1	Rear Side Door Energy Absorber Retainer (Qty: 2)
2	Rear Side Door Energy Absorber Tip Use care when removing retainers, if damaged must be replaced.

Front Side Door Water Deflector Replacement


Removal Procedure

1. Remove the door trim panel. Refer to [Front Side Door Trim Panel Replacement - Left Side](#) or [Front Side Door Trim Panel Replacement - Right Side](#).

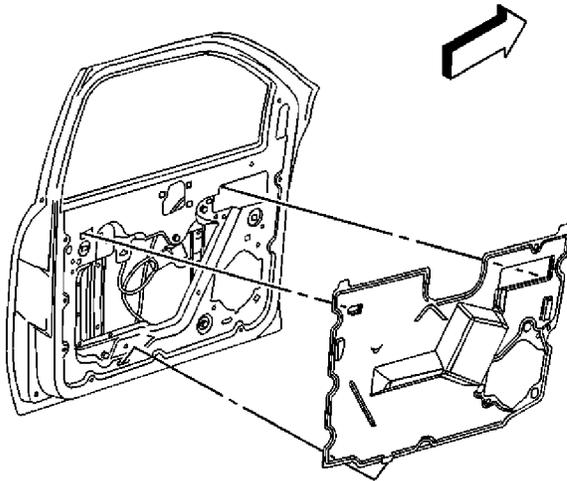

2. Remove the outside rear view mirror (ORVM) wire harness from the water deflector.
3. Carefully remove the water deflector from the door by releasing the adhesive backing.

Installation Procedure

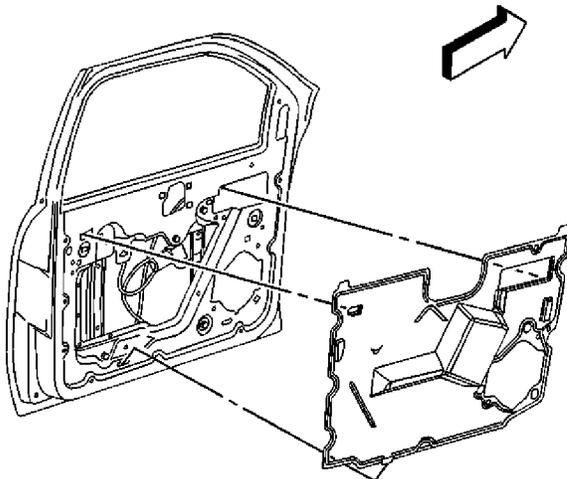




1. Install the ORVM wire harness to the water deflector.
2. Position the water deflector to the door.
3. Press the water deflector to the door. Ensure that the water deflector forms a proper seal around the surface of the door panel.
4. Install the door trim panel. Refer to [Front Side Door Trim Panel Replacement - Left Side](#) or [Front Side Door Trim Panel Replacement - Right Side](#) .

Rear Side Door Water Deflector Replacement


Removal Procedure

1. Open the door.
2. Remove the door trim panel. Refer to [Rear Side Door Trim Panel Replacement](#) .

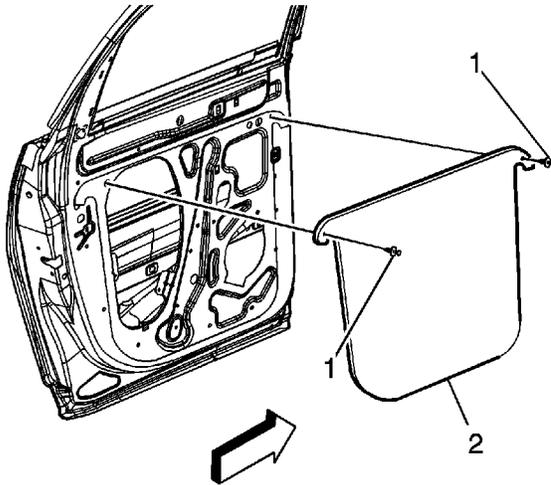

3. Remove the retainer (1).
4. Carefully remove the water deflector from the door by releasing the adhesive backing.

Installation Procedure

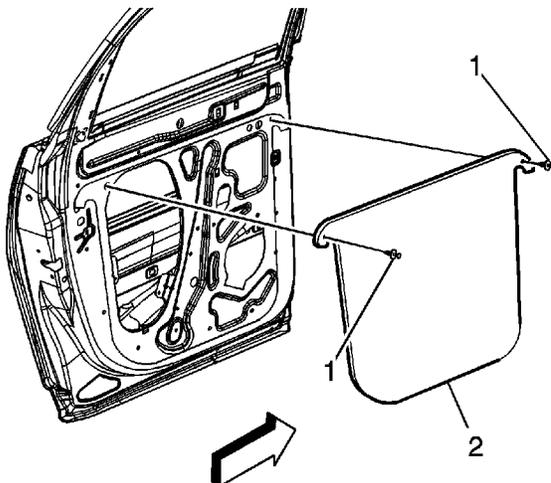


© 2010 General Motors Corporation. All rights reserved.




1. Position the water deflector to the door.
2. Install the retainers (1).
3. Press the water deflector to the door. Ensure that the water deflector forms a proper seal around the surface of the door panel.
4. Install the door trim panel. Refer to [Rear Side Door Trim Panel Replacement](#) .

Front Side Door Sill Trim Plate Replacement

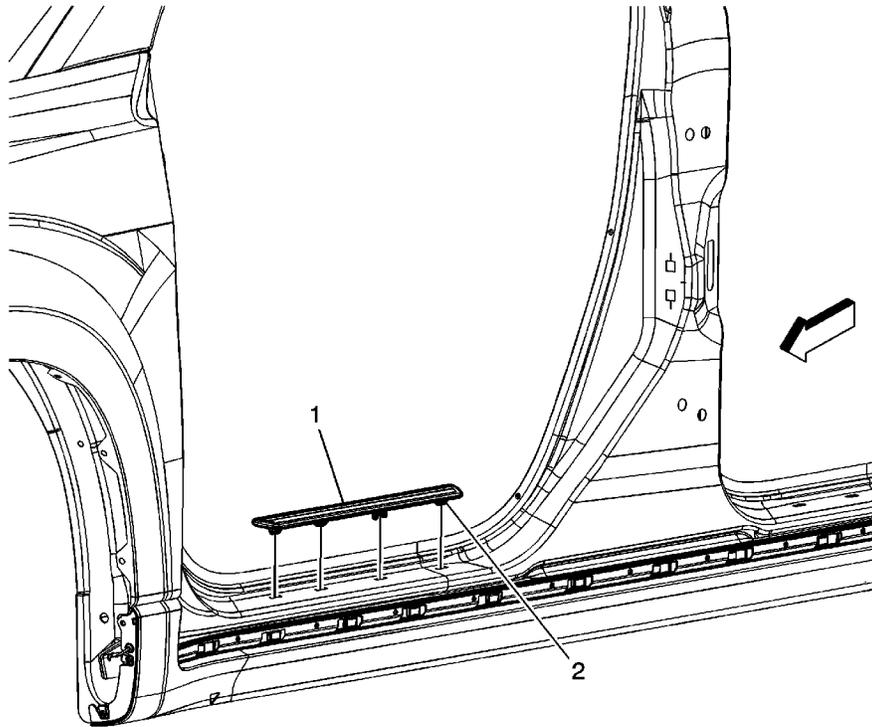


Callout	Component Name
1	Front Side Door Sill Plate Assembly
2	Front Side Door Sill Plate Assembly Clip (Qty: 4) Tip Use a flat-bladed plastic trim tool in order to release the clips and remove the sill plate.

Rear Side Door Sill Trim Plate Replacement

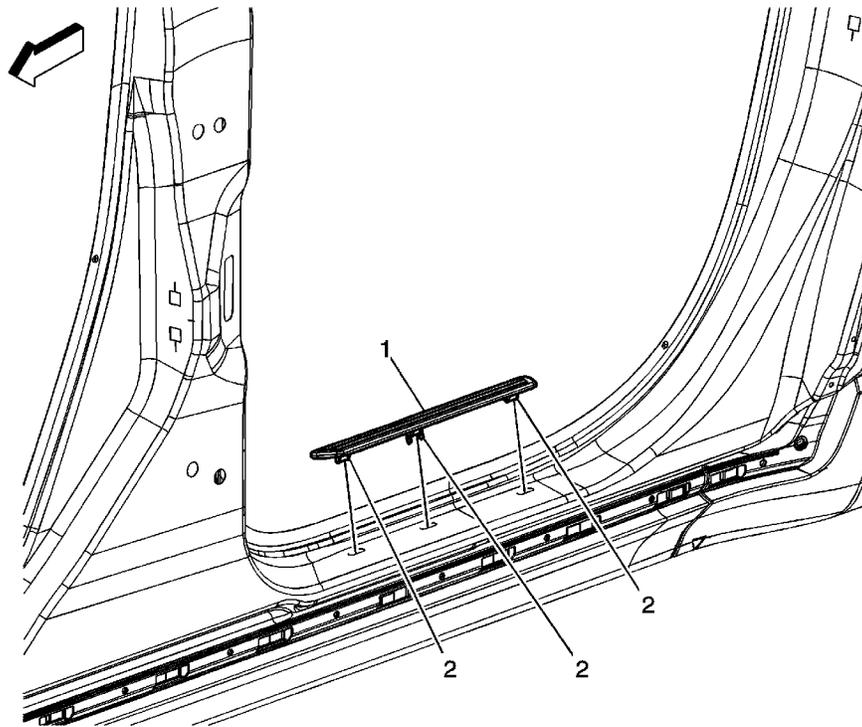


Callout	Component Name
1	Rear Side Door Sill Plate Assembly
2	Rear Side Door Sill Plate Assembly Clip (Qty: 3) Tip Use a flat-bladed plastic trim tool in order to release the clips and remove the sill plate.

Center Pillar Assist Handle Replacement

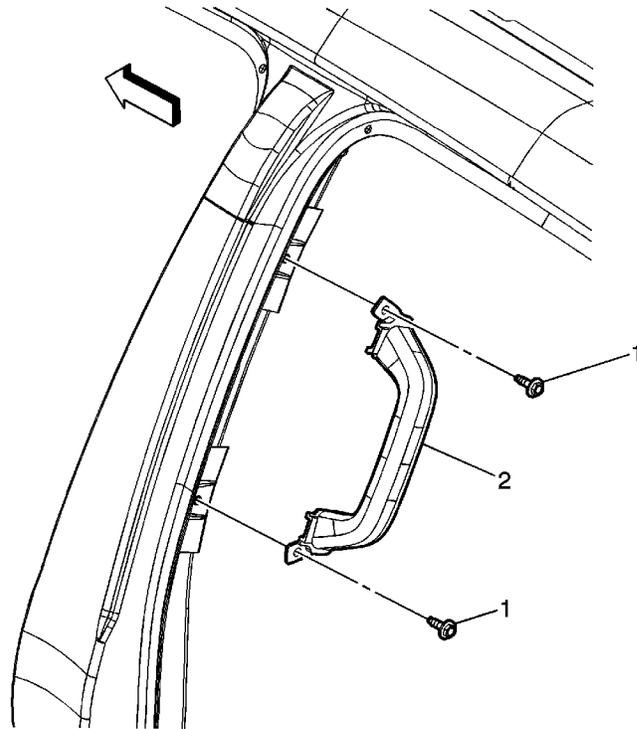


Callout	Component Name
Preliminary Procedure	
Remove the center pillar upper garnish molding. Refer to Center Pillar Upper Garnish Molding Replacement .	
1	Center Pillar Assist Handle Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 1.2 N·m (10 lb in)
2	Center Pillar Assist Handle Assembly

Sunshade Replacement

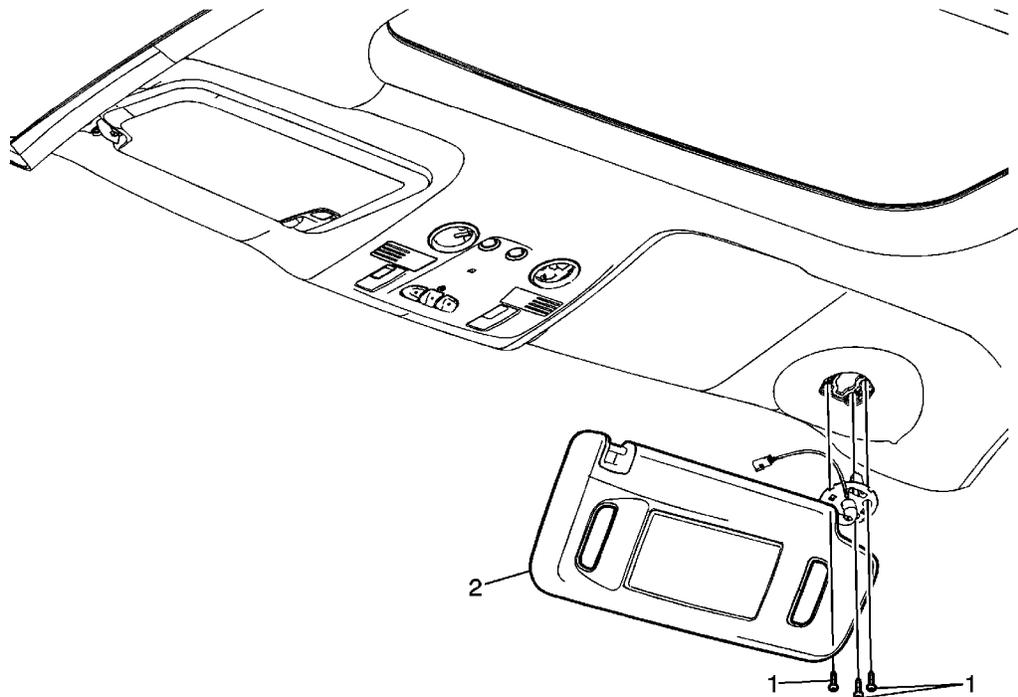


Callout	Component Name
<p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the windshield garnish moldings. Refer to Windshield Garnish Molding Replacement - Left Side and Windshield Garnish Molding Replacement - Right Side. 2. Remove the sunshade anchor. Refer to Sunshade Anchor Replacement. 	
1	<p>Sunshade Screw (Qty: 3)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 3 N·m (25 lb in)</p>
2	<p>Sunshade Assembly</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Lower the front of the headliner enough to gain access to the sunshade electrical connector which is glued to the headliner. 2. Disconnect the sunshade electrical connector.

Sunshade Anchor Replacement

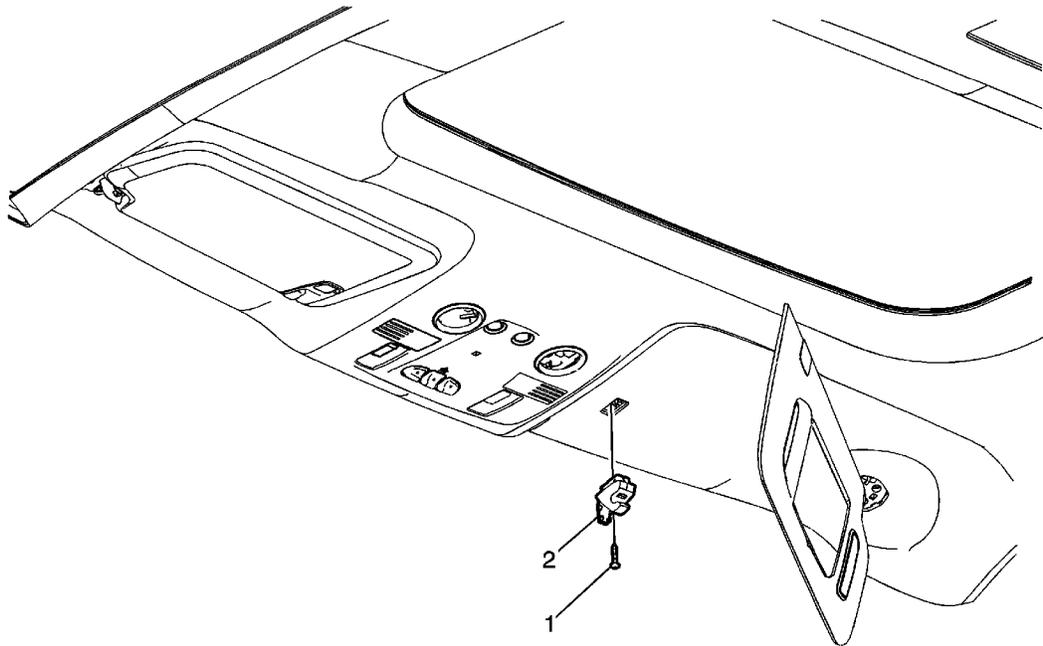


Callout	Component Name
1	Sunshade Anchor Screw Caution: Refer to Fastener Caution in the Preface section. Tighten 3 N·m (25 lb in)
2	Sunshade Anchor Assembly Tip Pull the cover downward to access the fastener.

Windshield Garnish Molding Replacement - Left Side

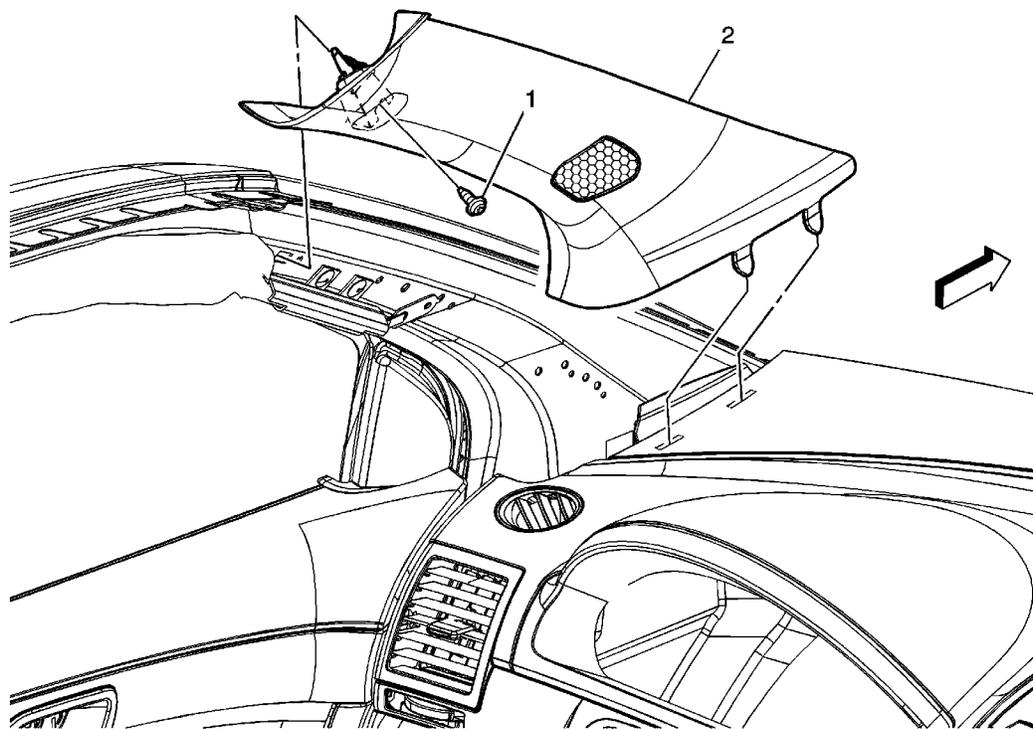


Callout	Component Name
Preliminary Procedures	
Disable the SIR system. Refer to SIR Disabling and Enabling .	
1	Windshield Side Garnish Molding Screw Caution: Refer to Fastener Caution in the Preface section. Tip Open the access door to remove the screw. Tighten 2 N·m (18 lb in)
2	Windshield Side Garnish Molding Assembly Procedure Disconnect the electrical connector.

Windshield Garnish Molding Replacement - Right Side

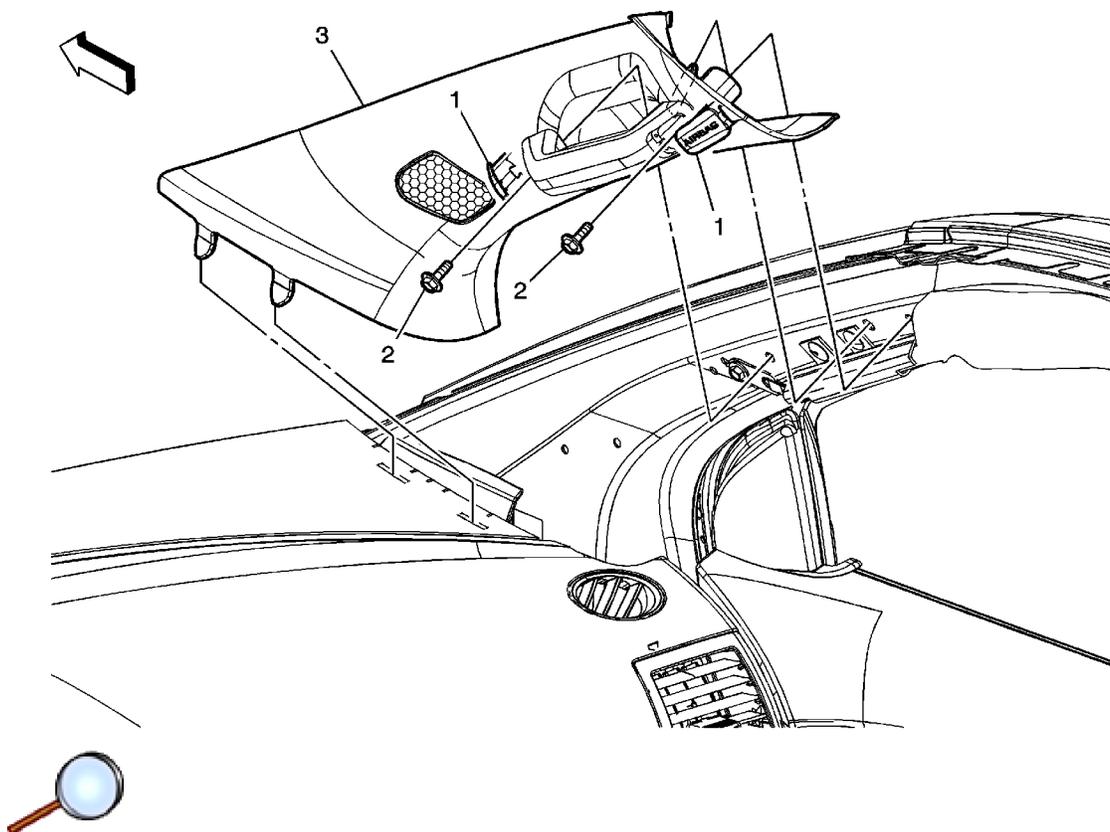


Callout	Component Name
Preliminary Procedures	
Disable the SIR system. Refer to SIR Disabling and Enabling .	
1	Windshield Side Garnish Molding Bolt Hole Finish Plug (Qty: 2)
2	Windshield Side Garnish Molding Bolt (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
3	Windshield Side Garnish Molding Assembly Tip Disconnect the electrical connector.

Center Pillar Upper Garnish Molding Replacement

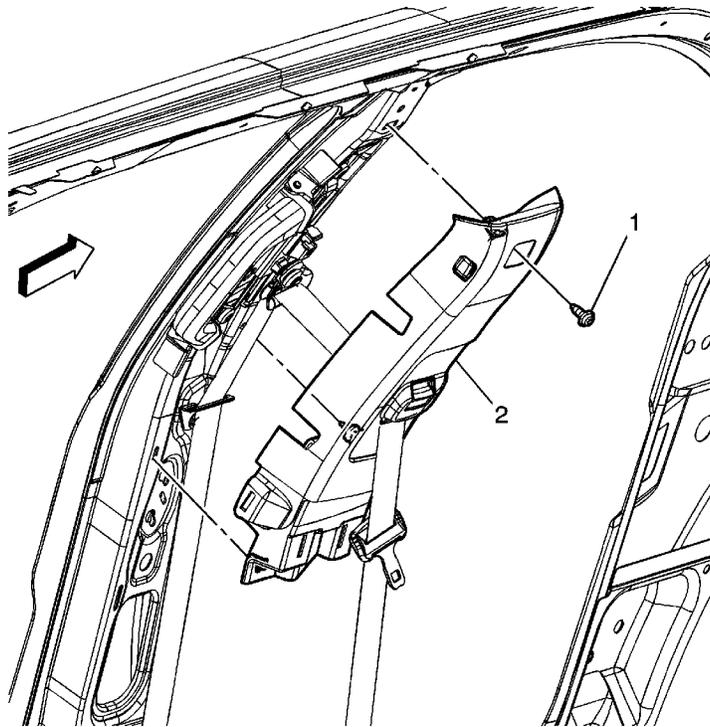


Callout	Component Name
<p>Preliminary Procedure</p>	
<p>Remove the center pillar lower garnish molding. Refer to Center Pillar Lower Garnish Molding Replacement.</p>	
<p>1</p>	<p>Center Pillar Upper Garnish Molding Screw</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tip Open the access door to remove the screw.</p> <p>Tighten 2 N·m (18 lb in)</p>
<p>2</p>	<p>Center Pillar Upper Garnish Molding Assembly</p> <p>Procedure</p> <p>Route the seat belt through the molding prior to installing.</p>

Center Pillar Lower Garnish Molding Replacement

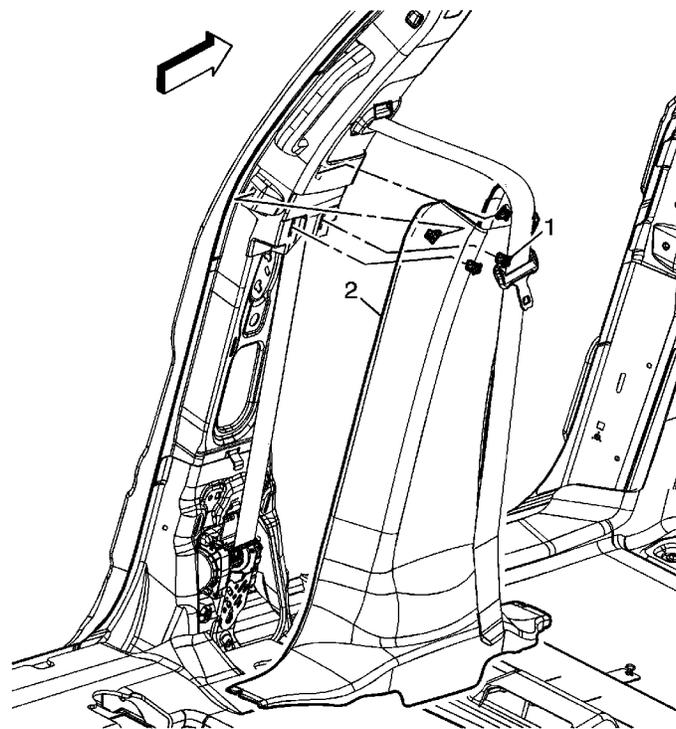


Callout	Component Name
<p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the front carpet retainer. Refer to Front Carpet Retainer Replacement . 2. Remove the rear carpet retainer. Refer to Rear Carpet Retainer Replacement . 3. Remove the seat belt anchor bolt from the front seat. Refer to Seat Belt Retractor Pretensioner Replacement - Front . 	
1	Center Pillar Lower Garnish Molding Clip (Qty: 4)
2	Center Pillar Lower Garnish Molding Assembly

Body Lock Pillar Upper Trim Panel Replacement

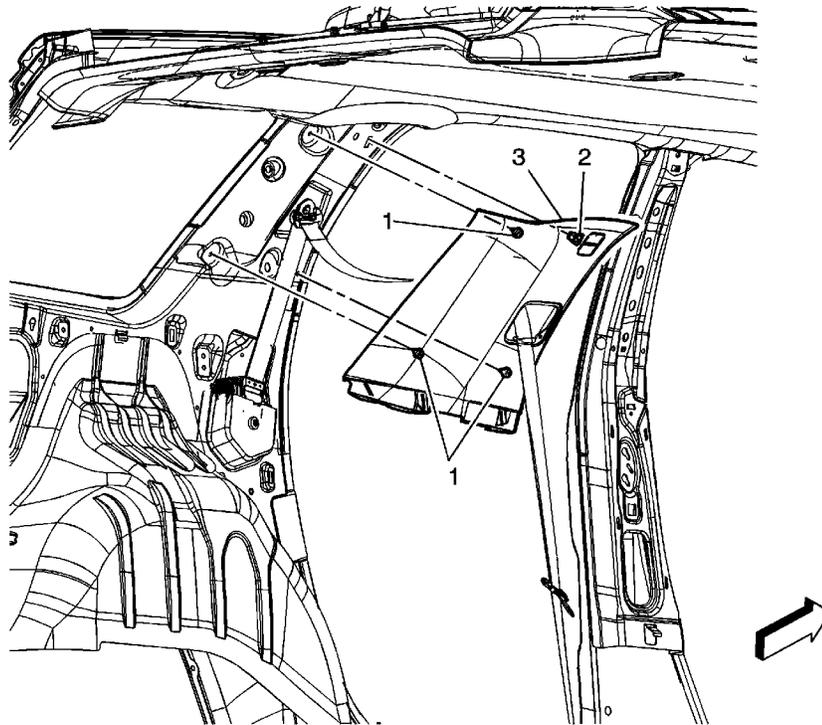


Callout	Component Name
<p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the seat belt anchor bolt. Refer to Seat Belt Retractor Replacement - No. 1 Rear . 2. Remove the rear quarter lower trim panel. Refer to Quarter Lower Rear Trim Panel Replacement . 	
1	Body Lock Upper Trim Panel Retainer (Qty: 3)
2	Body Lock Upper Trim Panel Clip
3	Body Lock Upper Trim Panel Assembly Tip Route the seat belt through the trim panel.

Quarter Upper Trim Panel Replacement (with TB5)

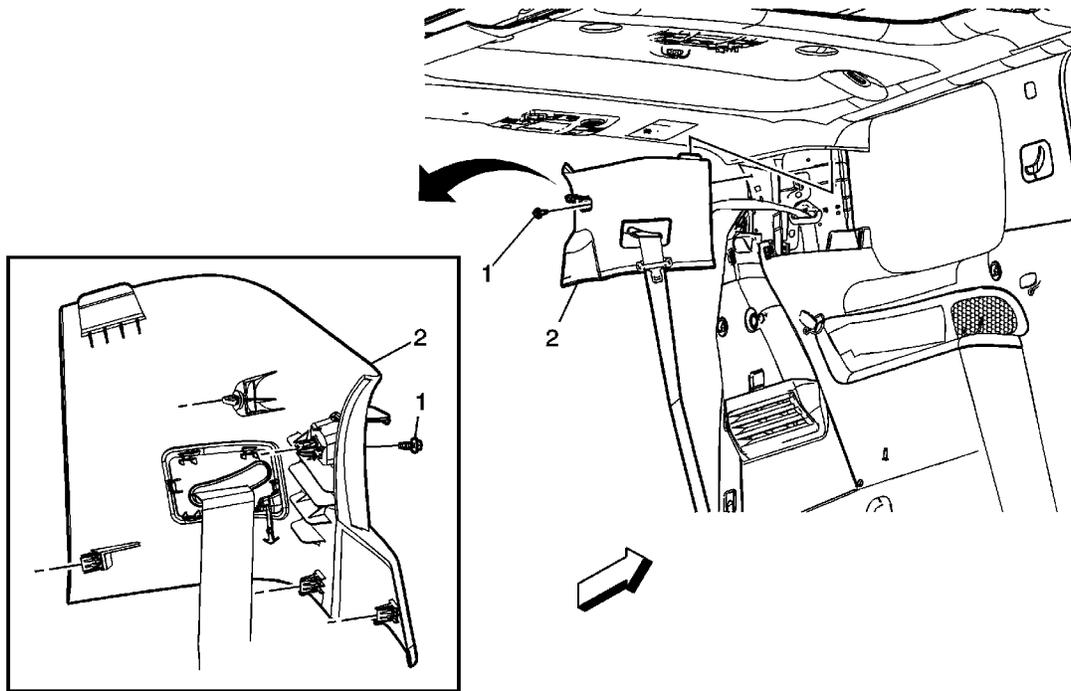

Callout	Component Name
<p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Disable the SIR system. Refer to SIR Disabling and Enabling. 2. Remove the seat belt anchor bolt. Refer to Rear Seat Number 2 Retractor Side Belt Replacement. 	
1	<p>Rear Quarter Upper Trim Panel Screw</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tip Open the access door to remove screw.</p> <p>Tighten 3 N·m (27 lb in)</p>
2	<p>Rear Quarter Upper Trim Panel Assembly</p> <p>Tip Route the seat belt through the trim panel.</p>

Quarter Upper Trim Panel Replacement (without TB4)

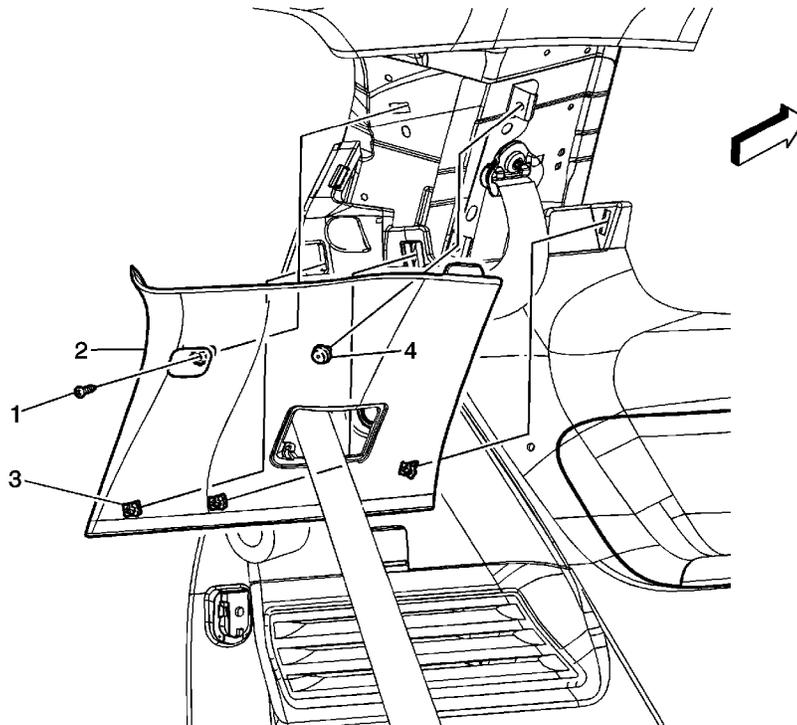


Callout	Component Name
<p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Disable the SIR system. Refer to SIR Disabling and Enabling. 2. Remove the seat belt anchor bolt. Refer to Rear Seat Number 2 Retractor Side Belt Replacement. 	
1	<p>Rear Quarter Upper Trim Panel Screw</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tip Open the access door to remove screw.</p> <p>Tighten 3 N·m (27 lb in)</p>
2	Rear Quarter Upper Trim Panel Clip (Qty: 3)
3	Rear Quarter Upper Trim Panel Retainer
4	<p>Rear Quarter Upper Trim Panel Assembly</p> <p>Tip</p>

© 2010 General Motors Corporation. All rights reserved.


Route the seat belt through trim panel.

Rear Storage Compartment Replacement

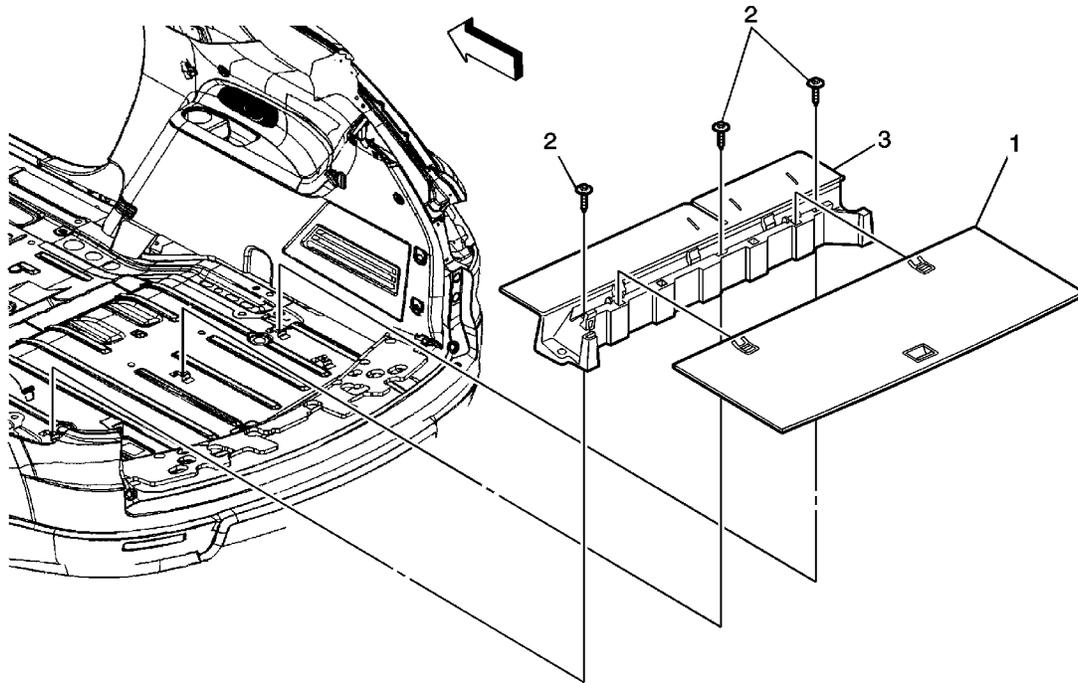


Callout	Component Name
1	Cargo Box Storage Box Lid Assembly
2	Rear Compartment Floor Storage Compartment Fasteners
3	Rear Compartment Floor Storage Compartment Assembly

Liftgate Garnish Molding Replacement (withoutTB4)

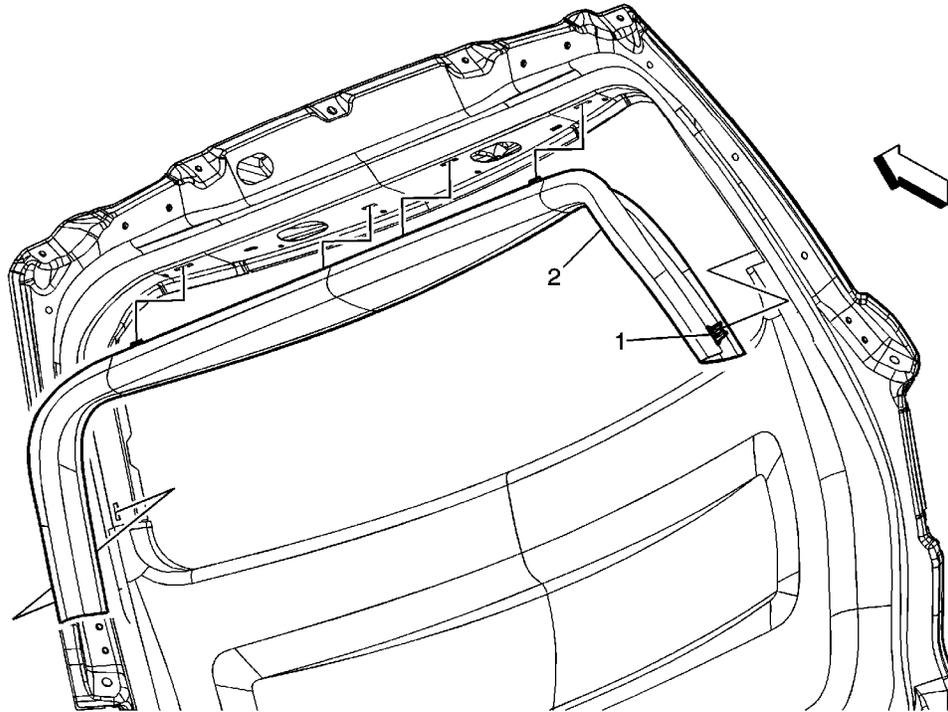


Callout	Component Name
1	Liftgate Upper Trim Finish Panel Retainer (Qty: 6)
2	Liftgate Upper Trim Finish Panel Assembly

Liftgate Garnish Molding Replacement (with TB5)

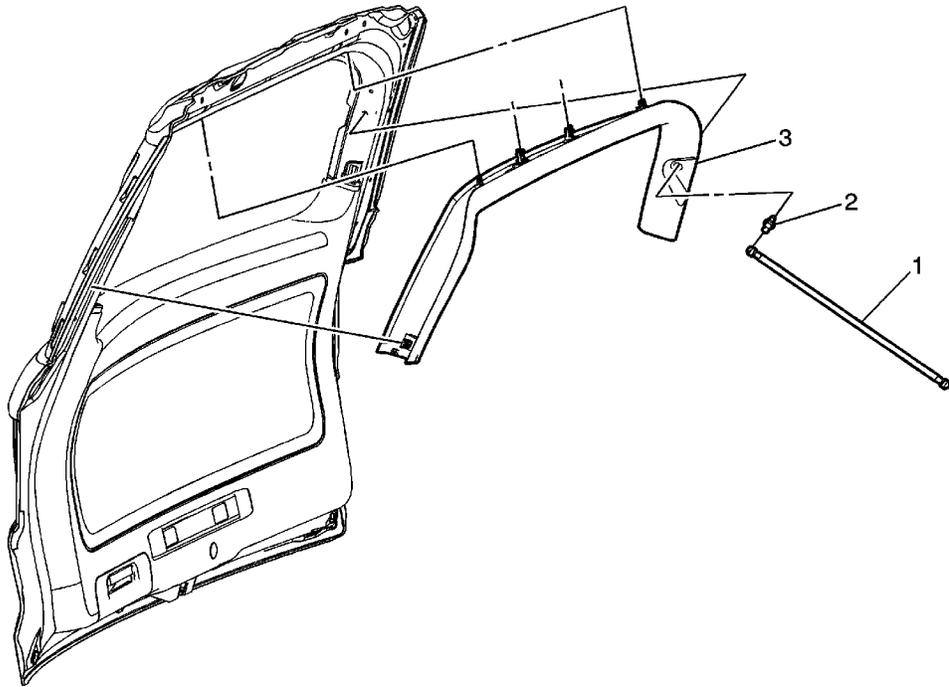

Callout	Component Name
1	Liftgate Actuator Rod
2	Liftgate Actuator Rod Stud Caution: Refer to Fastener Caution in the Preface section. Tighten 20 N·m (15 lb ft)
3	Liftgate Upper Trim Finish Panel Assembly

Pressure Relief Valve Replacement

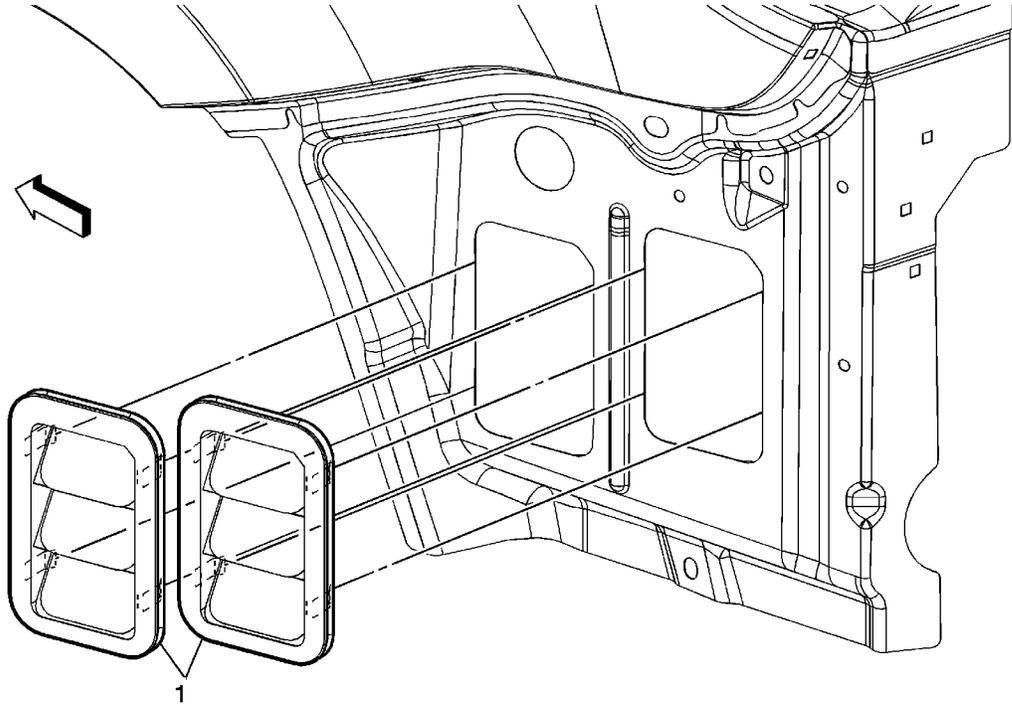

Callout	Component Name
Preliminary Procedure	
Remove the rear fascia. Refer to Rear Bumper Fascia Replacement .	
1	Pressure Relief Valve Assembly Tip Release the tabs attaching the valve (1) to the inner rear quarter panel to remove