




Passenger Switch

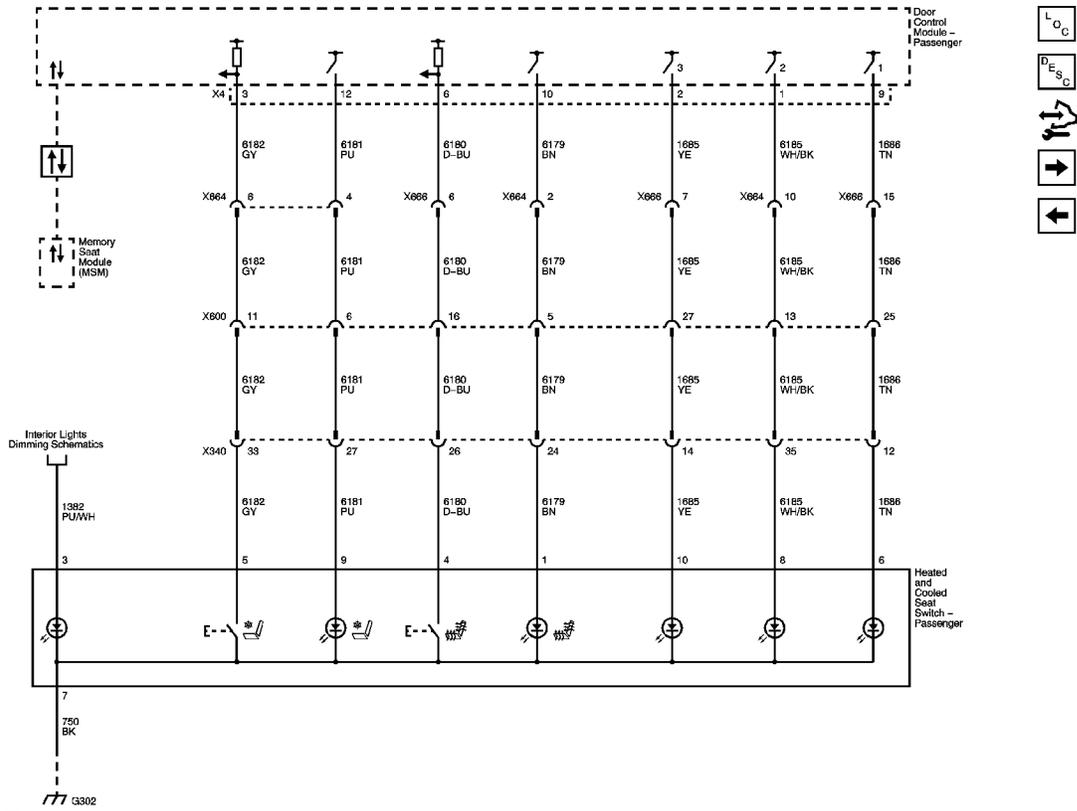

Cushion Temp Sensors and Heating

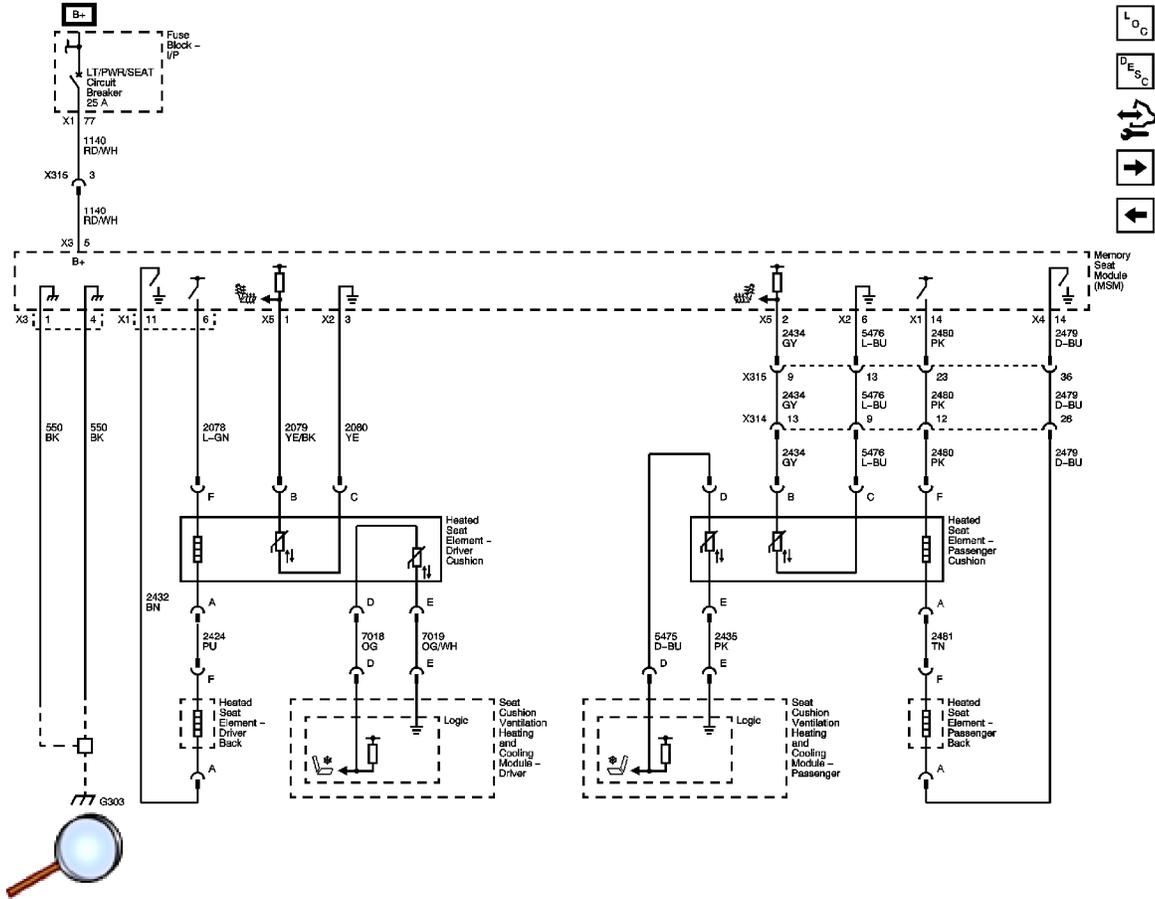

Driver or Passenger Seat Heater Switch Replacement

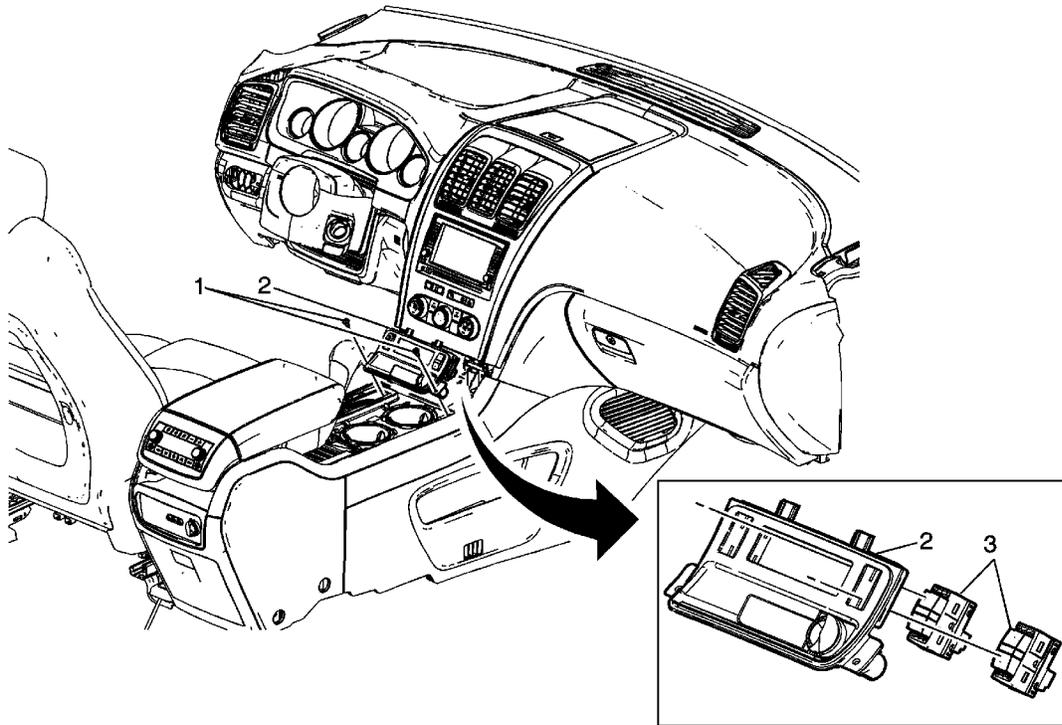


Callout	Component Name
Preliminary Procedure	
Remove the front floor console accessory trim plate. Refer to Front Floor Console Accessory Trim Plate Replacement .	
1	Front Floor Console Accessory Switch Mounting Plate Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
2	Front Floor Console Accessory Switch Mounting Plate Procedure Disconnect the electrical connectors.
3	Seat Heater Switch (Qty: 2) Procedure

© 2010 General Motors Corporation. All rights reserved.


Disengage the heated seat switches from the accessory switch mounting plate.

Front Seat Heater Control Module Replacement

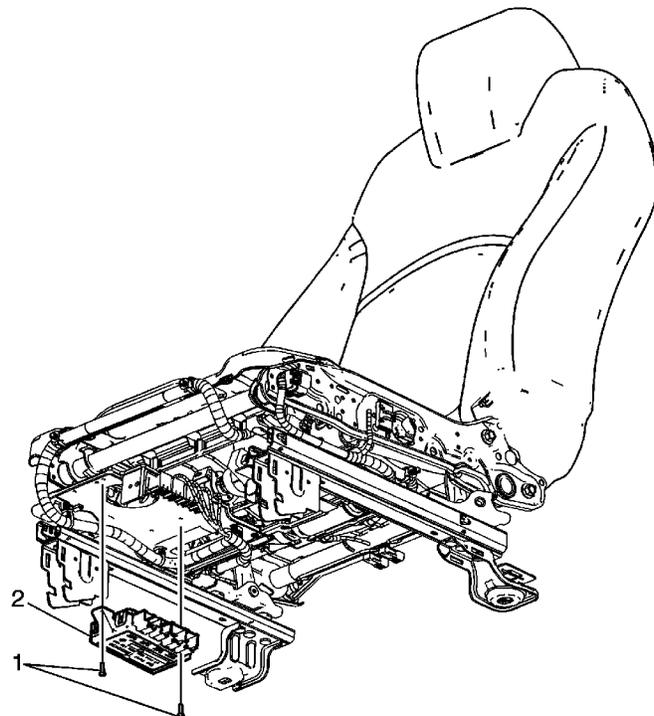

Callout	Component Name
<p>Preliminary Procedure</p>	
<p>Remove the front seat. Refer to Bucket Seat Replacement.</p>	
<p>1</p>	<p>Front Heated Seat Module Screw (Qty: 2)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 2 N·m (18 lb in)</p>
<p>2</p>	<p>Front Heated Seat Module</p> <p>Procedure</p> <ul style="list-style-type: none"> • Disconnect the electrical connector. • If a replacement module is installed, program the module. Refer to Control Module References.

Driver or Passenger Seat Back Cushion Heater Replacement

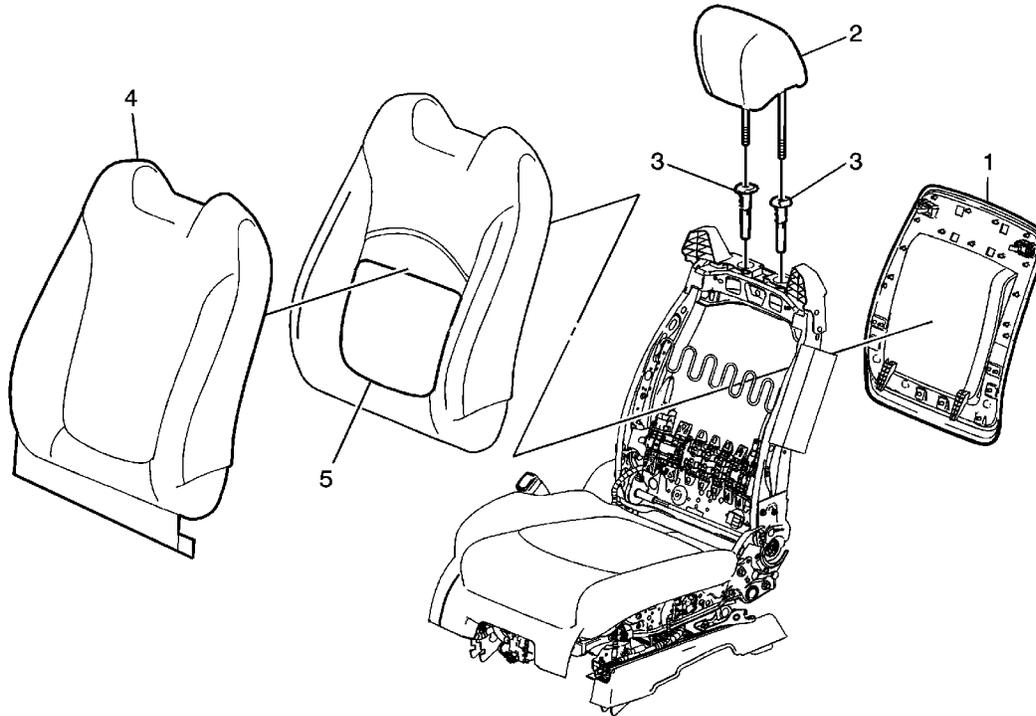


Callout	Component Name
<p>Preliminary Procedure</p> <p>Remove the front seat. Refer to Bucket Seat Replacement.</p>	
<p>1</p>	<p>Front Seat Back Cushion Rear Finish Panel</p> <p>Procedure</p> <ol style="list-style-type: none"> Using a flat bladed tool, from the side, push inward on the top two retainers while pulling rearward at the top of the panel. Lift the panel upward to remove from the seat.
<p>2</p>	<p>Front Seat Head Restraint Assembly</p> <p>Procedure</p> <ol style="list-style-type: none"> Push the button on the outer head restraint guide in to adjust the head restraint to the highest position. Push the button on the inner head restraint guide in while pulling upward to finish releasing the head restraint from the seat.

© 2010 General Motors Corporation. All rights reserved.

3	<p>Front Seat Head Restraint Guide (Qty: 2)</p> <p>Tip Use a rubber mallet or equivalent to tap upward on the bottom of the head restraint guide to remove from the seat back frame.</p>
4	<p>Front Seat Back Cushion Cover</p> <p>Procedure</p> <ol style="list-style-type: none">1. Disengage the j-channel retainers from the seat back cushion frame.2. Disconnect the electrical connectors that attach to the seat back cushion.3. Remove the seat back cushion cover and pad as an assembly.4. Remove the hog rings to separate the cover from the pad.
5	<p>Front Seat Back Cushion Heater</p> <p>Procedure</p> <p>Carefully remove the seat cushion heater from the seat cushion pad by lifting upward starting from the bottom to disengage the adhesive.</p> <p>Tip In case of a broken heating wire, DO NOT repair by soldering the two ends.</p>

Driver or Passenger Seat Cushion Heater Replacement (Passenger)

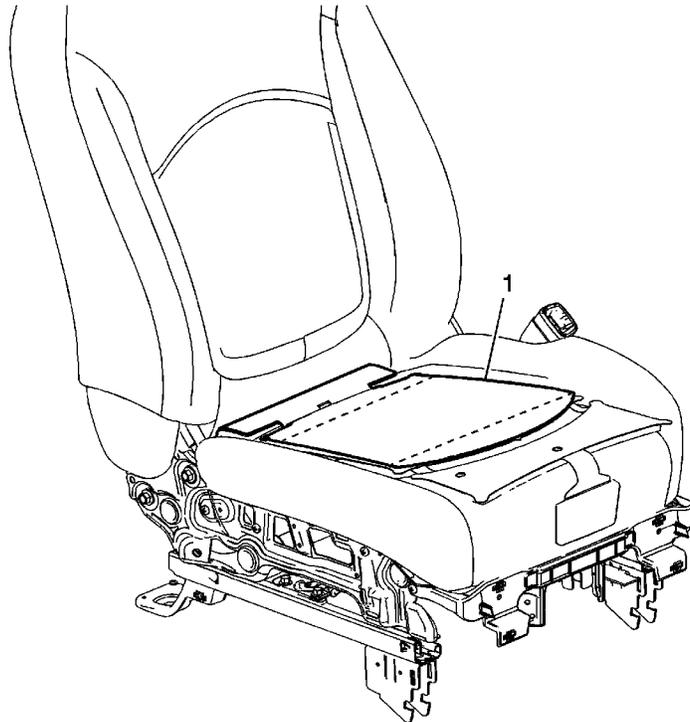

Callout	Component Name
	<p>Warning: Replace the passenger presence system as a complete assembly to prevent possible injury to the occupant. All the components in the service kit are assembled and calibrated as a unit. Using only some of the components in the service kit will cause the passenger presence system to operate improperly.</p> <p>Preliminary Procedure</p> <ol style="list-style-type: none"> 1. Remove the front passenger seat. Refer to Bucket Seat Replacement. 2. Remove the front seat outer recliner finish cover. Refer to Front Seat Back Recliner Outer Trim Panel Replacement. 3. Remove the front seat adjuster front shield. 4. Remove the front seat cushion cover. Refer to Front Seat Cushion Cover and Pad Replacement.
	<p>Passenger Seat Cushion Heater</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Using a pair of scissors cut out the seat heater element between the front

© 2010 General Motors Corporation. All rights reserved.

1


and rear adhesive strips as shown, leaving the old adhesive strip area on the Passenger Presence System (PPS).

2. Cut the pigtail wire flush to the faulty element and discard.
3. Remove the heater element leaving the old adhesive strips in tack on the PPS. The new seat heater adhesive strips will be placed over the old adhesive strips.

Tip

In case of a broken heating wire, DO NOT repair by soldering the two ends.

Driver or Passenger Seat Cushion Heater Replacement (Driver)

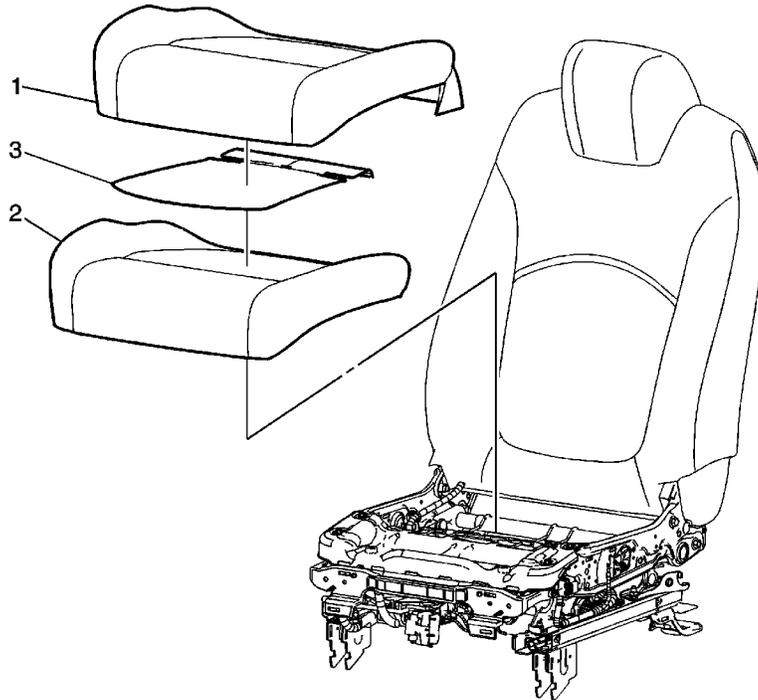

Callout	Component Name
<p>Preliminary Procedure</p> <ol style="list-style-type: none"> 1. Remove the front seat. Refer to Bucket Seat Replacement. 2. Remove the front seat outer recliner finish cover. Refer to Front Seat Back Recliner Outer Trim Panel Replacement. 3. Remove the front seat adjuster front shield. 	
<p>1</p>	<p>Front Seat Cushion Cover</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Disengage the j-channel retainers from the seat cushion frame. 2. Disconnect the electrical connector. 3. Remove the seat cushion cover and pad from the seat cushion frame as an assembly. 4. Remove the hog rings to separate the seat cushion cover from the pad.
<p>2</p>	<p>Front Seat Cushion Pad</p>
	<p>Driver Seat Cushion Heater</p>


Procedure

- 3 Carefully remove the seat cushion heater from the seat cushion pad by lifting upward starting from the rear to disengage the adhesive.

Tip


In case of a broken heating wire, DO NOT repair by soldering the two ends.

Driver or Passenger Seat Cushion Ventilation Heating and Cooling Blower Replacement (Seat Back-Acadia, Enclave, Traverse)

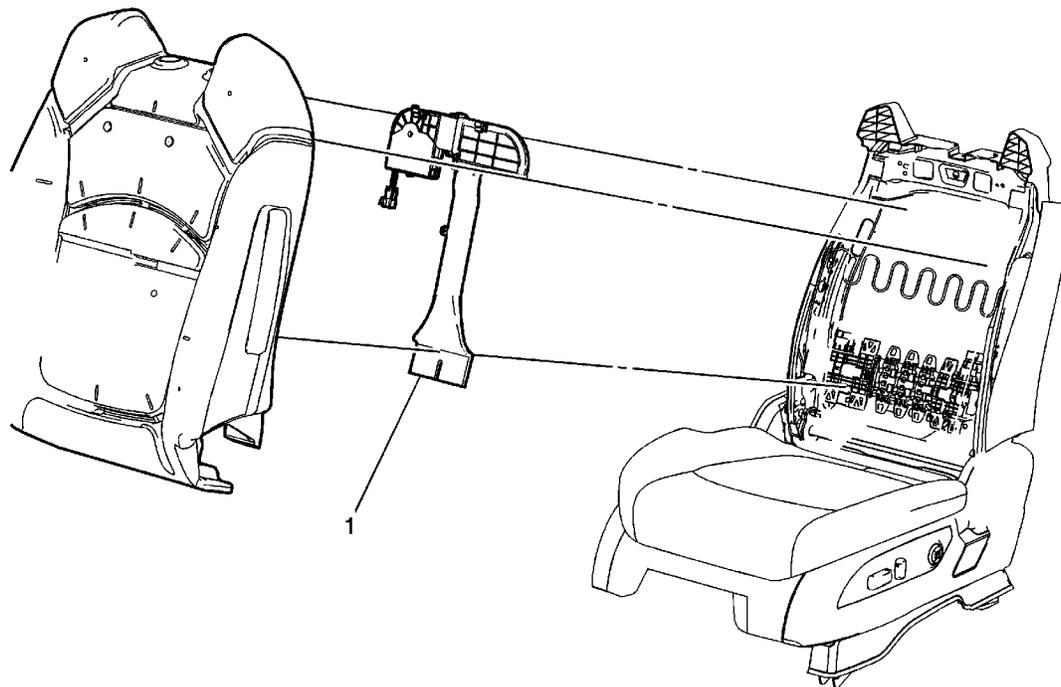

Callout	Component Name
<p>Preliminary Procedure</p>	
<p>Remove the front seat back cushion cover and pad. Refer to Front Seat Back Cushion Cover and Cushion Pad Replacement.</p>	
<p>1</p>	<p>Driver Seat and Passenger Seat Cushion Ventilation Heating and Cooling Blower</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Disconnect any electrical connectors. 2. Transfer components as necessary.

Driver or Passenger Seat Cushion Ventilation Heating and Cooling Blower Replacement (Seat Lower-Acadia, Enclave, Traverse)

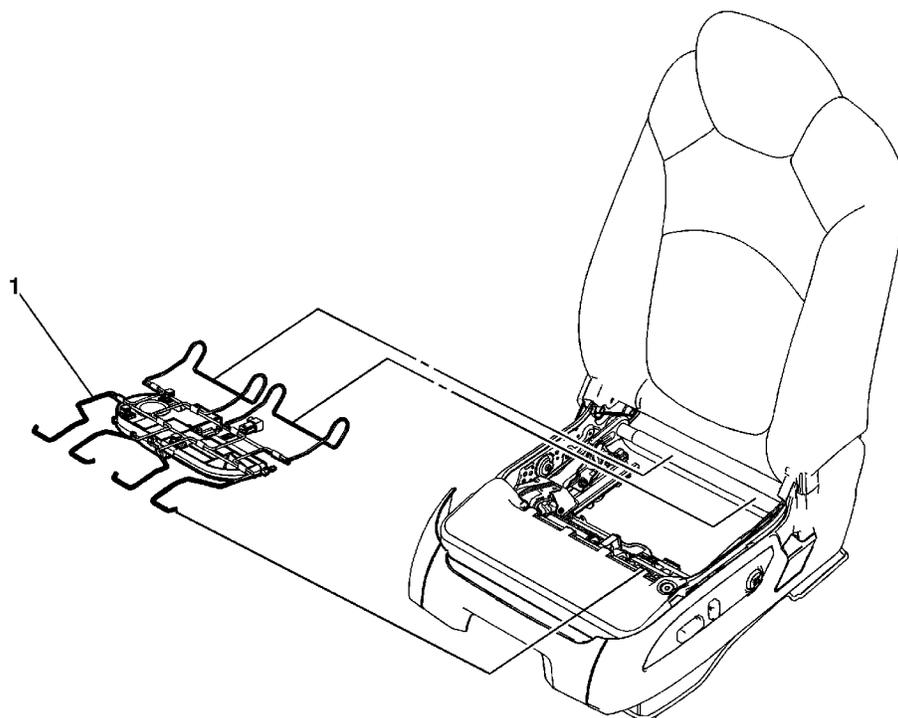

Callout	Component Name
<p>Preliminary Procedure</p>	
<p>Remove the front seat cushion cover and pad. Refer to Front Seat Cushion Cover and Pad Replacement.</p>	
<p>1</p>	<p>Driver Seat and Passenger Seat Cushion Ventilation Heating and Cooling Blower</p> <p>Procedure</p> <p>Transfer components as necessary..</p> <p>Tip</p> <p>Note the new harness routing runs along the same path, but instead of clipping the harness to the top of the flex mat wire, clip the harness to the bottom of the flex mat wire. This eliminates the opportunity for the occupant loading to pinch the harness between the foam and the flex mat wire.</p>

Driver Switch

