


Fastener Tightening Specifications

| Application | Specification | |
|---|---------------|----------|
| | Metric | English |
| Front Seat Lumbar Assembly Bolt | 9 N·m | 80 lb in |
| Driver Seat Adjuster Memory Module Screw | 2 N·m | 18 lb in |
| Driver Seat Adjuster Memory Module Switch Screw | 3 N·m | 27 lb in |


Power Seat Switch Replacement

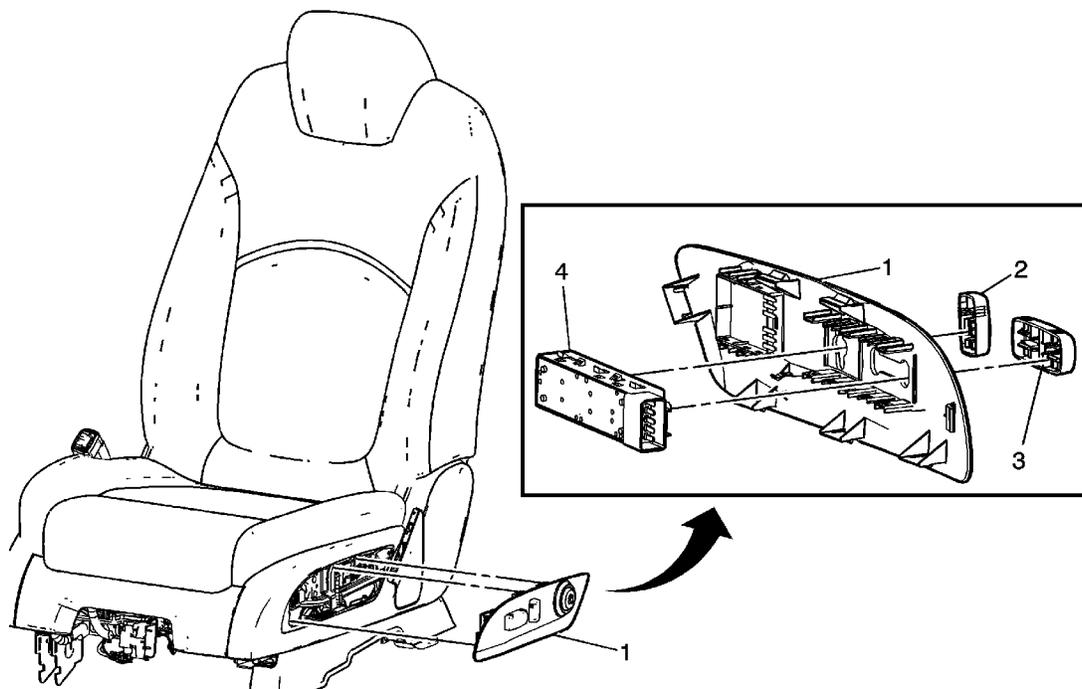

| Callout | Component Name |
|---------|--|
| 1 | <p>Front Seat Adjuster Switch Mounting Plate</p> <p>Procedure</p> <ol style="list-style-type: none"> Using a non-metallic flat-bladed tool, release the retainer tabs starting at the rear edge and working forward while pulling outward on the mounting plate. Disconnect the electrical connectors from the switch assemblies. |
| 2 | <p>Front Seat Recliner Knob</p> <p>Tip Use a flat-bladed tool to release the knob from the mounting plate.</p> |
| 3 | <p>Front Seat Adjuster Knob</p> <p>Tip Use a flat-bladed tool to release the knob from the mounting plate.</p> |
| 4 | <p>Front Seat Adjuster and Recliner Switch</p> <p>Tip Use a flat-bladed tool to release the switch from the mounting plate.</p> |


© 2010 General Motors Corporation. All rights reserved.

Driver Seat Adjuster Memory Switch Replacement

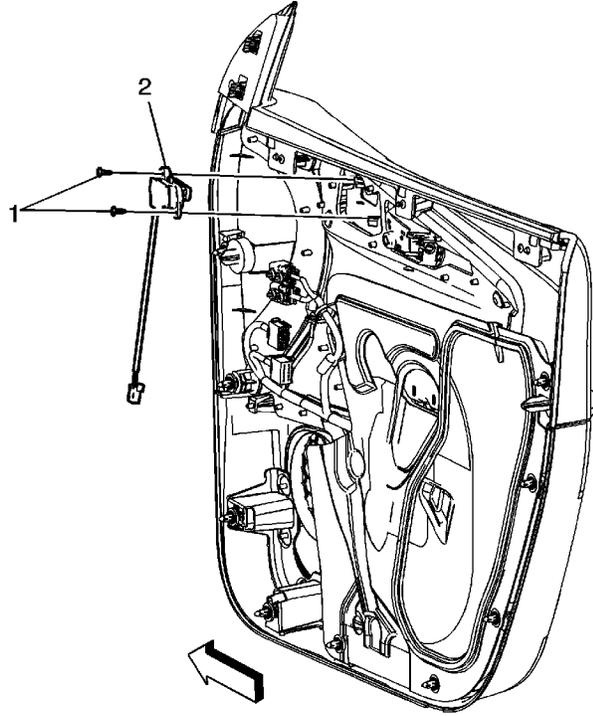


| Callout | Component Name |
|---|--|
| Preliminary Procedure | |
| Remove the front driver side door trim panel. Refer to Front Side Door Trim Panel Replacement - Left Side . | |
| 1 | Driver Seat Adjustable Memory Switch Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 3 N·m (27 lb in) |
| 2 | Driver Seat Adjustable Memory Switch Procedure Disconnect the electrical connector. |

Memory Seat Control Module Replacement

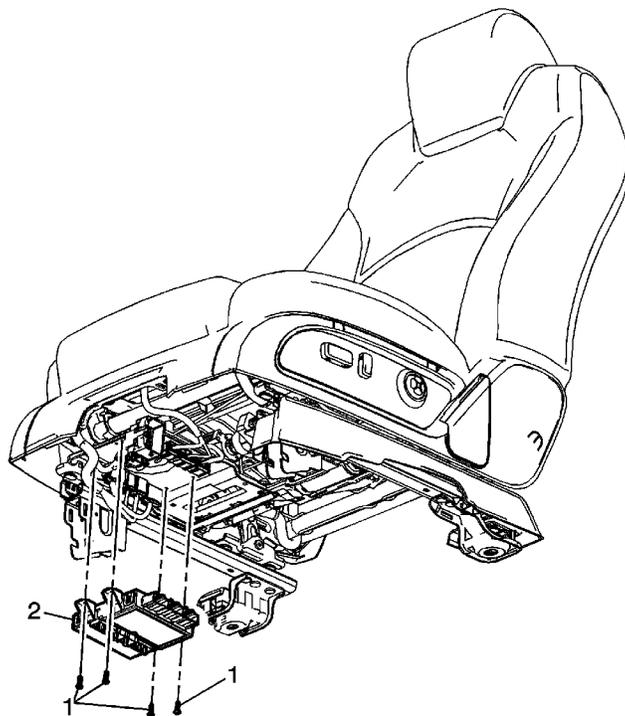


| Callout | Component Name |
|---|---|
| <p>Preliminary Procedure</p> <p>Remove the front seat. Refer to Bucket Seat Replacement.</p> | |
| <p>1</p> | <p>Driver Seat Adjuster Memory Module Screw (Qty: 4)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 2 N·m (18 lb in)</p> |
| <p>2</p> | <p>Driver Seat Adjuster Memory Module</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Disconnect the electrical connector. 2. Reprogram the module after replacement. Refer to Control Module References. |

Front Seat Lumbar Control Switch Replacement

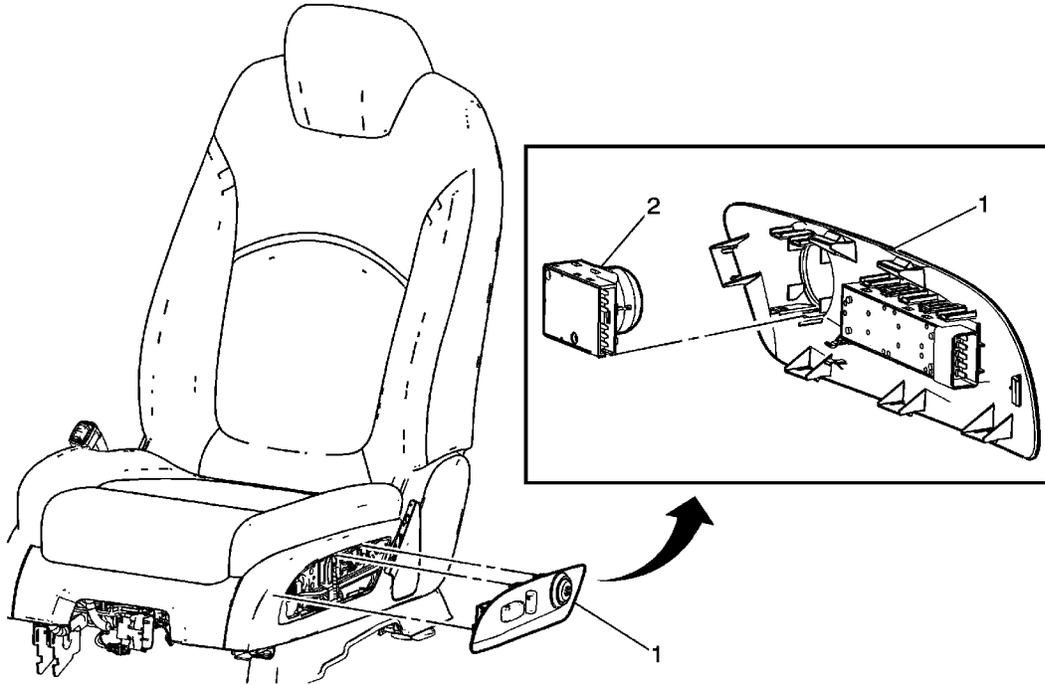

| Callout | Component Name |
|---------|--|
| 1 | <p>Front Seat Adjuster Switch Mounting Plate</p> <p>Procedure</p> <ol style="list-style-type: none"> Using a non-metallic flat-bladed tool, release the retainer tabs starting at the rear edge and working forward while pulling outward on the mounting plate. Disconnect the electrical connectors from the switch assemblies. |
| 2 | <p>Front Seat Lumbar Control Switch Assembly</p> <p>Tip Use a flat-bladed tool to release the switch from the mounting plate.</p> |

Front Seat Lumbar Support Replacement

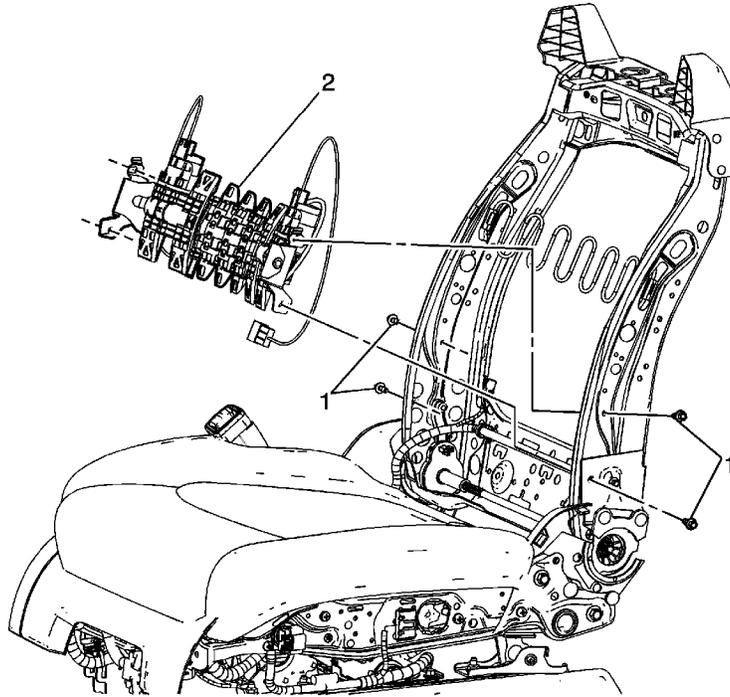

| Callout | Component Name |
|---|---|
| Preliminary Procedure | |
| Remove the front seat back cushion cover j-clips and reposition the seat back cushion cover to gain access to the lumbar support and bolts. | |
| 1 | Front Seat Lumbar Assembly Bolt (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 9 N·m (80 lb in) |
| 2 | Front Seat Lumbar Assembly Procedure Disconnect the electrical connector. |


Front Seat Recliner Actuator Motor Replacement

The front seat recliner actuator motor is serviced as part of the front seat back frame assembly and is not available separately. Refer to [Front Seat Back Frame Replacement](#) .

Fastener Tightening Specifications

| Application | Specification | |
|---|---------------|----------|
| | Metric | English |
| Front Seat Adjuster Handle Screw | 3 N·m | 27 lb in |
| Front Seat Adjuster Track Assembly Nut | 9 N·m | 80 lb in |
| Front Seat Assembly Bolt | 45 N·m | 33 lb ft |
| Front Seat Back Cushion Frame Bolt | 50 N·m | 37 lb ft |
| Front Seat Back Cushion Support Assembly Screw | 2 N·m | 18 lb in |
| Front Seat Cushion Frame Bolt | 8 N·m | 71 lb in |
| Front Seat Inner Recliner Finish Cover Screw | 3 N·m | 27 lb in |
| Front Seat Outer Recliner Finish Cover Screw | 4 N·m | 35 lb in |
| Rear Seat No. 1 Assembly Bolt | 55 N·m | 41 lb ft |
| Rear Seat No. 1 Armrest Bolt - 40 Percent Seat | 28 N·m | 21 lb ft |
| Rear Seat No. 1 Armrest Bolt - 60 Percent Seat | 10 N·m | 89 lb in |
| Rear Seat No. 1 Latch Release Handle Screw | 4 N·m | 35 lb in |
| Rear Seat No. 1 Latch Release Strap Outer Bezel Screw | 5 N·m | 44 lb in |
| Rear Seat No. 1 Latch Release Strap Inner Bezel Screw | 5 N·m | 44 lb in |
| Rear Seat No. 1 Latch Bolt | 10 N·m | 89 lb in |
| Rear Seat No. 1 Back Frame Bolt - Outer | 45 N·m | 33 lb ft |
| Rear Seat No. 1 Back Frame Bolt - Inner | 10 N·m | 89 lb in |
| Rear Seat No. 1 Cushion Frame Front Pivot Bolt | 28 N·m | 21 lb ft |
| Rear Seat No. 1 Cushion Frame Bolt | 10 N·m | 89 lb in |
| Rear Seat No. 1 Seat Support Screw | 5 N·m | 44 lb in |
| Rear Seat No. 1 Seat Adjuster Handle Screw | 4 N·m | 35 lb in |
| Rear Seat No. 1 Back Cushion Latch Release Handle Screw | 4 N·m | 35 lb in |
| Rear Seat No. 1 Back Cushion Stowage Latch Actuator Screw | 2 N·m | 18 lb in |
| Rear Seat No. 1 Back Cushion Filler Panel Screw | 2 N·m | 18 lb in |
| Rear Seat No. 2 Assembly Bolt | 55 N·m | 41 lb ft |
| Rear Seat No. 2 Back Cushion Latch Release Handle Screw | 9 N·m | 80 lb in |
| Rear Seat No. 2 Cushion Frame Bolt | 9 N·m | 80 lb in |
| Rear Seat No. 2 Head Restraint Bracket Bolt | 10 N·m | 89 lb in |
| Rear Seat No. 2 Head Restraint Bracket Cover Bolt | 5 N·m | 44 lb in |
| Rear Seat No. 2 Recliner Bolt | 10 N·m | 89 lb in |
| Rear Seat No. 2 Recliner Inner Finish Cover Screw | 5 N·m | 44 lb in |
| Rear Seat No. 2 Recliner Outer Finish Cover Screw | 5 N·m | 44 lb in |
| Rear Seat No. 2 Back Cushion Frame Bolt | 55 N·m | 41 lb in |
| Rear Seat No. 2 Hinge Bolt | 10 N·m | 89 lb in |
| Rear Seat No. 2 Child Seat Bracket Bolt | 40 N·m | 30 lb ft |

Bucket Seat Replacement

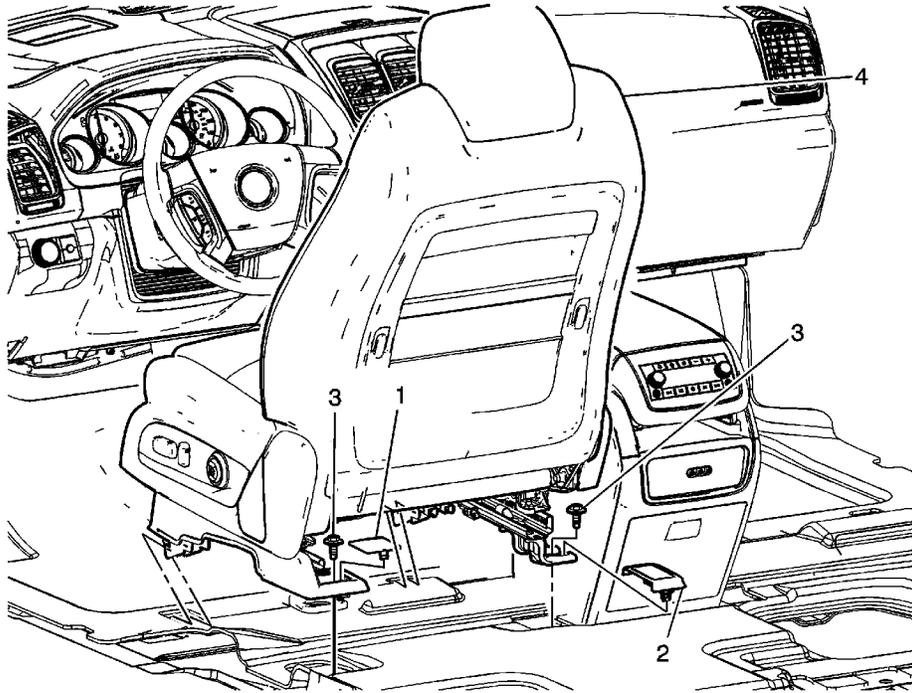

| Callout | Component Name |
|---|---|
| <p>Preliminary Procedure</p> <ol style="list-style-type: none"> Remove the front seat belt anchor finish cover. Remove the front seat belt anchor plate bolt. Refer to Seat Belt Retractor Pretensioner Replacement - Front. | |
| 1 | <p>Front Seat Adjuster Bolt Finish Cover</p> <p>Tip Use a small flat-bladed tool to release the tab in the rear of the cover.</p> |
| 2 | <p>Front Seat Adjuster Bolt Finish Cover</p> <p>Tip Pull upward to release the retainer clip securing the cover to the seat adjuster.</p> |
| 3 | <p>Front Seat Assembly Bolt (Qty: 2)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 45 N·m (33 lb ft)</p> |


Front Seat Assembly

Procedure

4

1. Disable the SIR. Refer to [SIR Disabling and Enabling](#).
2. Lift the seat upward at the rear of the seat.
3. Disconnect the electrical connectors.
4. Slide the seat rearward to disengage the adjuster hooks holding the seat to the floor pan.


Front Seat Front Finish Panel Replacement

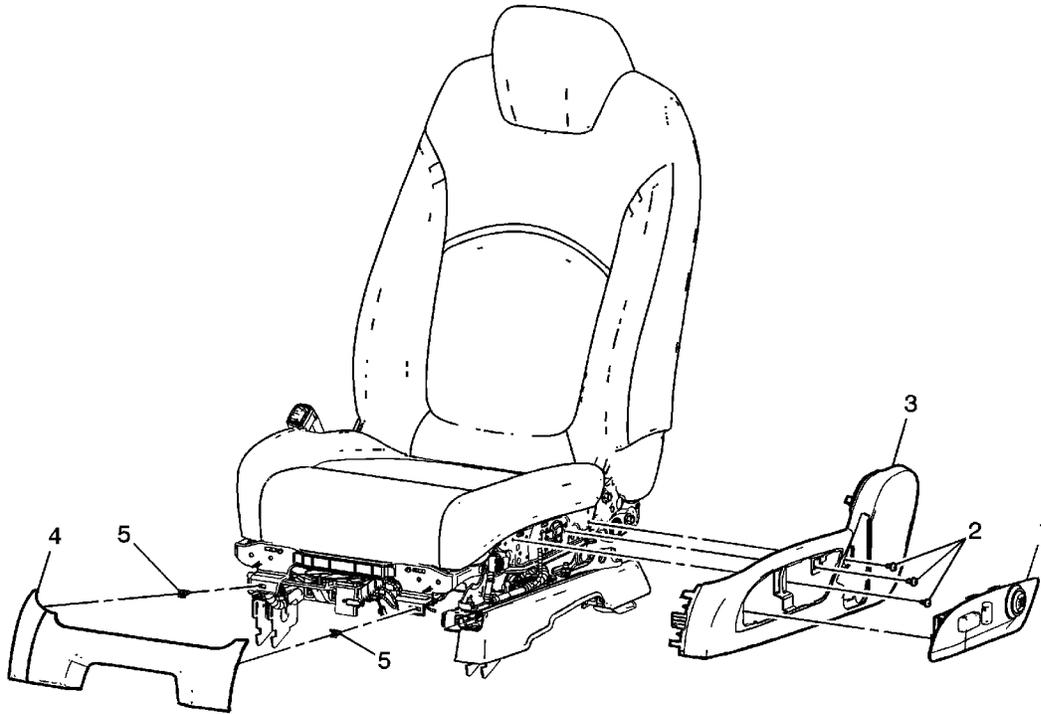

| Callout | Component Name |
|---------|--|
| 1 | Front Seat Adjuster Switch Mounting Plate Procedure 1. Using a non-metallic flat-bladed tool, release the retainer tabs starting at the rear edge and working forward while pulling outward on the mounting plate. 2. Disconnect the electrical connectors from the switch assemblies. |
| 2 | Front Seat Outer Recliner Finish Cover Screw (Qty: 3) Caution: Refer to Fastener Caution in the Preface section. Tighten 4 N·m (35 lb ft) |
| 3 | Front Seat Outer Recliner Finish Cover Tip Release the snaps from the front seat adjuster shield and the inner recliner cover while pulling outward to remove. |
| 4 | Front Seat Adjuster Shield |


| | |
|---|---|
| 5 | Front Seat Adjuster Shield Retainer Clip (Qty: 4) |
|---|---|

Front Seat Cushion Front Finish Panel Bracket Replacement

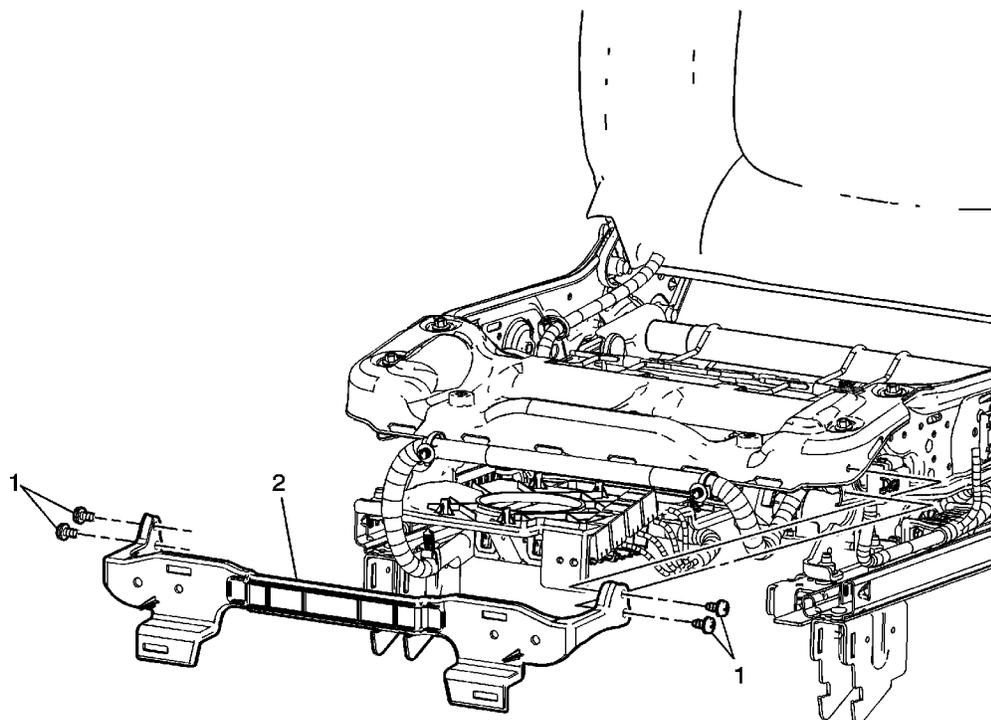


| Callout | Component Name |
|---|--|
| Preliminary Procedure | |
| 1. Remove the front seat. Refer to Bucket Seat Replacement . 2. Remove the front seat front finish cover. Refer to Front Seat Front Finish Panel Replacement . | |
| 1 | Front Seat Adjuster Finish Cover Bracket Screw (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 4 N·m (35 lb in) |
| 2 | Front Seat Adjuster Finish Cover Bracket |

Driver or Passenger Seat Adjuster Shield Replacement

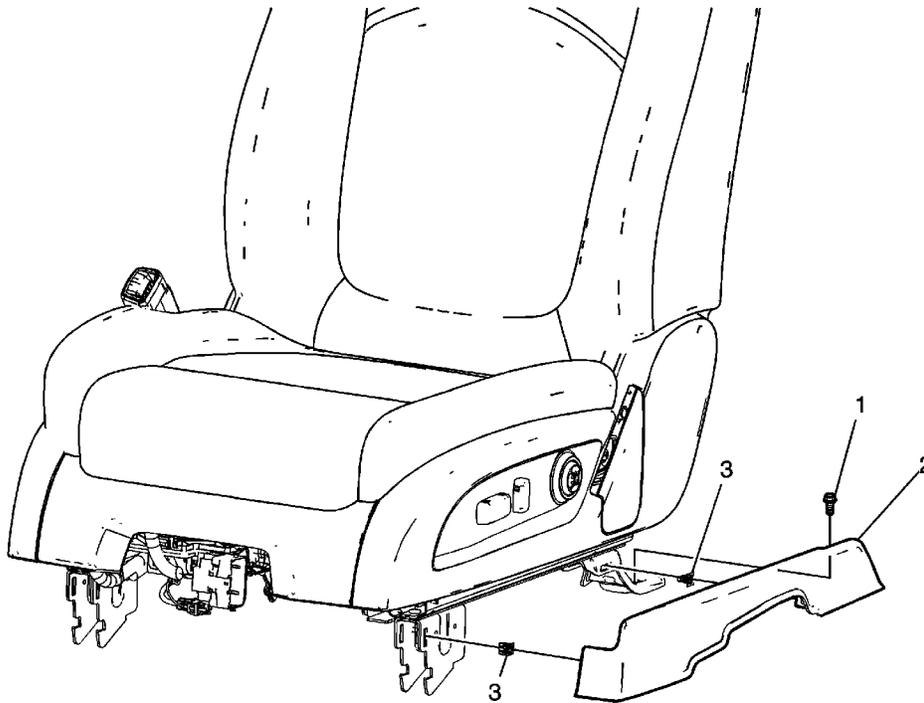


| Callout | Component Name |
|---------|---|
| 1 | Seat Adjuster Shield Screw Caution: Refer to Fastener Caution in the Preface section. Tighten 1.5 N·m (13 lb in) |
| 2 | Seat Adjuster Shield Assembly |
| 3 | Seat Adjuster Shield Retainer Clip (Qty: 2) |

Driver or Passenger Seat Adjuster Track Replacement

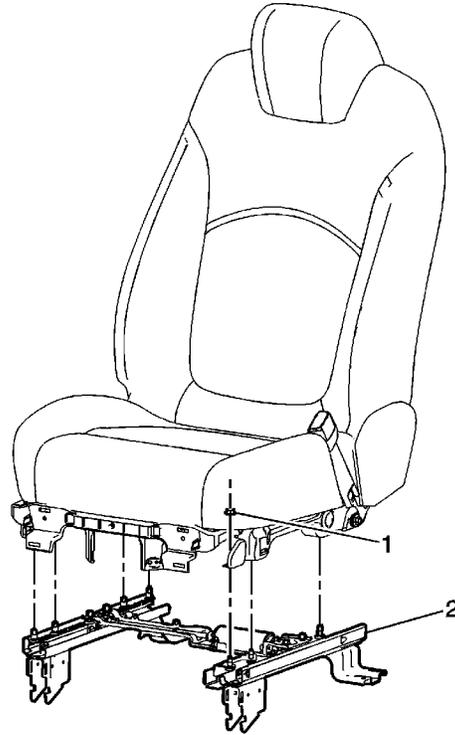


| Callout | Component Name |
|---|--|
| Preliminary Procedure | |
| Remove the front seat. Refer to Bucket Seat Replacement . | |
| 1 | Front Seat Adjuster Track Assembly Nut (Qty: 8) Caution: Refer to Fastener Caution in the Preface section. Tighten 9 N·m (80 lb in) |
| 2 | Front Seat Adjuster Track Assembly Procedure Disconnect the electrical connector. |

Driver or Passenger Seat Adjuster Handle Replacement

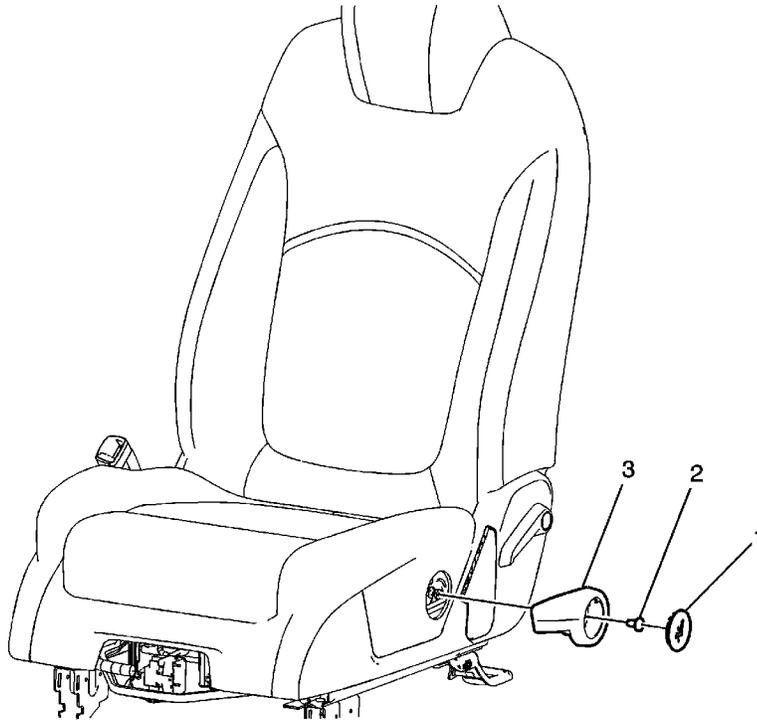


| Callout | Component Name |
|---------|---|
| 1 | Front Seat Adjuster Handle Finish Cover Procedure Insert a non-metallic flat-bladed tool at the top edge of the cover and carefully push downward and outward to remove the cover. |
| 2 | Front Seat Adjuster Handle Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 3 N·m (27 lb in) |
| 3 | Front Seat Adjuster Handle |

Driver or Passenger Seat Head Restraint Replacement

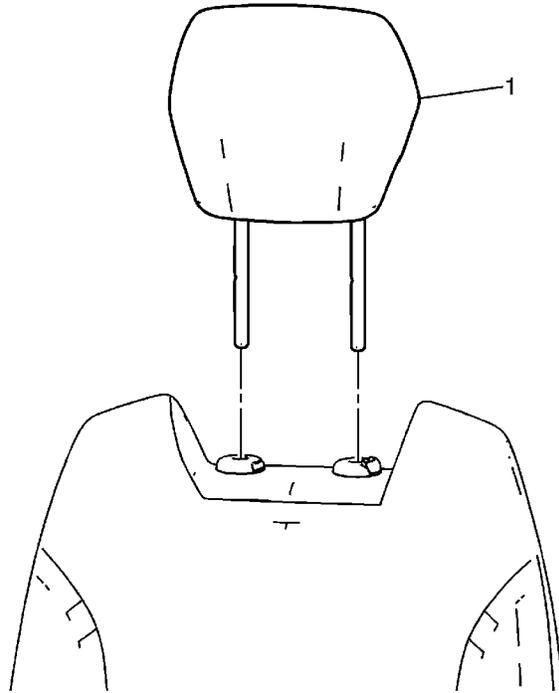

| Callout | Component Name |
|---------|---|
| 1 | <p data-bbox="267 1243 755 1276">Front Seat Head Restraint Assembly</p> <p data-bbox="267 1312 451 1346">Procedure</p> <ol data-bbox="300 1386 1396 1512" style="list-style-type: none"><li data-bbox="300 1386 1396 1449">1. Push and hold the button on the left head restraint guide in to adjust the head restraint to the highest position.<li data-bbox="300 1449 1396 1512">2. Push the button on the right head restraint guide in while pulling upward to finish releasing the head restraint from the seat. |

Front Seat Head Restraint Guide Replacement

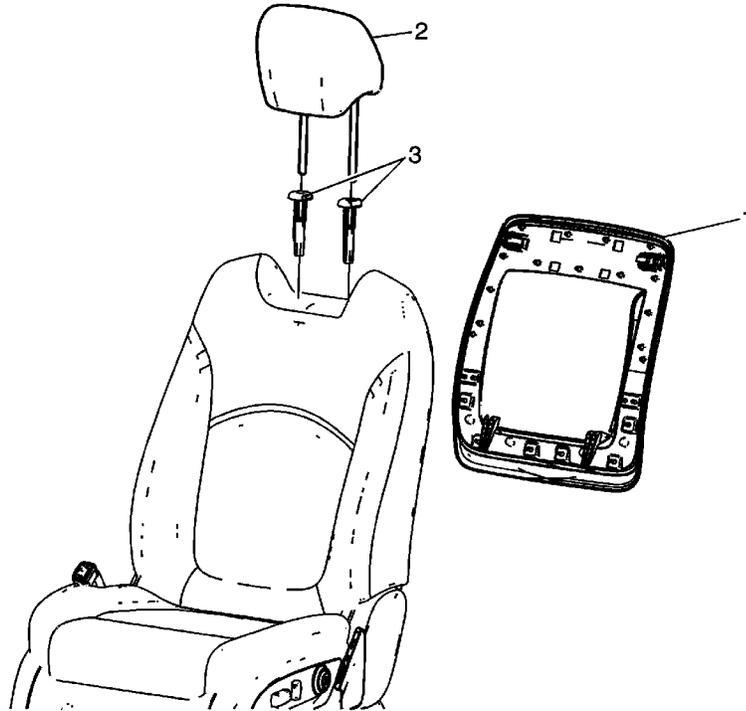


| Callout | Component Name |
|---------|---|
| 1 | <p>Front Seat Back Cushion Rear Finish Panel</p> <p>Procedure</p> <ol style="list-style-type: none"> Using a flat bladed tool, from the side, push inward on one of the top retainers while pulling rearward at the top of the panel. Release the clip on the opposite side. Lift the panel upward to remove from the seat. |
| 2 | <p>Front Seat Head Restraint Assembly</p> <p>Procedure</p> <ol style="list-style-type: none"> Push and hold the button on the left head restraint guide in to adjust the head restraint to the highest position. Push the button on the right head restraint guide in while pulling upward to finish releasing the head restraint from the seat. |
| 3 | <p>Front Seat Head Restraint Guide (Qty: 2)</p> <p>Tip</p> |

© 2010 General Motors Corporation. All rights reserved.


Use a rubber mallet or equivalent to tap upward on the bottom of the head restraint guide to remove from the seat back frame.

Driver or Passenger Seat Cushion Frame Replacement

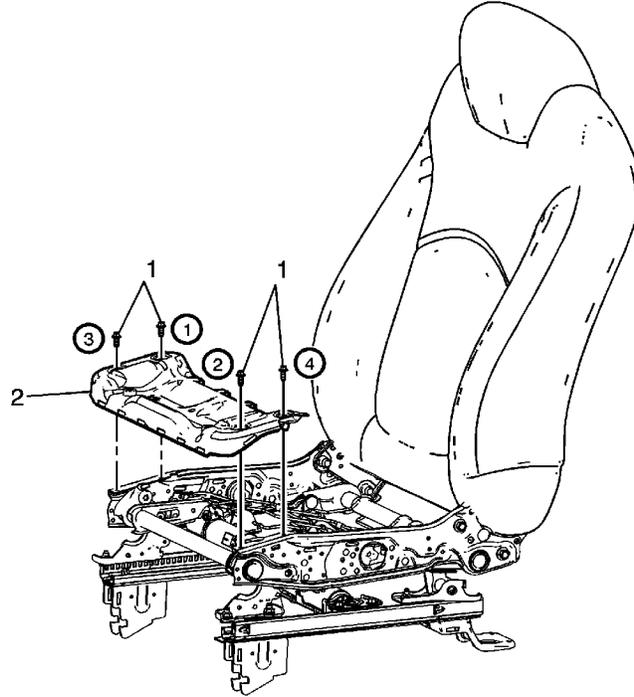

| Callout | Component Name |
|--|---|
| Preliminary Procedure | |
| Remove the front seat cushion cover and pad. Refer to Front Seat Cushion Cover and Pad Replacement . | |
| 1 | Front Seat Cushion Frame Bolt (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 8 N·m (71 lb in) |
| 2 | Front Seat Cushion Frame Procedure Disengage the springs from the seat cushion frame. |


Front Seat Cushion Cover and Pad Replacement

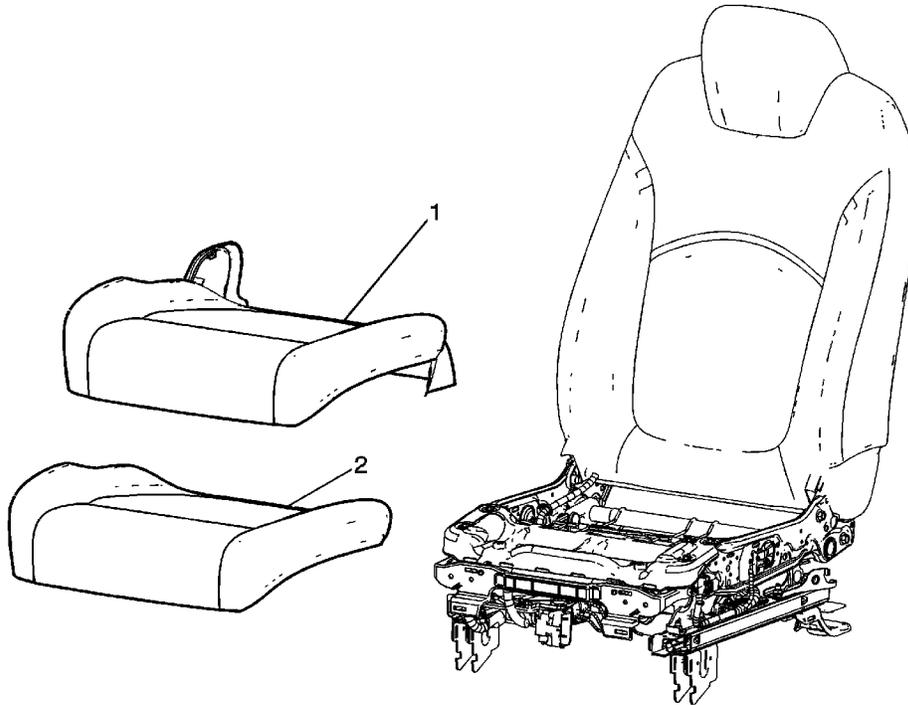

| Callout | Component Name |
|--|--|
| <p>Warning: Replace the passenger presence system as a complete assembly to prevent possible injury to the occupant. All the components in the service kit are assembled and calibrated as a unit. Using only some of the components in the service kit will cause the passenger presence system to operate improperly.</p> | |
| <p>Preliminary Procedure</p> <ol style="list-style-type: none"> 1. Remove the front seat. Refer to Bucket Seat Replacement. 2. Remove the front seat front finish cover. Refer to Front Seat Front Finish Panel Replacement. 3. Remove the front seat adjuster front shield. | |
| <p>1</p> | <p>Front Seat Cushion Cover</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Disengage the j-channel retainers from all four sides of the seat cushion frame. 2. Disconnect the electrical connector, if equipped. 3. Remove the seat cushion cover and pad from the seat cushion frame as an assembly. <p>© 2010 General Motors Corporation. All rights reserved.</p> |


| | |
|---|--|
| | 4. Separate the seat cushion cover from the pad. |
| 2 | <p>Front Seat Cushion Pad</p> <p>Procedure</p> <ol style="list-style-type: none">1. If working on the passenger seat, the inflatable restraint passenger presence system is part of the seat cushion pad and replaced as an assembly.2. Re-zero the inflatable restraint passenger presence system whenever the seat cushion or any component of the passenger presence system is removed. Refer to Control Module References. <p>Tip</p> <p>Note the new harness routing runs along the same path, but instead of clipping the harness to the top of the flex mat wire, clip the harness to the bottom of the flex mat wire. This eliminates the opportunity for the occupant loading to pinch the harness between the foam and the flex mat wire.</p> |

Driver or Passenger Seat Back Cushion Pad Support Replacement

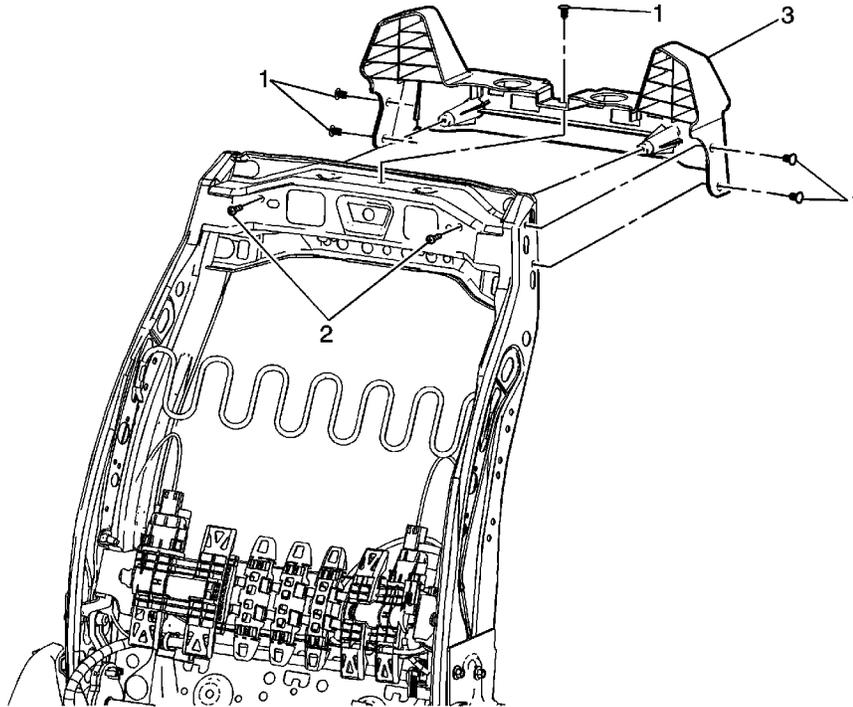

| Callout | Component Name |
|--|--|
| Preliminary Procedure Remove the front seat back cushion cover and pad. Refer to Front Seat Back Cushion Cover and Cushion Pad Replacement . | |
| 1 | Front Seat Back Cushion Support Assembly Retainer (Qty: 5) |
| 2 | Front Seat Back Cushion Support Assembly Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in) |
| 3 | Front Seat Back Cushion Support Assembly |

Driver or Passenger Seat Back Cushion Frame Replacement

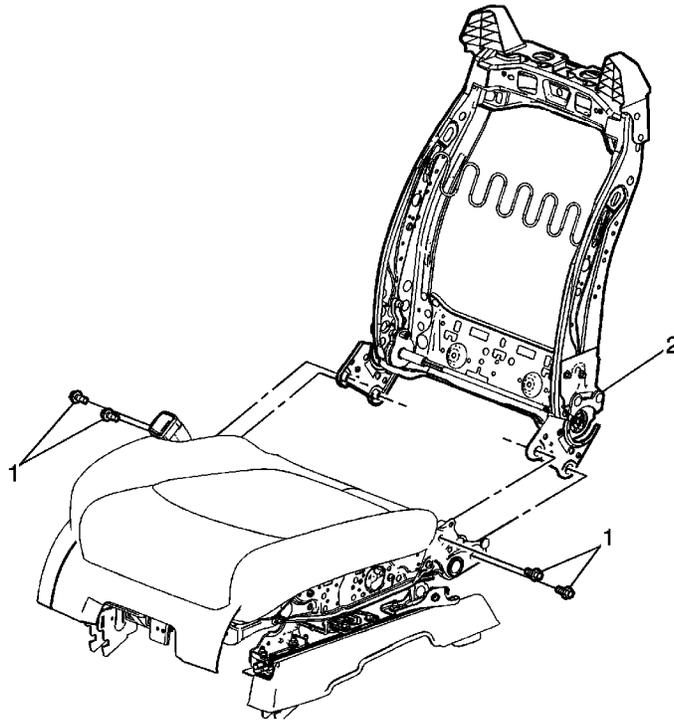

| Callout | Component Name |
|---|---|
| Preliminary Procedure | |
| <ol style="list-style-type: none"> 1. Remove the front seat. Refer to Bucket Seat Replacement. 2. Remove the front seat back recliner outer trim panel. Refer to Front Seat Back Recliner Outer Trim Panel Replacement. 3. Remove the front seat back recliner inner trim panel. Refer to Front Seat Back Recliner Inner Trim Panel Replacement. 4. Remove the front seat back cushion cover and pad. Refer to Front Seat Back Cushion Cover and Cushion Pad Replacement. 5. Remove the inflatable restraint side impact module. Refer to Driver or Passenger Seat Side Inflatable Restraint Module Replacement. 6. Remove the lumbar system. Refer to Front Seat Lumbar Support Replacement. | |
| 1 | Front Seat Back Cushion Frame Bolt (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 50 N·m (37 lb ft) |
| © 2010 General Motors Corporation. All rights reserved. | |


Front Seat Back Cushion Frame

2

Procedure


Transfer components as necessary.

Front Seat Back Recliner Outer Trim Panel Replacement

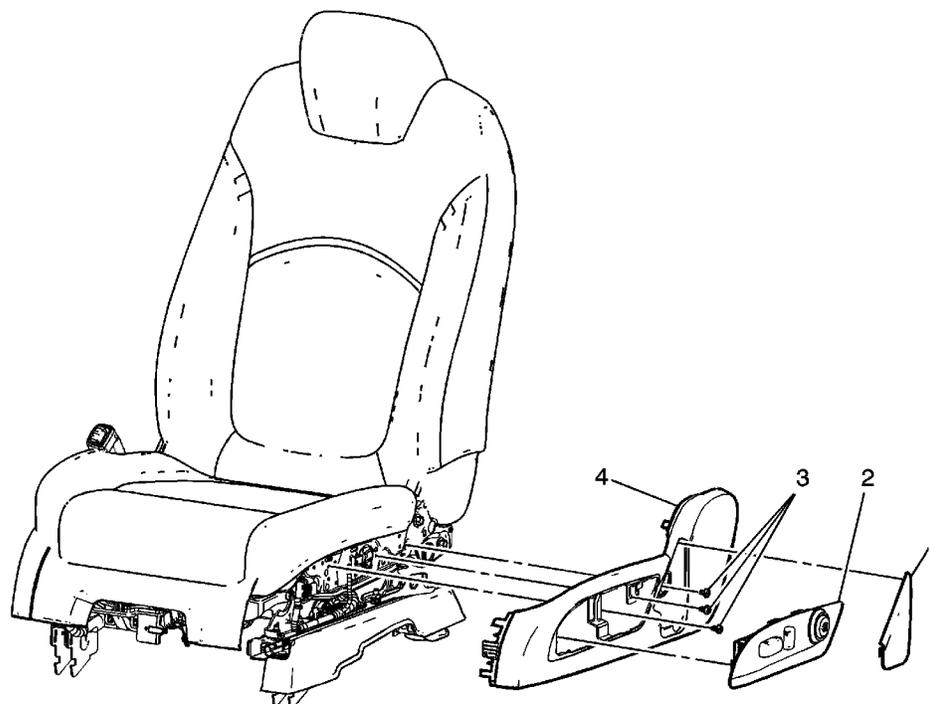


| Callout | Component Name |
|---------|--|
| 1 | Front Seat Belt Anchor Finish Cover |
| 2 | Front Seat Adjuster Switch Mounting Plate Procedure 1. Using a non-metallic flat-bladed tool, release the retainer tabs starting at the rear edge and working forward while pulling outward on the mounting plate. 2. Disconnect the electrical connectors from the switch assemblies. |
| 3 | Front Seat Outer Recliner Finish Cover Screw (Qty: 3) Caution: Refer to Fastener Caution in the Preface section. Tighten 3 N·m (27 lb in) |
| 4 | Front Seat Outer Recliner Finish Cover |

Front Seat Back Recliner Inner Trim Panel Replacement

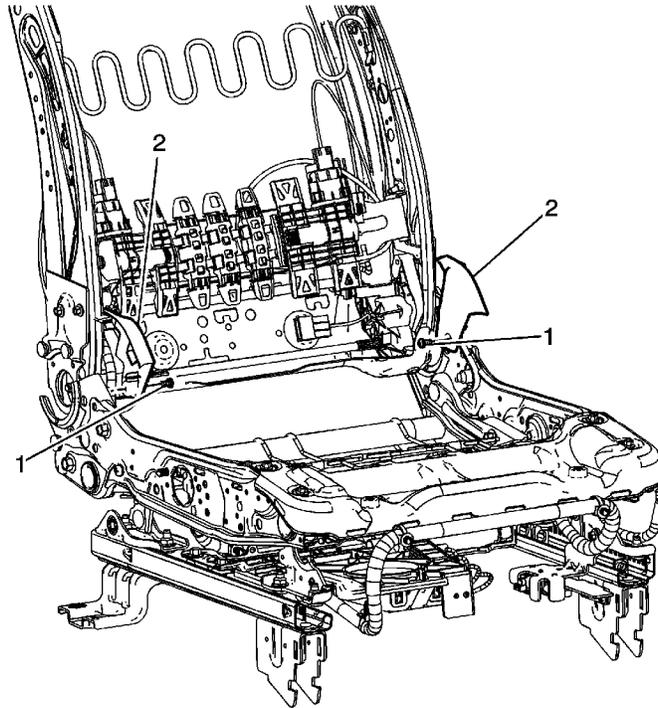


| Callout | Component Name |
|--|---|
| <p>Preliminary Procedure</p> <ol style="list-style-type: none"> 1. Remove the seat cushion cover and pad. Refer to Front Seat Cushion Cover and Pad Replacement. 2. Remove the seat back cushion cover and pad. Refer to Front Seat Back Cushion Cover and Cushion Pad Replacement. | |
| 1 | <p>Front Seat Recliner Inner Finish Cover Screw (Qty: 2)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 3 N·m (27 lb in)</p> |
| 2 | <p>Front Seat Recliner Inner Finish Cover (Qty: 2)</p> |

Driver or Passenger Seat Recliner Handle Replacement

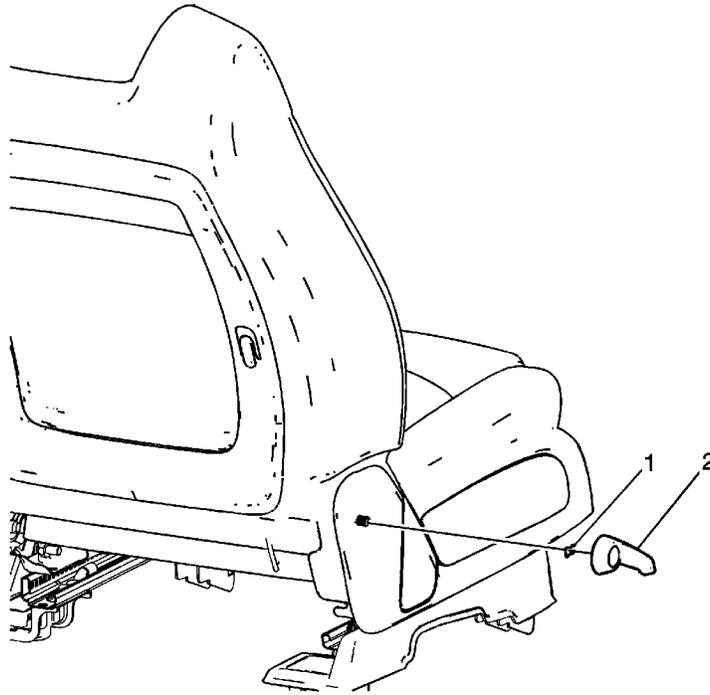


| Callout | Component Name |
|---------|---|
| 1 | Front Seat Recliner Handle Retainer Clip Tip Using a flat-bladed tool, push the retainer clip rearward and pull outward to release the handle. |
| 2 | Front Seat Recliner Handle |

Driver or Passenger Seat Back Cushion Finish Panel Replacement

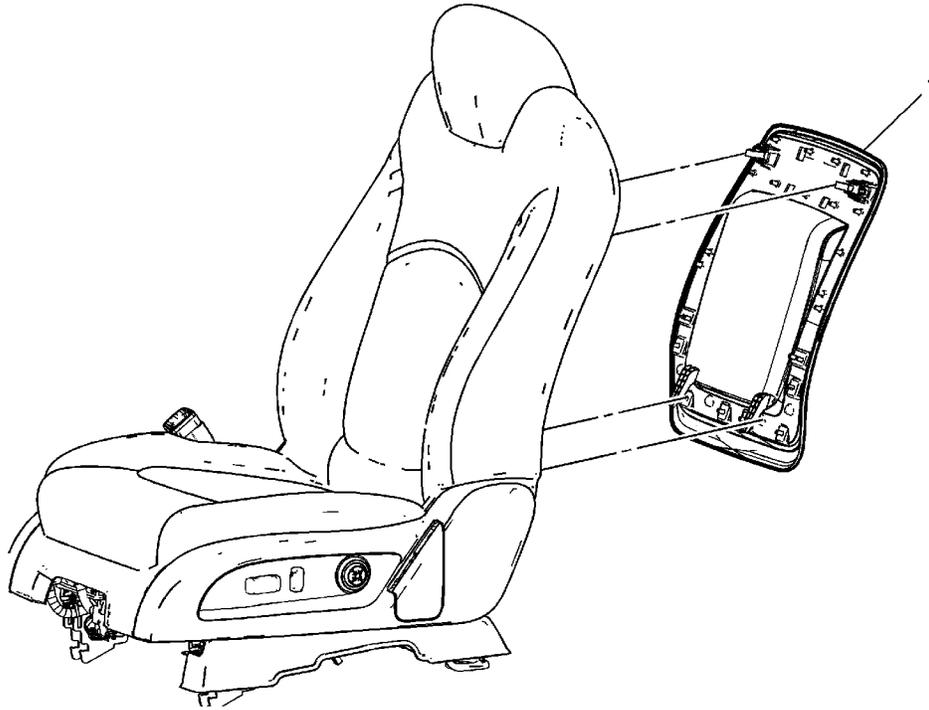

| Callout | Component Name |
|---------|--|
| 1 | <p>Front Seat Back Cushion Rear Finish Panel</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Using a flat bladed tool, from the side, push inward on one of the top retainers while pulling rearward at the top of the panel. 2. Release the clip on the opposite side. 3. Lift the panel upward to remove from the seat. |

Front Seat Back Cushion Cover and Cushion Pad Replacement

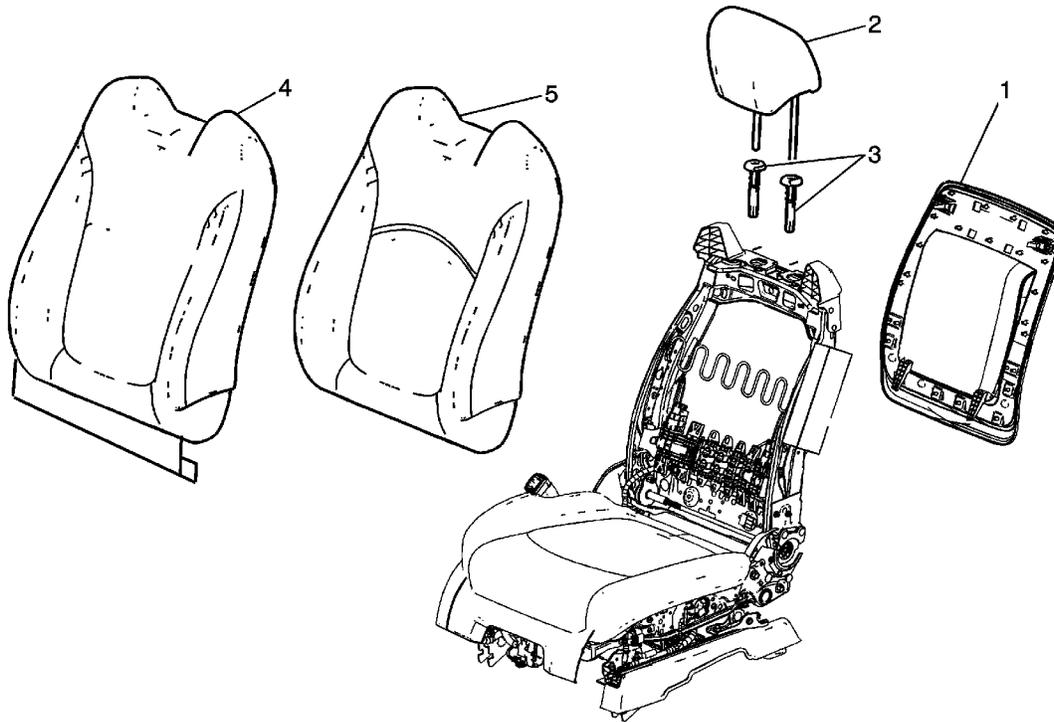


| Callout | Component Name |
|---|--|
| Preliminary Procedure Remove the front seat. Refer to Bucket Seat Replacement . | |
| 1 | Front Seat Back Cushion Rear Finish Panel Procedure <ol style="list-style-type: none"> Using a flat bladed tool, from the side, push inward on the top two retainers while pulling rearward at the top of the panel. Lift the panel upward to remove from the seat. |
| 2 | Front Seat Head Restraint Assembly Procedure <ol style="list-style-type: none"> Push the button on the outer head restraint guide in to adjust the head restraint to the highest position. Push the button on the inner head restraint guide in while pulling upward to finish releasing the head restraint from the seat. |

© 2010 General Motors Corporation. All rights reserved.


| | |
|---|---|
| 3 | Front Seat Head Restraint Guide (Qty: 2) Tip Use a rubber mallet or equivalent to tap upward on the bottom of the head restraint guide to remove from the seat back frame. |
| 4 | Front Seat Back Cushion Cover Procedure <ol style="list-style-type: none">1. Disengage the j-channel retainers from the seat back cushion frame.2. Disconnect the electrical connectors that attach to the seat back cushion, if equipped.3. Loosen the inflatable restraint side impact module nuts.4. Slide the inflatable restraint side impact module out of the sleeve. Refer to Driver and Passenger Seat Side Inflatable Restraint Module Replacement .5. Remove the seat back cushion cover and pad as an assembly.6. Remove the hog rings in order to pull the cover away from the pad. |
| 5 | Front Seat Back Cushion Pad |

Front Seat Lumbar Control Replacement

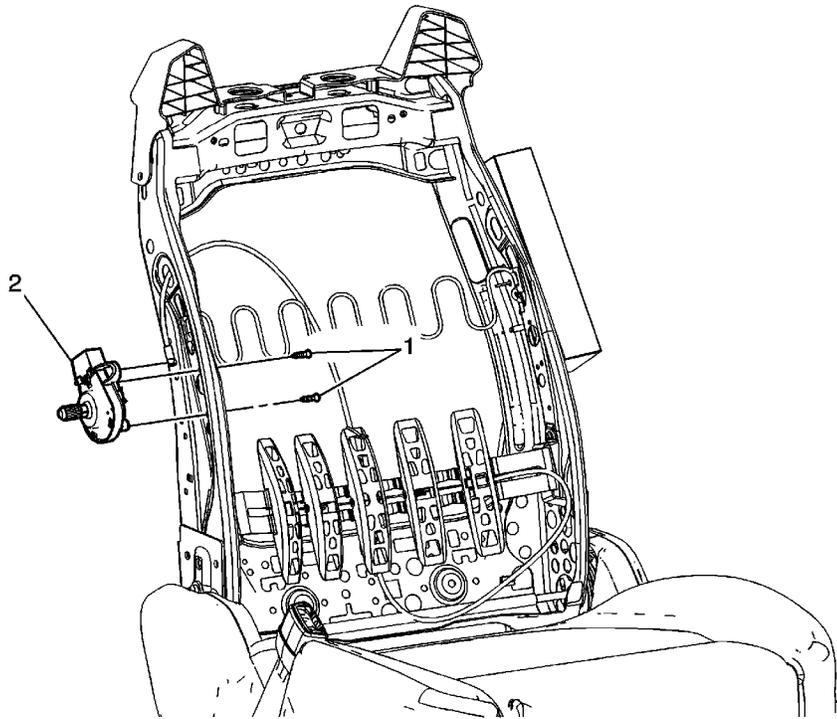


| Callout | Component Name |
|--|---|
| <p>Preliminary Procedure</p> | |
| <p>Remove the seat back cushion cover and pad. Refer to Front Seat Back Cushion Cover and Cushion Pad Replacement.</p> | |
| <p>1</p> | <p>Front Seat Lumbar Control Screw (Qty: 2)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 3 N·m (27 lb in)</p> |
| <p>2</p> | <p>Front Seat Lumbar Control</p> <p>Procedure</p> <p>Disconnect the lumbar cable from the control assembly for removal.</p> |

Front Seat Lumbar Support Replacement

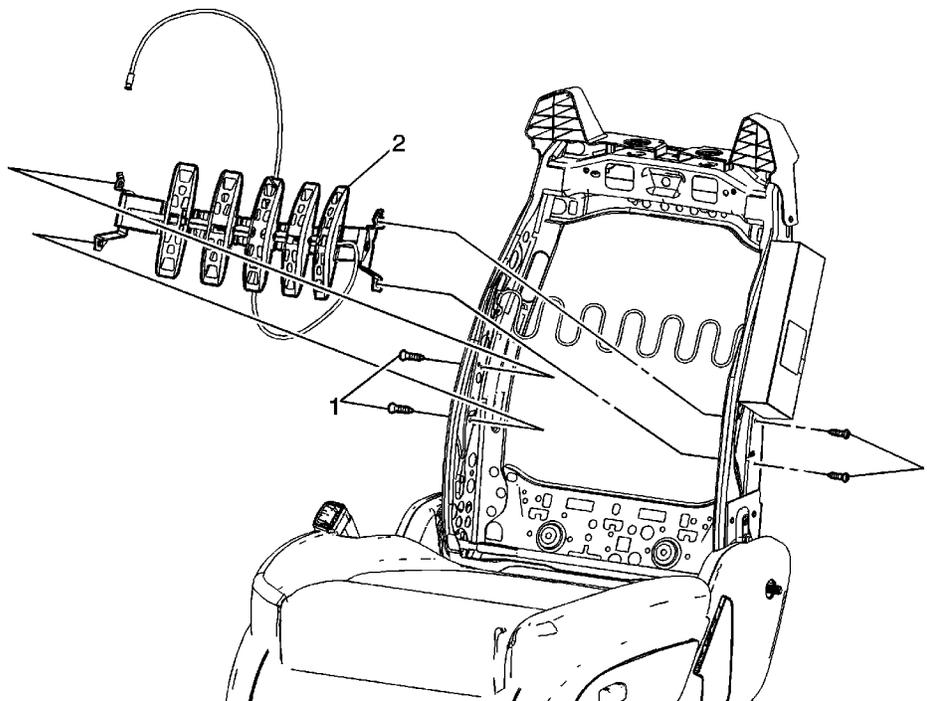


| Callout | Component Name |
|--|--|
| <p>Preliminary Procedure</p> <ol style="list-style-type: none"> 1. Remove the seat back cushion cover and pad. Refer to Front Seat Back Cushion Cover and Cushion Pad Replacement. 2. Remove the front seat lumbar control. Refer to Front Seat Lumbar Control Replacement. | |
| 1 | <p>Front Seat Lumbar Assembly Bolt (Qty: 4)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 9 N·m (80 lb in)</p> |
| 2 | <p>Front Seat Lumbar Assembly</p> |

Driver Seat Lumbar Support Actuator Lever Replacement

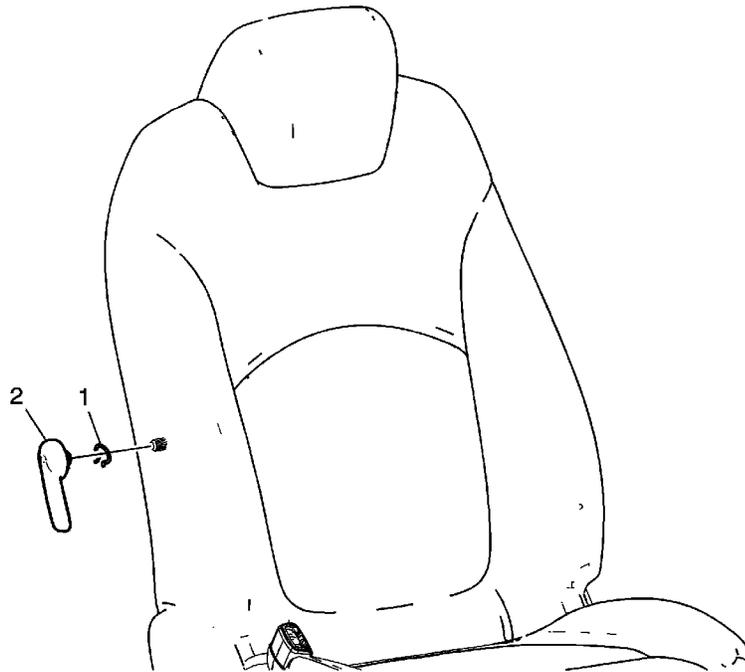


| Callout | Component Name |
|---------|--|
| 1 | Front Seat Lumbar Support Actuator Lever Retainer Clip Procedure Using a flat-bladed tool, push the retainer clip rearward and pull outward to release the lever. |
| 2 | Front Seat Lumbar Support Actuator Lever |

Rear Seat Replacement (With 40 Percent Seat)

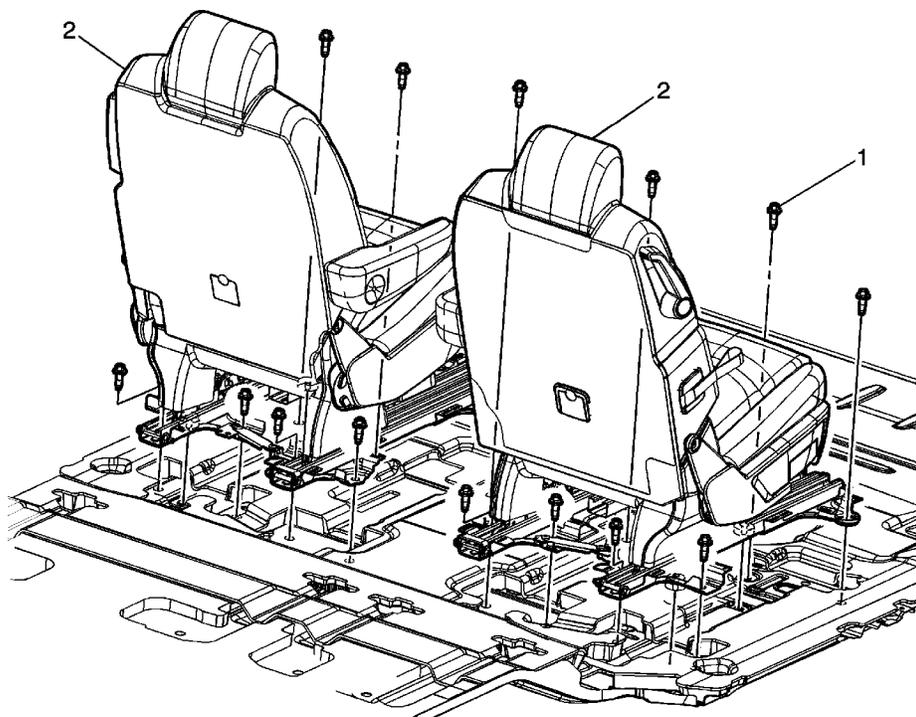


| Callout | Component Name |
|--|---|
| Preliminary Procedure | |
| Remove the rear seat track covers. Refer to Rear Seat Track Front Inboard Cover, Front Outboard Cover, Rear Inboard Cover, and Rear Outboard Cover Replacement . | |
| 1 | Rear Seat No. 1 Assembly Bolt (Qty: 14) Caution: Refer to Fastener Caution in the Preface section. Tighten 55 N·m (41 lb ft) |
| 2 | Rear Seat Assembly (Qty: 2) |

Rear Seat Replacement (With 60 Percent Seat)

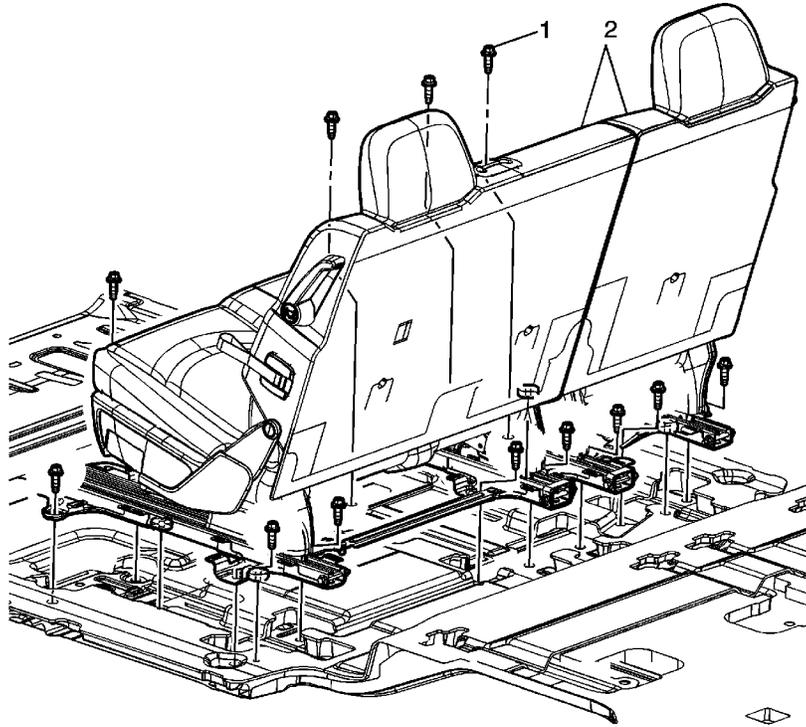


| Callout | Component Name |
|--|---|
| Preliminary Procedure | |
| Remove the rear seat track covers. Refer to Rear Seat Track Front Inboard Cover, Front Outboard Cover, Rear Inboard Cover, and Rear Outboard Cover Replacement . | |
| 1 | Rear Seat No. 1 Assembly Bolt (Qty: 12) Caution: Refer to Fastener Caution in the Preface section. Tighten 55 N·m (41 lb ft) |
| 2 | Rear Seat Assembly (Qty: 2) |

Rear Seat Armrest Replacement (With 40 Percent Seat)

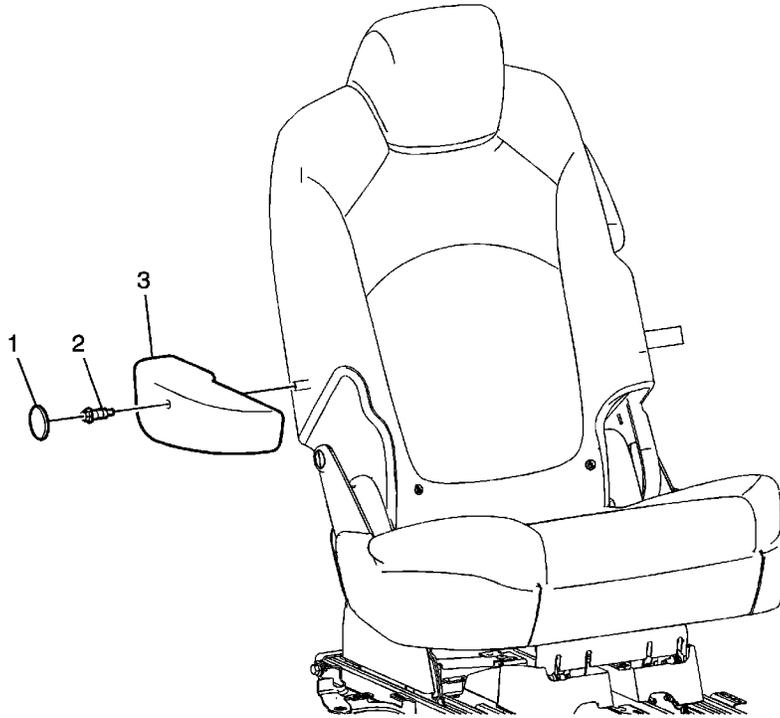


| Callout | Component Name |
|---------|--|
| 1 | Rear Seat Armrest Stop Cap |
| 2 | Rear Seat Bolt Caution: Refer to Fastener Caution in the Preface section. Tighten 28 N·m (21 lb ft) |
| 3 | Rear Seat Armrest Assembly |

Rear Seat Armrest Replacement (With 60 Percent Seat)

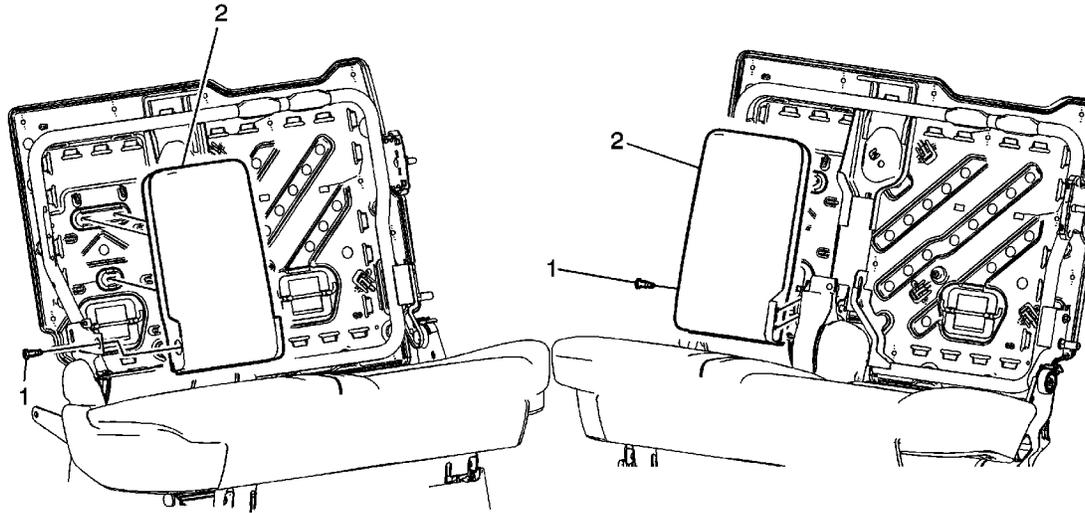


| Callout | Component Name |
|--|--|
| Preliminary Procedures | |
| Remove the rear seat back cushion outer cover. Refer to Rear Seat Back Cushion Cover Replacement . | |
| 1 | Rear Seat Armrest Bolt Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in) |
| 2 | Rear Seat Armrest |

Rear Seat Pull Strap Replacement

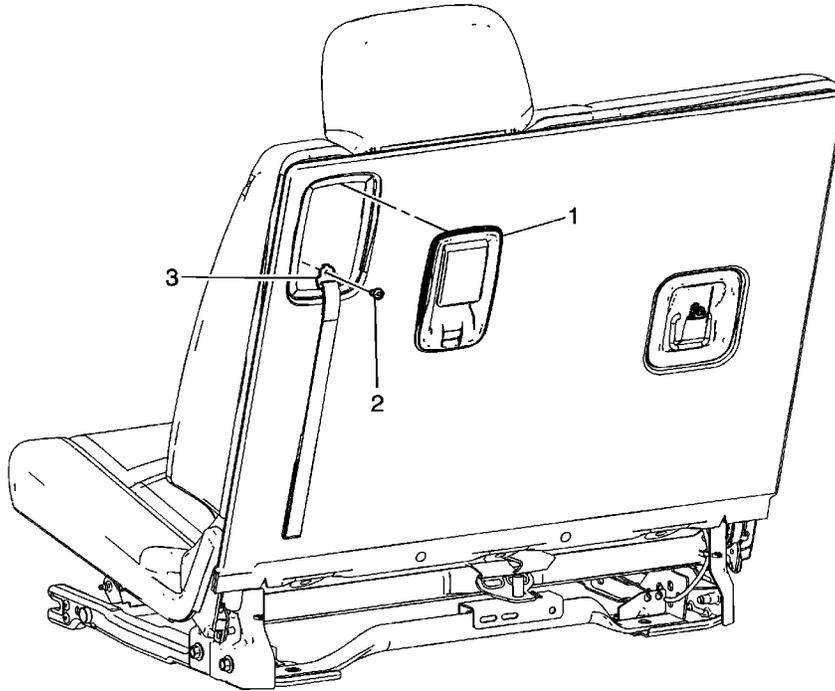


| Callout | Component Name |
|---------|--|
| 1 | Rear Seat No. 2 Back Cushion Latch Release Handle Bezel Procedure Use a flat-bladed trim tool to release the bezel from the rear seat back and feed the pull strap through the bezel to remove. |
| 2 | Rear Seat Pull Strap Bolt Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in) |
| 3 | Rear Seat Pull Strap |

Rear Seat Latch Release Handle Replacement (With 40 Percent Seat)

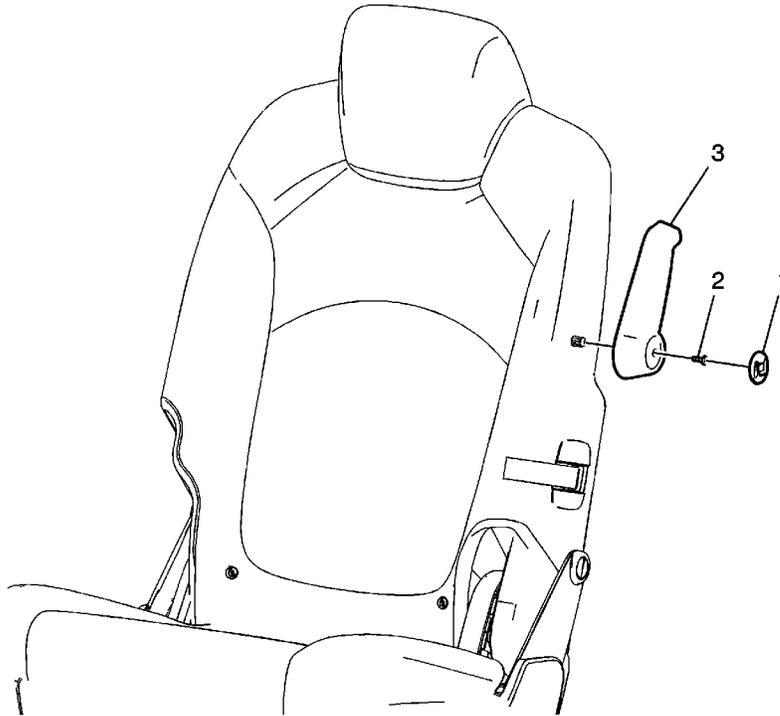


| Callout | Component Name |
|---------|--|
| 1 | Rear Seat Recliner Handle Bolt Cap |
| 2 | Rear Seat Screw Caution: Refer to Fastener Caution in the Preface section. Tighten 4 N·m (35 lb in) |
| 3 | Rear Seat Latch Release Handle |

Rear Seat Latch Release Handle Replacement (With 60 Percent Seat)

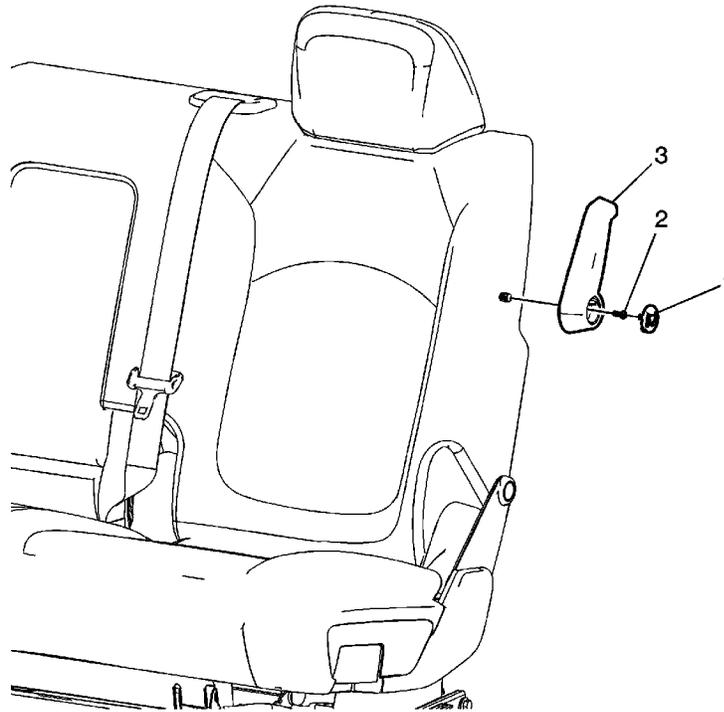


| Callout | Component Name |
|---------|--|
| 1 | Rear Seat Recliner Handle Bolt Cap |
| 2 | Rear Seat Screw Caution: Refer to Fastener Caution in the Preface section. Tighten 4 N·m (35 lb in) |
| 3 | Rear Seat Latch Release Handle |

Rear Seat Head Restraint Replacement (with 40 Percent Seat)

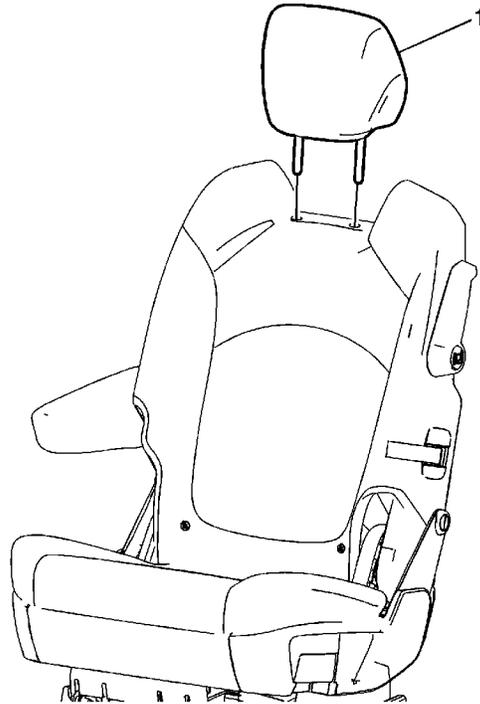


| Callout | Component Name |
|---------|---|
| 1 | <p>Rear Seat Head Restraint</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Push down on the seat back cover at the base of the head restraint to access the clips on the head restraint guides. 2. Remove the head restraint guide clips to release the head restraint. 3. Slide the head restraint up to remove. |

Rear Seat Head Restraint Replacement (with 60 Percent Seat)

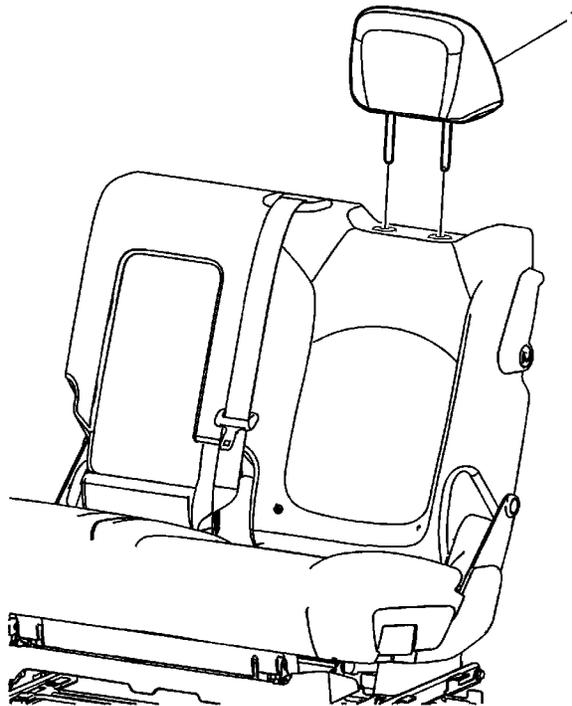


| Callout | Component Name |
|---------|---|
| 1 | <p>Rear Seat Head Restraint</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Push down on the seat back cover at the base of the head restraint to access the clips on the head restraint guides. 2. Remove the head restraint guide clips to release the head restraint. 3. Slide the head restraint up to remove. |

Rear Seat Head Restraint Guide Replacement (with 40 Percent Seat)

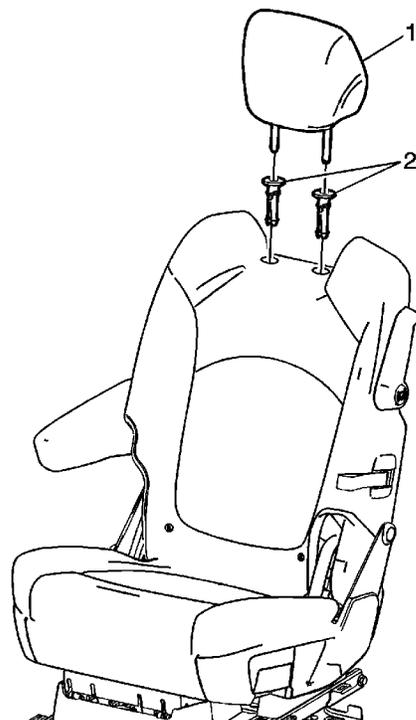


| Callout | Component Name |
|---------|---|
| 1 | <p>Rear Seat Head Restraint</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Push down on the seat back cover at the base of the head restraint to access the clips on the head restraint guides. 2. Remove the head restraint guide clips to release the head restraint. 3. Slide the head restraint up to remove. |
| 2 | <p>Rear Seat Head Restraint Guide (Qty: 2)</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Loosen the rear seat back cover and pad enough to gain access to the head restraint guides from the front of the seat back. 2. Squeeze together the bottom of the head restraint guide and push upward to remove. |

Rear Seat Head Restraint Guide Replacement (with 60 Percent Seat)

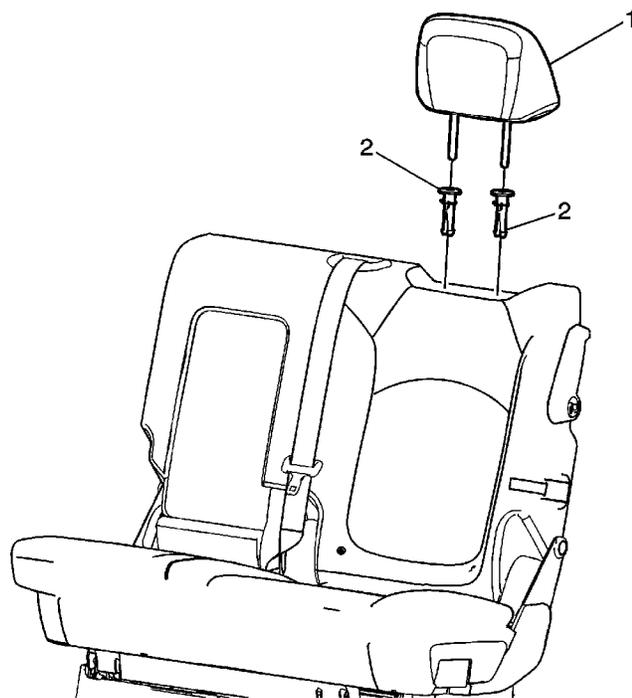


| Callout | Component Name |
|---------|---|
| 1 | <p>Rear Seat Head Restraint</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Push down on the seat back cover at the base of the head restraint to access the clips on the head restraint guides. 2. Remove the head restraint guide clips to release the head restraint. 3. Slide the head restraint up to remove. |
| 2 | <p>Rear Seat Head Restraint Guide (Qty: 2)</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Loosen the rear seat back cover and pad enough to gain access to the head restraint guides from the front of the seat back. 2. Squeeze together the bottom of the head restraint guide and push upward to remove. |

Rear Seat Latch Release Strap Bezel Replacement - Outer

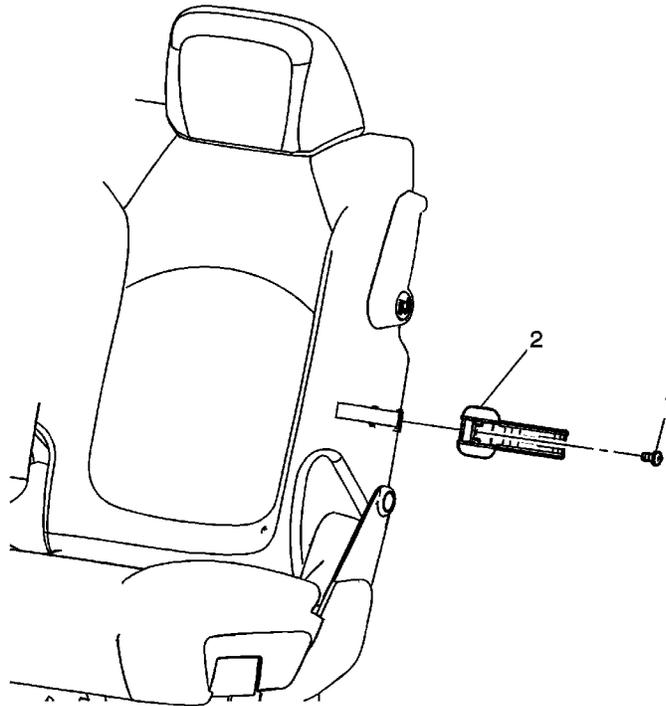


| Callout | Component Name |
|---------|---|
| 1 | Rear Seat Latch Release Strap Bezel Screw Caution: Refer to Fastener Caution in the Preface section. Tip Open the cover of the bezel to access the screws. Tighten 5 N·m (44 lb in) |
| 2 | Rear Seat Back Latch Release Strap Bezel Tip Use a flat-bladed tool to spread the inner retainer tangs outward to release the bezel from the seat. |

Rear Seat Latch Release Strap Bezel Replacement - Inner

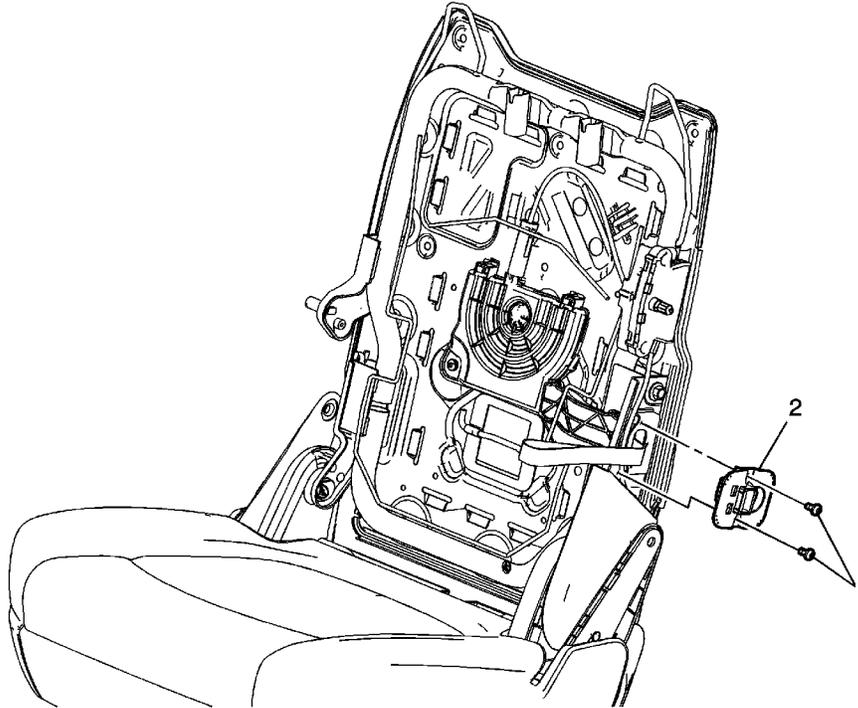

| Callout | Component Name |
|--|--|
| Preliminary Procedures | |
| 1. Remove the rear seat. Refer to Rear Seat Replacement . 2. Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement . | |
| 1 | Rear Seat Latch Release Handle Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 5 N·m (44 lb in) |
| 2 | Rear Seat Back Latch Release Strap Bezel |

Rear Seat Recliner Inner Finish Cover Replacement - Upper (with 40 Percent Seat)

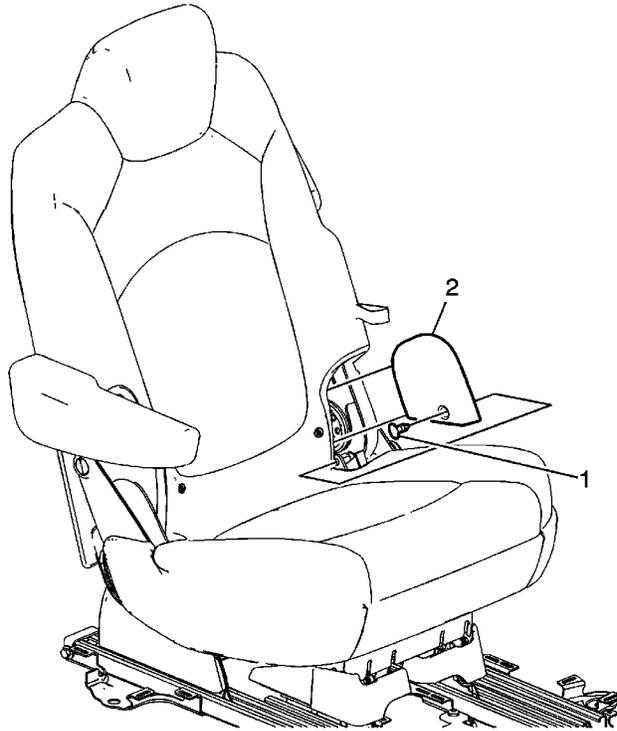


| Callout | Component Name |
|---------|--|
| 1 | Rear Seat Recliner Inner Finish Cover Push-in Retainer |
| 2 | Rear Seat Recliner Inner Finish Cover |

Rear Seat Recliner Outer Finish Cover Replacement - Inboard (with 40 Percent Seat)




| Callout | Component Name |
|---------|--|
| 1 | Rear Seat Recliner Outer Finish Cover Procedure 1. Move the seat forward to the Smart Slide® E-Z entry position. 2. Remove the rear seat recliner outer finish cover by pulling outward to disengage the retainers. 3. When reinstalling the cover, ensure that the inboard recliner cable is above the push-in retainer. |
| 2 | Push-in Retainer |
| 3 | Retainer Clip (Qty: 2) |

Rear Seat Recliner Outer Finish Cover Replacement - Outboard (with 40 Percent Seat)

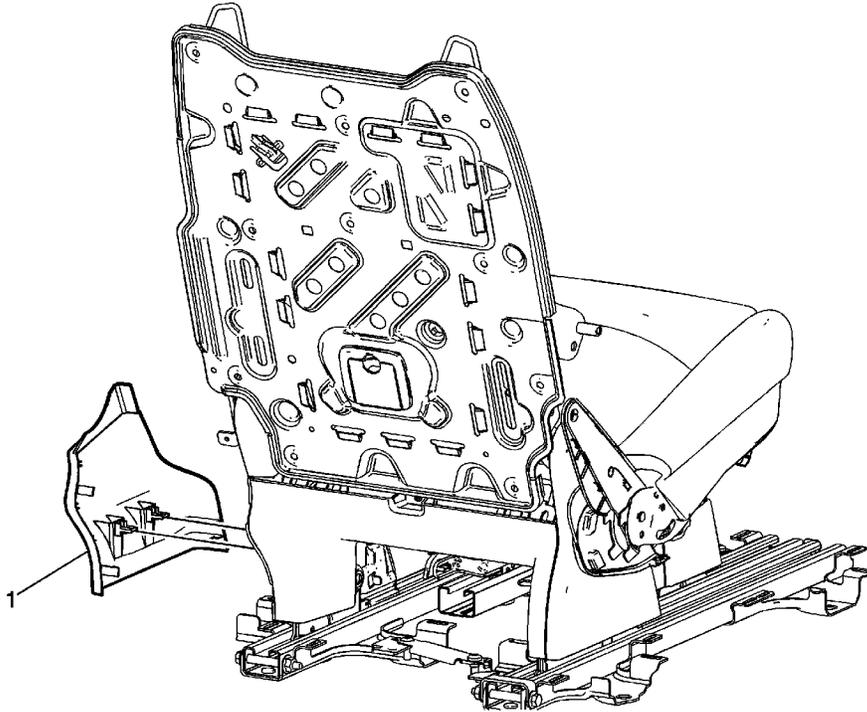


| Callout | Component Name |
|---------|---|
| 1 | Rear Seat Recliner Outer Finish Cover Procedure 1. Move the seat forward to the Smart Slide® E-Z entry position. 2. Remove the rear seat recliner outer finish cover by pulling outward to disengage the retainers. |

Rear Seat Recliner Outer Finish Cover Replacement - Outboard (with 60 Percent Seat)

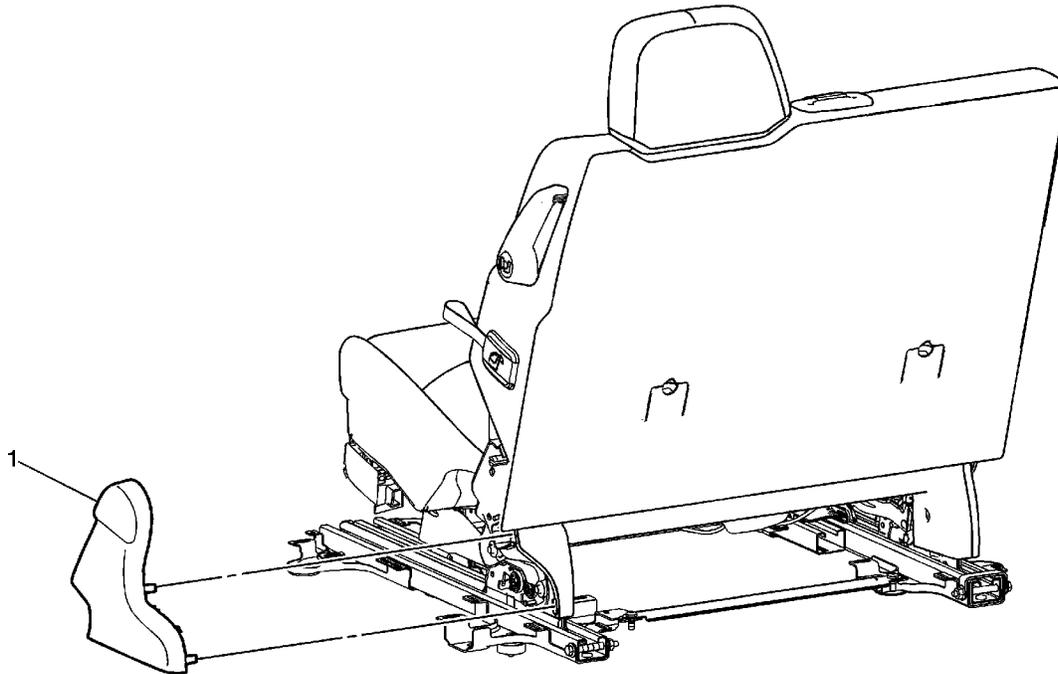


| Callout | Component Name |
|---------|--|
| 1 | <p>Rear Seat Recliner Outer Finish Cover</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Move the seat forward to the Smart Slide® E-Z entry position. 2. To remove the finish cover, release the two tabs that attach to the rear filler panel first. Then pull outward to release the push in retainer and two retainer clips. |

Rear Seat Latch Cable Replacement - Inboard

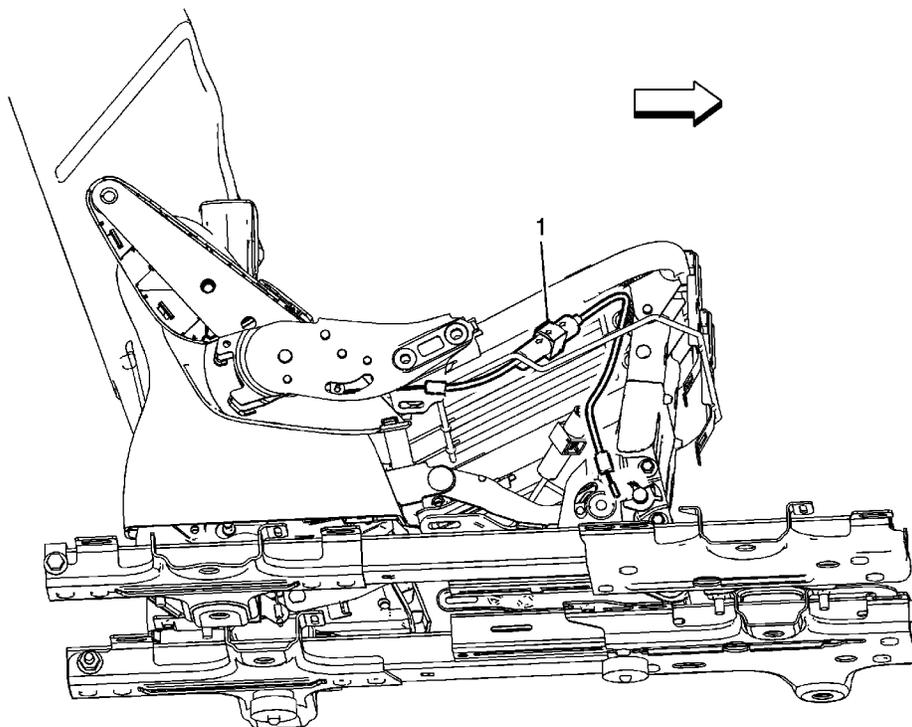


| Callout | Component Name |
|--|---|
| <p>Preliminary Procedures</p> <p>Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement .</p> | |
| <p>1</p> | <p>Rear Seat Back Cushion Panel</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Note the routing for installation, the inboard cable should be routed over the outboard cable. 2. Cut off the rosebud retainer to remove and always install a new retainer for installation. 3. Disconnect the seat latch cable. |

Rear Seat Latch Cable Replacement - Outboard

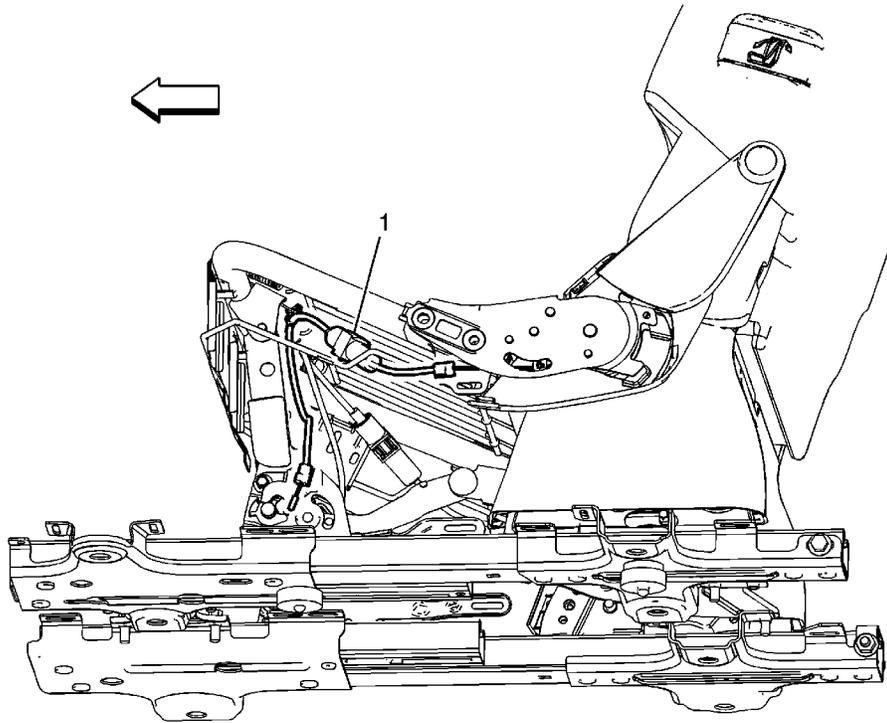


| Callout | Component Name |
|---|---|
| <p>Preliminary Procedures</p> <p>Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement.</p> | |
| <p>1</p> | <p>Rear Seat Back Cushion Panel</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Note the routing for installation, the inboard cable should be routed over the outboard cable. 2. Cut off the rosebud retainer to remove and always install a new retainer for installation. 3. Disconnect the seat latch cable. |

Rear Seat Cushion Trim Panel Assembly Replacement - Outboard (with 40 Percent Seat)

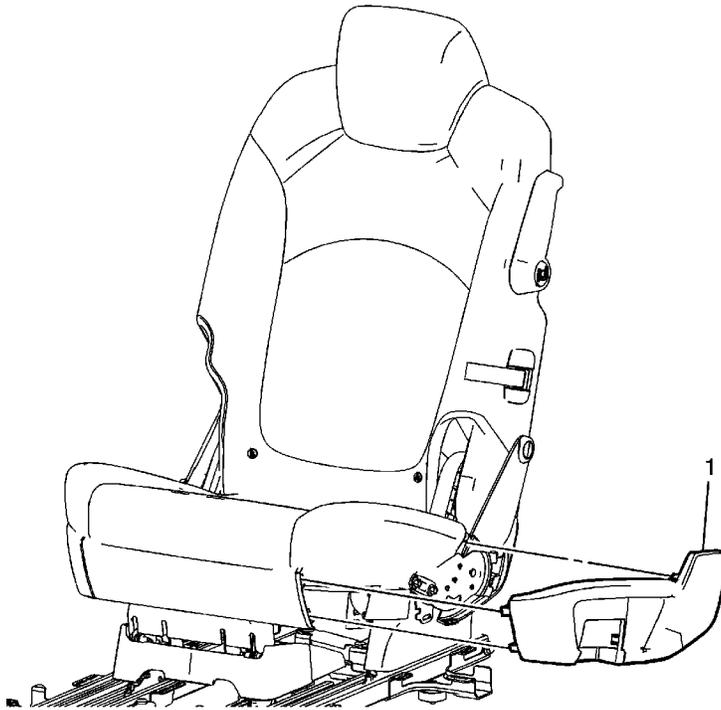


| Callout | Component Name |
|---------|---|
| 1 | Rear Seat Cushion Trim Panel Assembly Procedure Remove the trim panel by pulling the front edge outward and then sliding the trim panel rearward to release from the seat. |

Rear Seat Cushion Trim Panel Assembly Replacement - Outboard (with 60 Percent Seat)

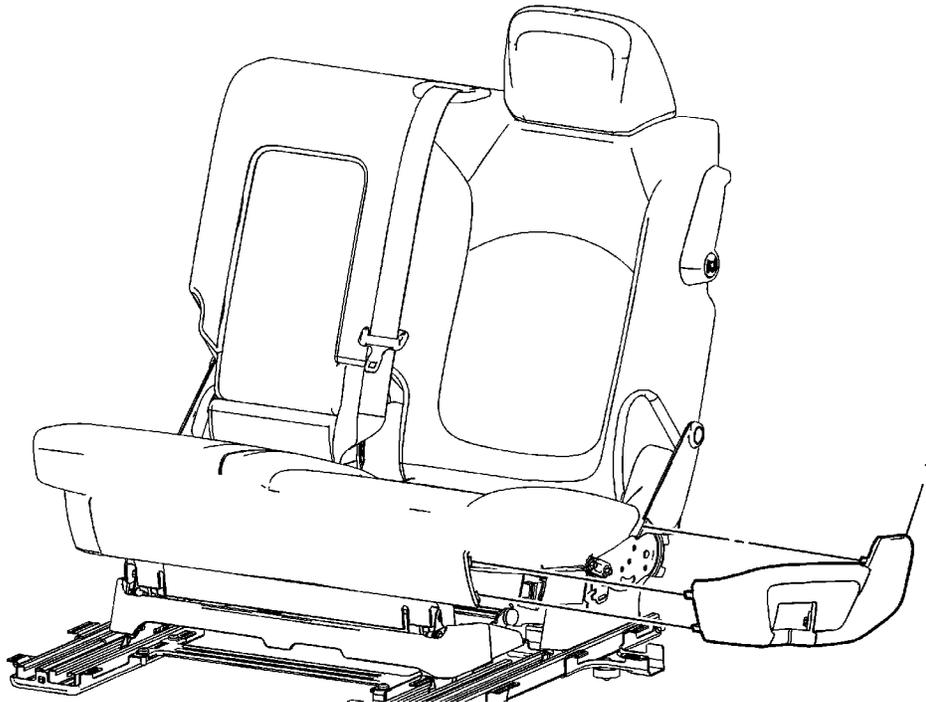


| Callout | Component Name |
|---------|---|
| 1 | Rear Seat Cushion Trim Panel Assembly Procedure Remove the trim panel by pulling the front edge outward and then sliding the trim panel rearward to release from the seat. |

Rear Seat Cushion Trim Panel Assembly Replacement - Inboard (with 40 Percent Seat)

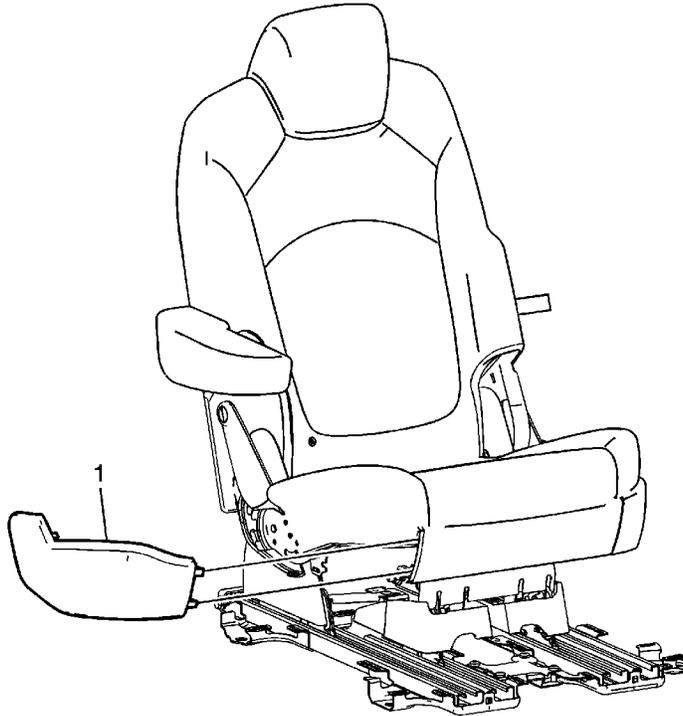

| Callout | Component Name |
|---------|---|
| 1 | Rear Seat Cushion Trim Panel Assembly Procedure Remove the trim panel by pulling the front edge outward and then sliding the trim panel rearward to release from the seat. |

Rear Seat Cushion Trim Panel Assembly Replacement - Inboard (with 60 Percent Seat)

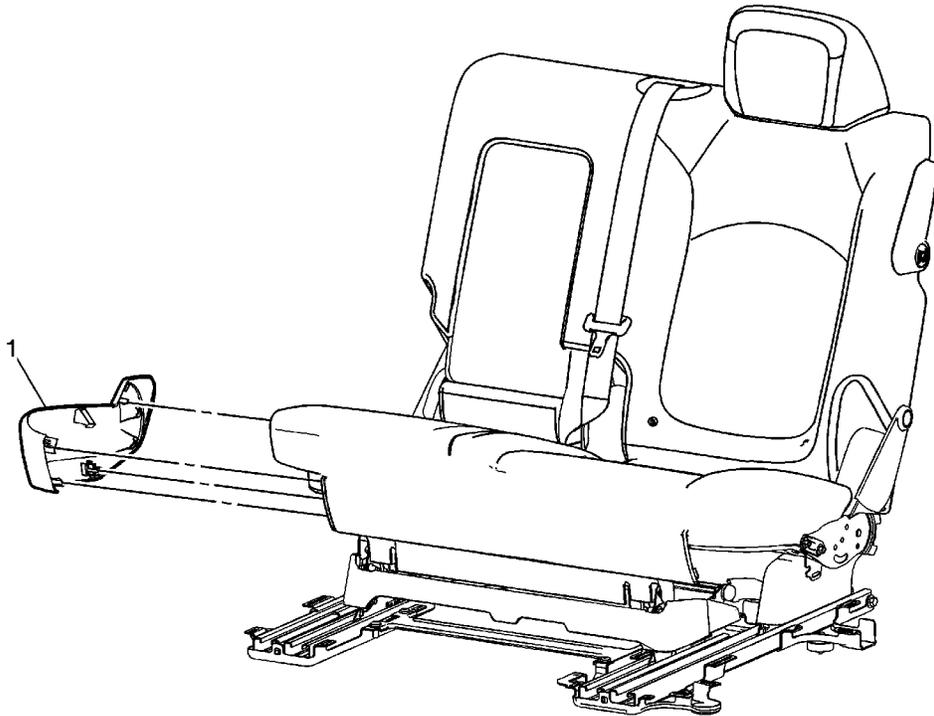

| Callout | Component Name |
|---------|--|
| 1 | <p>Rear Seat Cushion Trim Panel Assembly</p> <p>Procedure</p> <p>Remove the trim panel by pulling the front edge outward and then sliding the trim panel rearward to release from the seat.</p> |

Rear Seat Cushion Trim Panel Replacement - Inner Outboard (with 40 Percent Seat)



| Callout | Component Name |
|---------|---|
| 1 | Rear Seat Cushion Trim Panel - Inner Procedure <ol style="list-style-type: none"> 1. Move the seat to the Smart Slide® E-Z entry position. 2. Disengage the snaps from the outer cover and pull up to remove. |

Rear Seat Cushion Trim Panel Replacement - Inner Inboard




| Callout | Component Name |
|---------|---|
| 1 | Rear Seat Cushion Trim Panel - Inner Procedure <ol style="list-style-type: none"> 1. Move the seat to the Smart Slide® E-Z entry position. 2. Disengage the snaps from the outer cover and pull up to remove. |

Rear Seat Back Cushion Latch Cover Replacement - Inner




| Callout | Component Name |
|---------|--|
| 1 | Rear Seat Back Cushion Latch Cover |
| 2 | Rear Seat Bolt Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in) |
| 3 | Rear Seat Back Cushion Latch Cover |

Rear Seat Back Cushion Latch Cover Replacement - Outer (with 40 Percent Seat)

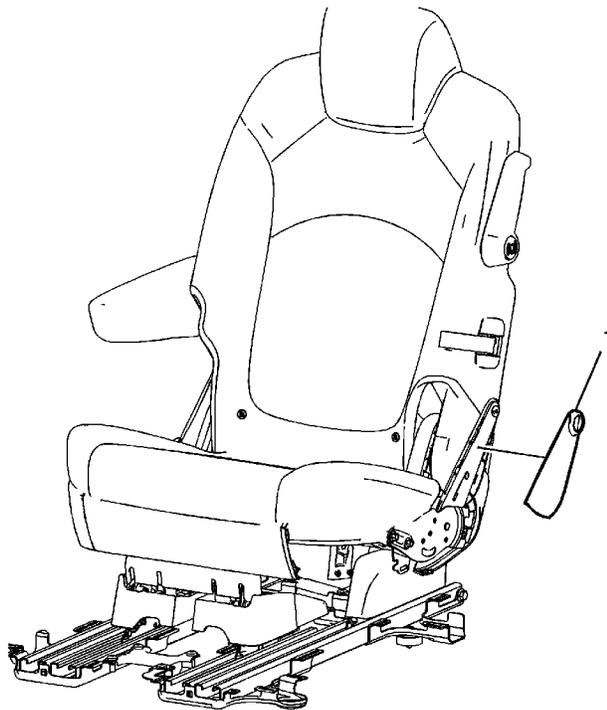


| Callout | Component Name |
|---------|------------------------------------|
| 1 | Rear Seat Back Cushion Latch Cover |

Rear Seat Back Cushion Latch Cover Replacement - Outer (with 60 Percent Seat)

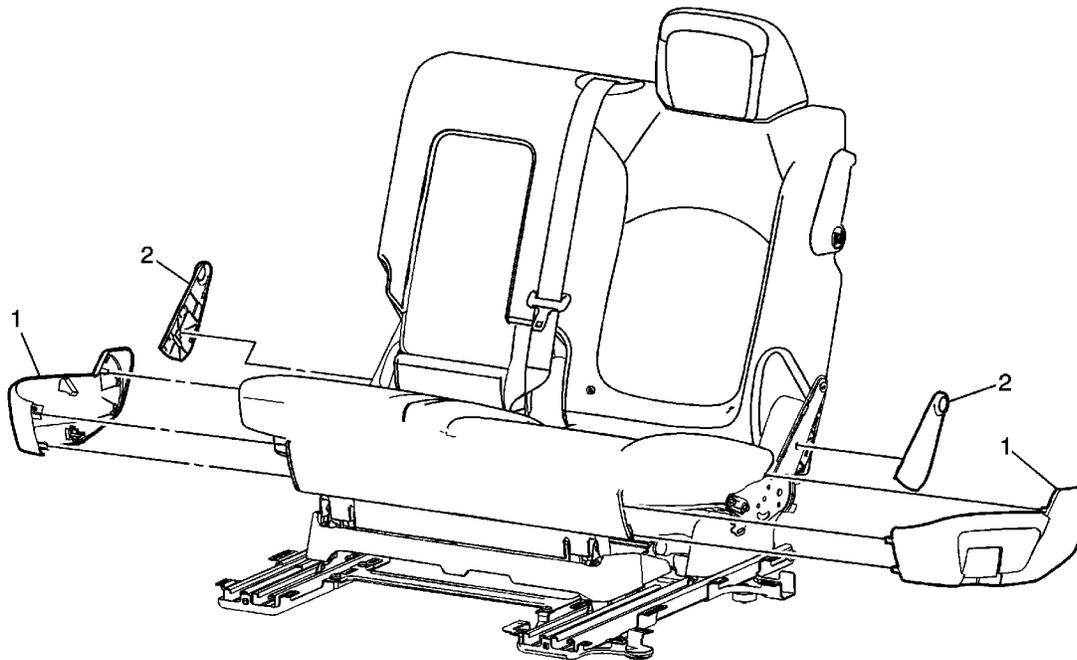


| Callout | Component Name |
|---------|--|
| 1 | Rear Seat Cushion Trim Panel Assembly (Qty: 2) Tip Release the tabs on the front and rear of the panels and pull outward to disengage the retainer clips. |
| 2 | Rear Seat Cushion Latch Cover-Outer |

Rear Seat Frame Front Finish Cover Replacement - Lower (with 40 Percent Seat)

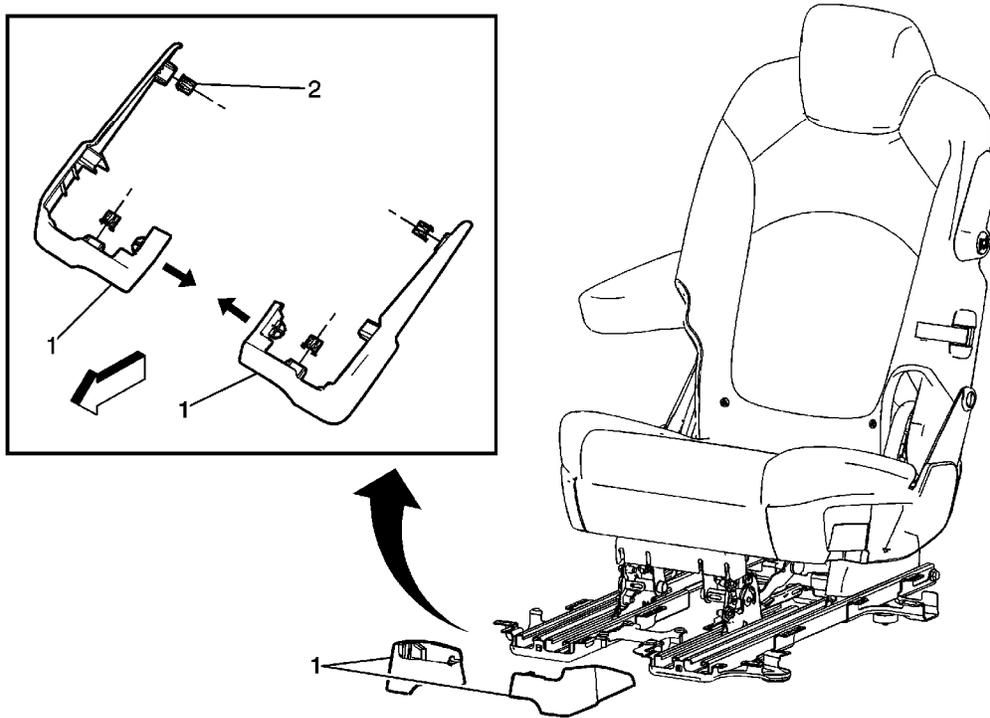


| Callout | Component Name |
|---------|---|
| 1 | Rear Seat Frame Front Finish Cover (Qty: 2) Procedure 1. Pull outward at the rear edge of the cover to disengage the rear retainer clip. 2. Pull the front inner corner of the cover inward to disengage the cover from the seat cushion frame. 3. Pull forward to disengage the remaining retainer clip from the front edge of the cover. |
| 2 | Retainer Clip (Qty: 6) |

Rear Seat Frame Front Finish Cover Replacement - Lower (with 60 Percent Seat)

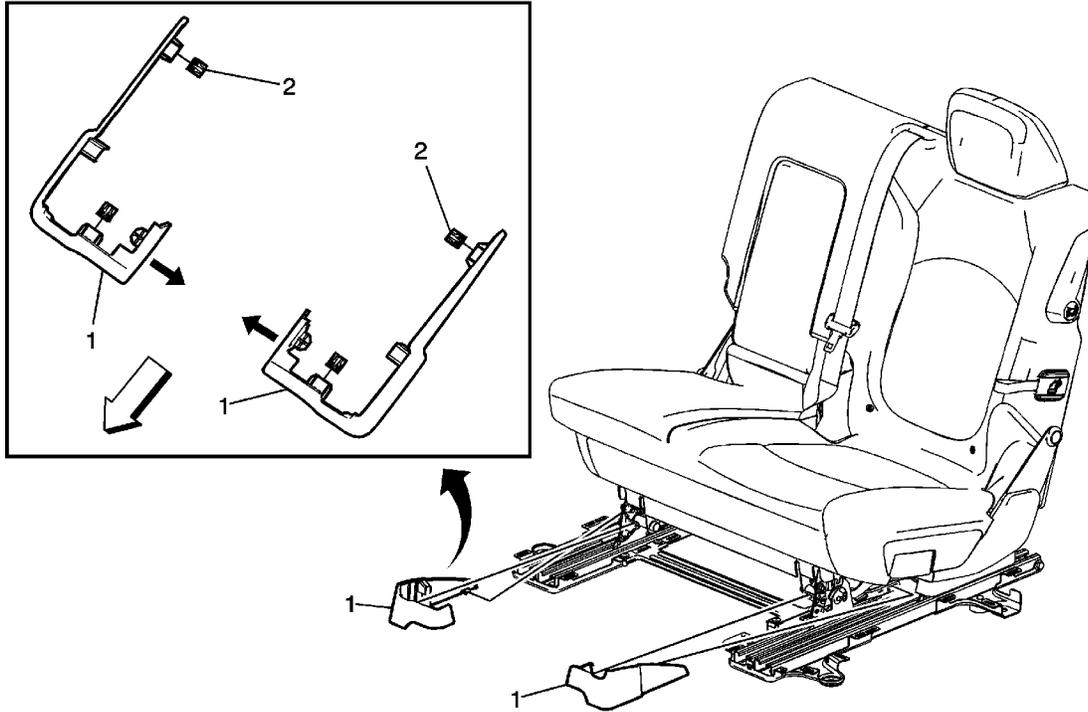


| Callout | Component Name |
|---------|---|
| 1 | Rear Seat Frame Front Finish Cover (Qty: 2) Procedure 1. Pull outward at the rear edge of the cover to disengage the rear retainer clip. 2. Pull the front inner corner of the cover inward to disengage the cover from the seat cushion frame. 3. Pull forward to disengage the remaining retainer clip from the front edge of the cover. |
| 2 | Retainer Clip (Qty: 6) |

Rear Seat Frame Front Finish Cover Replacement - Upper (with 40 Percent Seat)

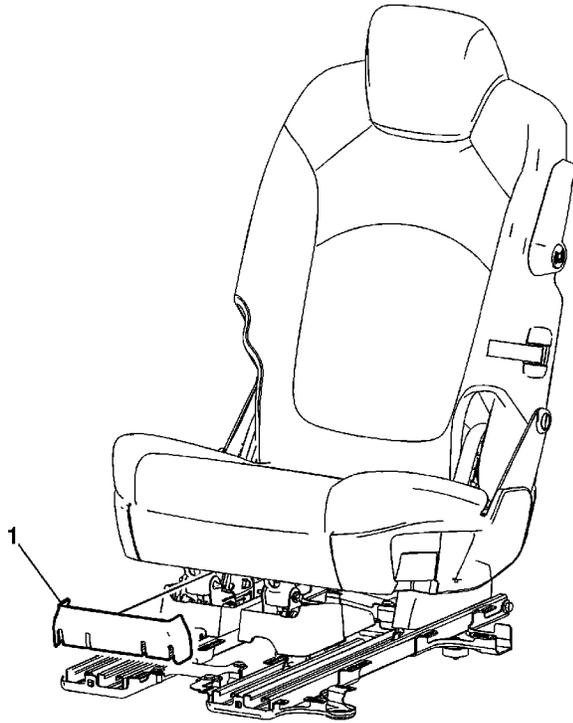


| Callout | Component Name |
|---------|---|
| 1 | Rear Seat Frame Front Finish Cover Procedure Spread the sides of the cover outward to disengage the cover from the seat cushion frame. |

Rear Seat Frame Front Finish Cover Replacement - Upper (with 60 Percent Seat)

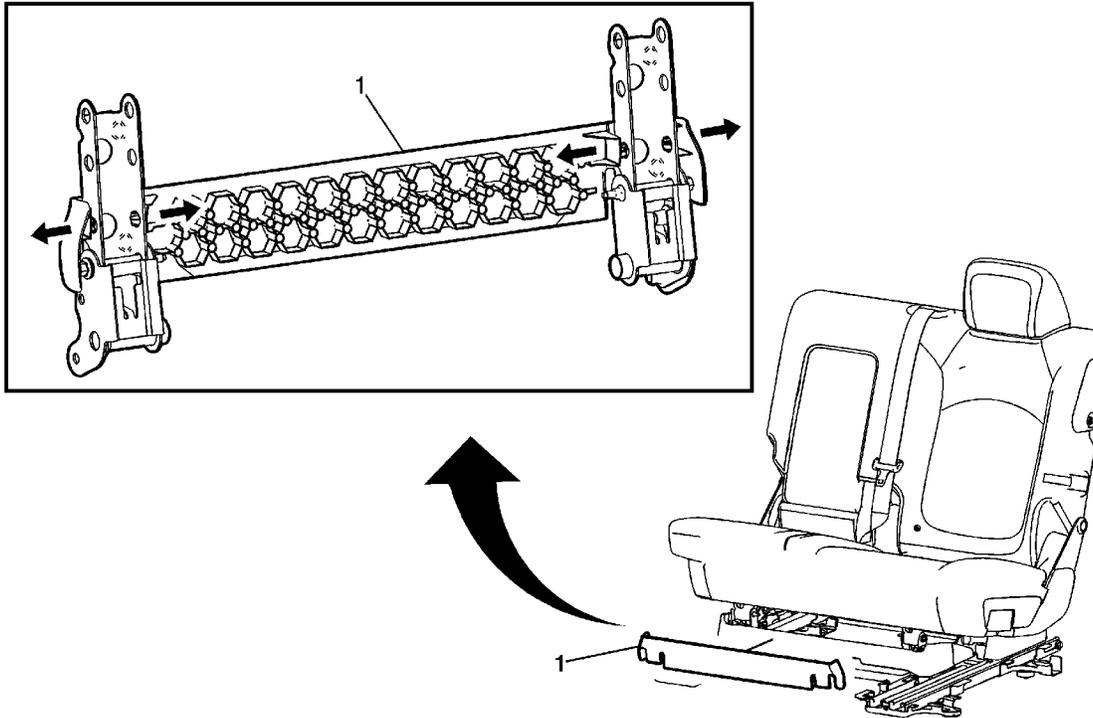

| Callout | Component Name |
|---------|---|
| 1 | Rear Seat Frame Front Finish Cover Procedure Spread the sides of the cover outward to disengage the cover from the seat cushion frame. |

Rear Seat Track Front Inboard Cover, Front Outboard Cover, Rear Inboard Cover, and Rear Outboard Cover Replacement

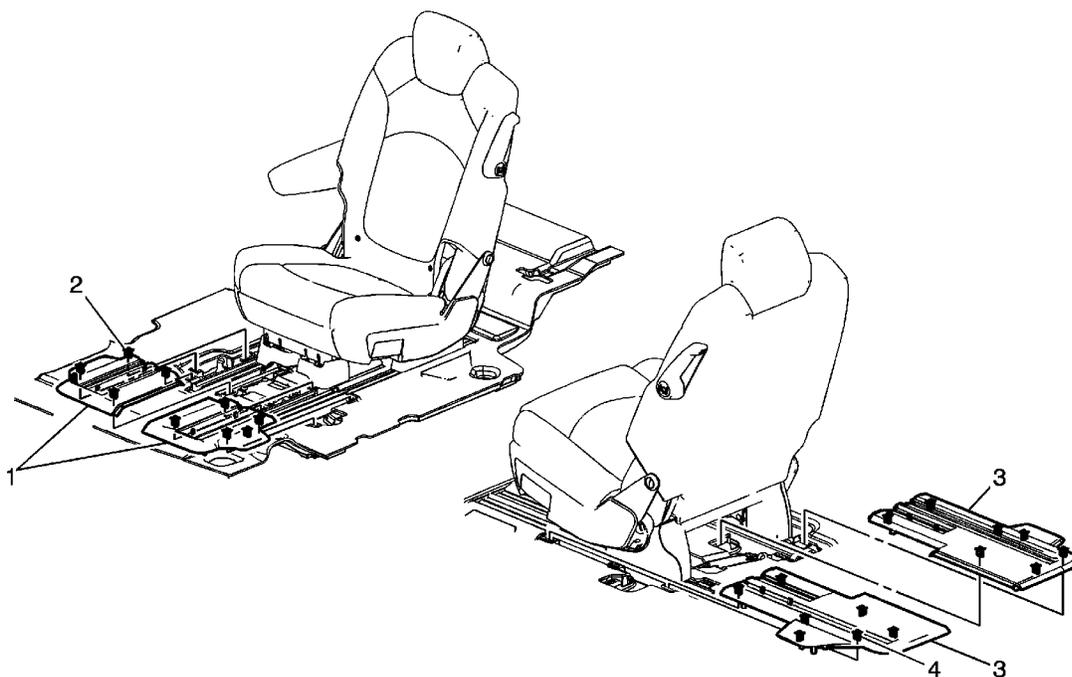

| Callout | Component Name |
|---------|--|
| 1 | Rear Seat Track Front Cover (Qty: 2) Procedure 1. Move the seat forward to the Smart Slide® E-Z entry position. 2. Use a trim tool or equivalent to aid in the removal of the seat track covers. |
| 2 | Rear Seat Track Cover Retainer Clip (Qty: 14) |
| 3 | Rear Seat Track Rear Cover (Qty: 2) Procedure 1. Move the seat to the full rear position. 2. Use a trim tool or equivalent to aid in the removal of the seat track covers. |
| 4 | Rear Seat Track Cover Retainer Clip (Qty: 18) |

Rear Seat Adjuster Track Adjustment

Inspection and Cleaning Procedure


1. Remove the rear seat. Refer to [Rear Seat Replacement](#).
2. Inspect the seat track for debris or foreign materials, if the track needs to be cleaned, perform the following steps:

Warning: Refer to [Safety Glasses and Compressed Air Warning](#) in the Preface section.

Note: Use care when using compressed air to clear the sunroof drain hose. Do not exceed 241 kPa (35 psi).

- Use a flexible wire or 689 kPa (100 psi) of compressed air to clear any material plugging the obstructing the seat track.
 - The mechanical components of the seat track assembly receive lubrication during assembly. If any seat track needs additional lubrication, use multi-purpose lubricant GM P/N 12346241 (Canadian P/N 10953474) or equivalent.
3. Install the rear seat and test for proper operation. Refer to [Rear Seat Replacement](#).


Rear Seat Adjuster Replacement (With 40 Percent Seat)

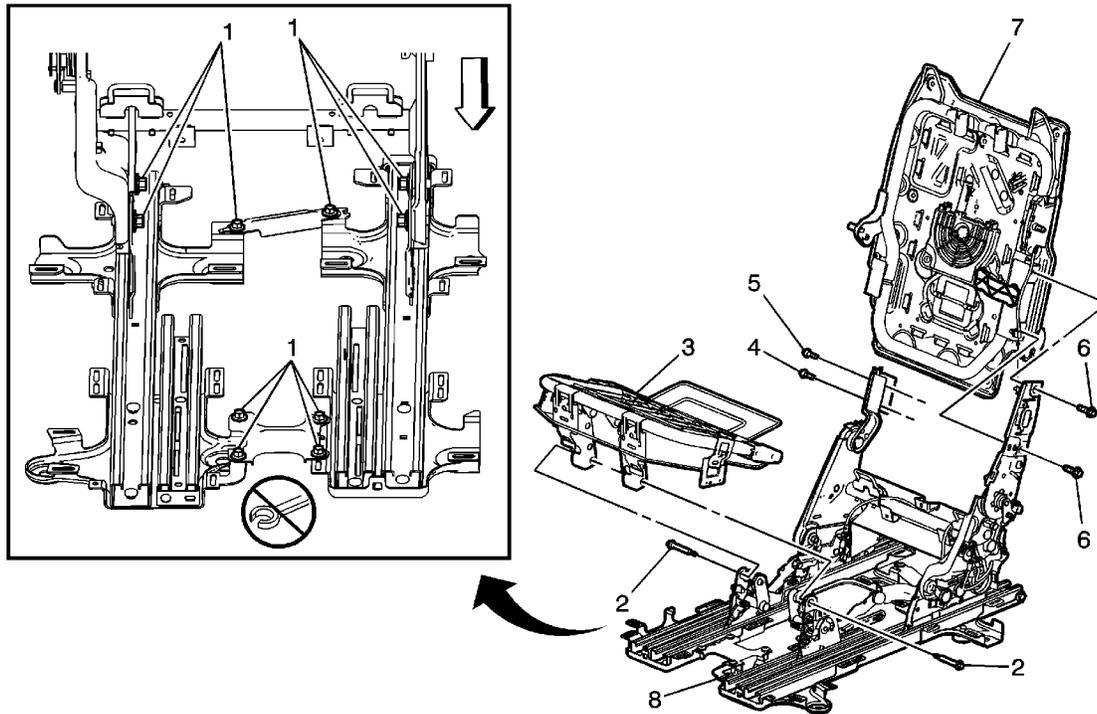

| Callout | Component Name |
|---|---|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the rear seat. Refer to Rear Seat Replacement. 2. Remove the rear seat back cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement. 3. Remove the rear seat cushion cover and pad. Refer to Rear Seat Cushion Cover and Pad Replacement. | |
| 1 | <p>Rear Seat Adjuster Bolt (Qty: 10)</p> <p>Warning: Do not loosen or remove any of the bolts on the rear seat adjuster. Loosening or removing these bolts will unsynchronize the seat tracks which could cause personal injury.</p> |
| 2 | <p>Rear Seat Bolt (Qty: 2)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 10 N·m (89 lb in)</p> |

| | |
|---|--|
| 3 | Rear Seat Cushion Frame Assembly Refer to Rear Seat Cushion Frame Replacement . |
| 4 | Rear Seat Bolt Tighten 28 N·m (21 lb ft) |
| 5 | Rear Seat Bolt Tighten 28 N·m (21 lb ft) |
| 6 | Rear Seat Bolt (Qty: 2) Tighten 45 N·m (33 lb ft) |
| 7 | Rear Seat Back Cushion Frame Assembly Refer to Rear Seat Back Cushion Frame Replacement . |
| 8 | Rear Seat Adjuster Assembly |


Rear Seat Adjuster Replacement (With 60 Percent Seat)

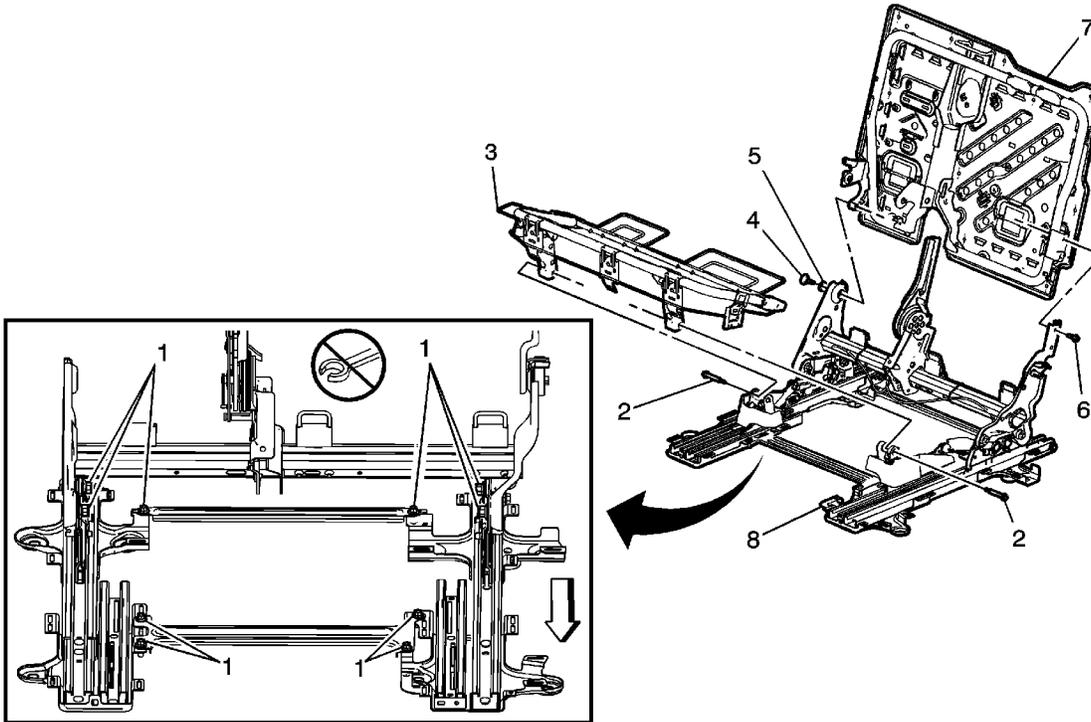

| Callout | Component Name |
|---|---|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the rear seat. Refer to Rear Seat Replacement. 2. Remove the rear seat back cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement. 3. Remove the rear seat cushion cover and pad. Refer to Rear Seat Cushion Cover and Pad Replacement. | |
| 1 | <p>Rear Seat Adjuster Bolt (Qty: 10)</p> <p>Warning: Do not loosen or remove any of the bolts on the rear seat adjuster. Loosening or removing these bolts will unsynchronize the seat tracks which could cause personal injury.</p> |
| 2 | <p>Rear Seat Bolt (Qty: 2)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 10 N·m (89 lb in)</p> |

| | |
|---|--|
| 3 | Rear Seat Cushion Frame Assembly Refer to Rear Seat Cushion Frame Replacement . |
| 4 | Rear Seat Bolt Tighten 28 N·m (21 lb ft) |
| 5 | Rear Seat Bolt Tighten 28 N·m (21 lb ft) |
| 6 | Rear Seat Bolt (Qty: 2) Tighten 45 N·m (33 lb ft) |
| 7 | Rear Seat Back Cushion Frame Assembly Refer to Rear Seat Back Cushion Frame Replacement . |
| 8 | Rear Seat Adjuster Assembly |

Rear Seat Cushion Cover and Pad Replacement (with 40 Percent Seat)

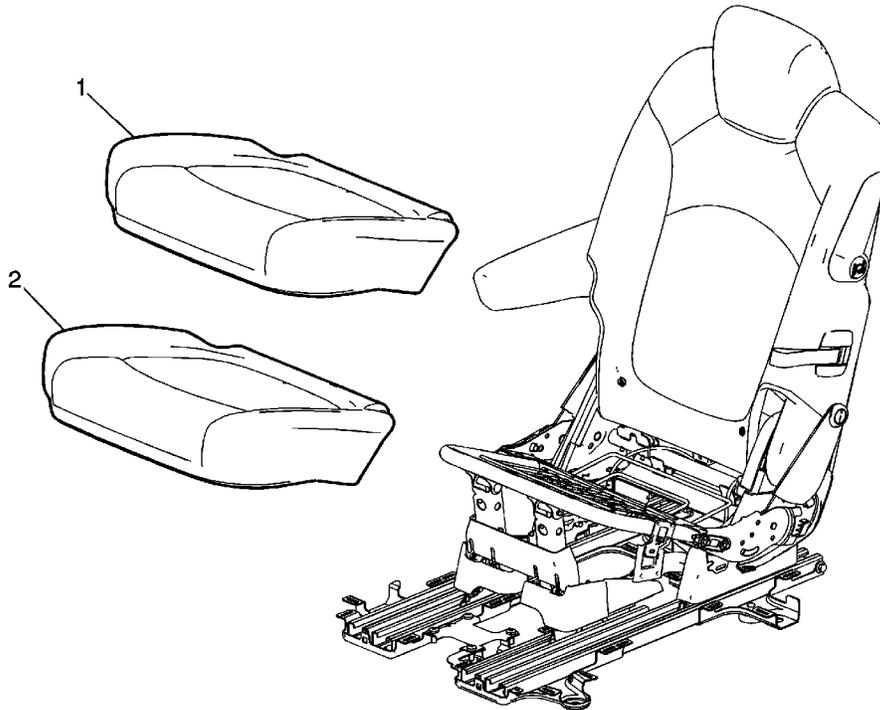


| Callout | Component Name |
|---|---|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Move the seat to the Smart Slide® E-Z entry position. 2. Remove the rear seat cushion trim panels. Refer to Rear Seat Cushion Trim Panel Assembly Replacement - Outboard or Rear Seat Cushion Trim Panel Assembly Replacement - Inboard . 3. Remove the rear seat cushion front cover. Refer to Rear Seat Cushion Front Cover Replacement . | |
| <p>1</p> | <p>Rear Seat Cushion Cover</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Disengage the seat cushion cover j-channel from the seat cushion frame. 2. Remove the hog rings that retain the rear of the seat cushion cover to the frame. 3. Disconnect the rear seat latch cables. 4. Remove the rear seat cushion cover and pad as an assembly. |
| | <p>Rear Seat Cushion Pad</p> |

2

Procedure

1. Disengage the hog rings retaining the cover to the pad.
2. Separate the seat cushion cover from the pad.

Rear Seat Cushion Cover and Pad Replacement (with 60 Percent Seat)

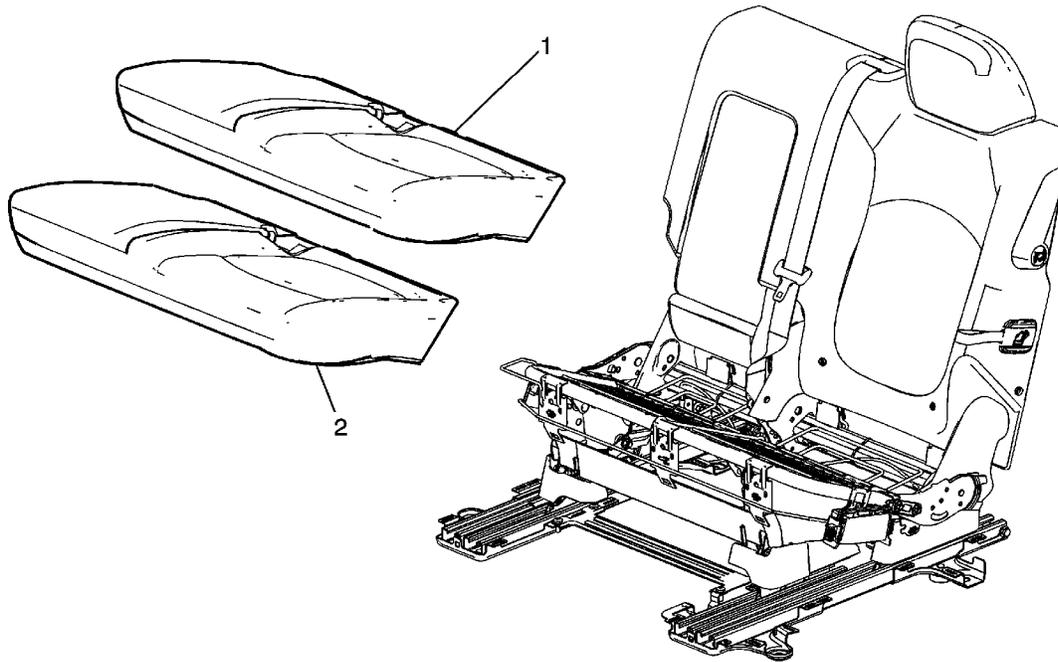


| Callout | Component Name |
|---|--|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Move the seat to the Smart Slide® E-Z entry position. 2. Remove the rear seat cushion trim panel assembly. Refer to Rear Seat Cushion Trim Panel Assembly Replacement - Inboard or Rear Seat Cushion Trim Panel Assembly Replacement - Outboard . 3. Remove the rear seat cushion trim panel assembly. Refer to Rear Seat Cushion Trim Panel Replacement - Inner Outboard or Rear Seat Cushion Trim Panel Replacement - Inner Inboard . 4. Remove the rear seat adjuster handle. Refer to Rear Seat Adjuster Handle Replacement . 5. Remove the rear seat cushion front cover. Refer to Rear Seat Cushion Front Cover Replacement . | |
| <p>1</p> | <p>Rear Seat Cushion Cover</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Disengage the seat cushion cover j-channel from the seat cushion frame. 2. Remove the hog rings that retain the rear of the seat cushion cover to the |

© 2010 General Motors Corporation. All rights reserved.

| | |
|---|---|
| | frame. 3. Disconnect the rear seat latch cables. 4. Remove the rear seat cushion cover and pad as an assembly. |
| 2 | Rear Seat Cushion Pad Procedure 1. Disengage the hog rings retaining the cover to the pad. 2. Separate the seat cushion cover from the pad. |


Rear Seat Cushion Frame Replacement (With 40 Percent Seat)

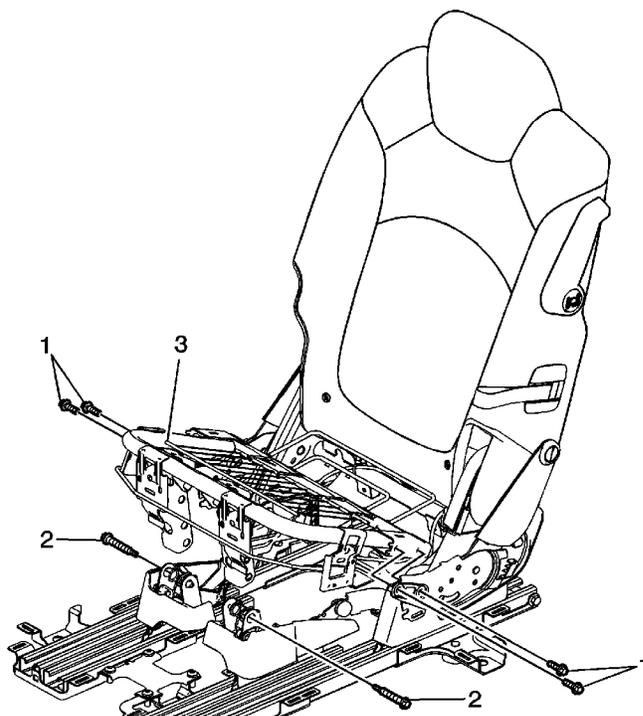

| Callout | Component Name |
|--|---|
| Preliminary Procedures <ol style="list-style-type: none"> 1. Remove the rear seat. Refer to Rear Seat Replacement. 2. Remove the seat cushion cover and pad. Refer to Rear Seat Cushion Cover and Pad Replacement. 3. Remove the rear seat latch cables. Refer to Rear Seat Latch Cable Replacement - Inboard or Rear Seat Latch Cable Replacement - Outboard. | |
| 1 | Rear Seat Bolt (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 28 N·m (21 lb ft) |
| 2 | Rear Seat Bolt (Qty: 2) Tighten 10 N·m (89 lb in) |
| 3 | Rear Seat Cushion Frame Assembly |

© 2010 General Motors Corporation. All rights reserved.

Rear Seat Cushion Frame Replacement (With 60 Percent Seat)

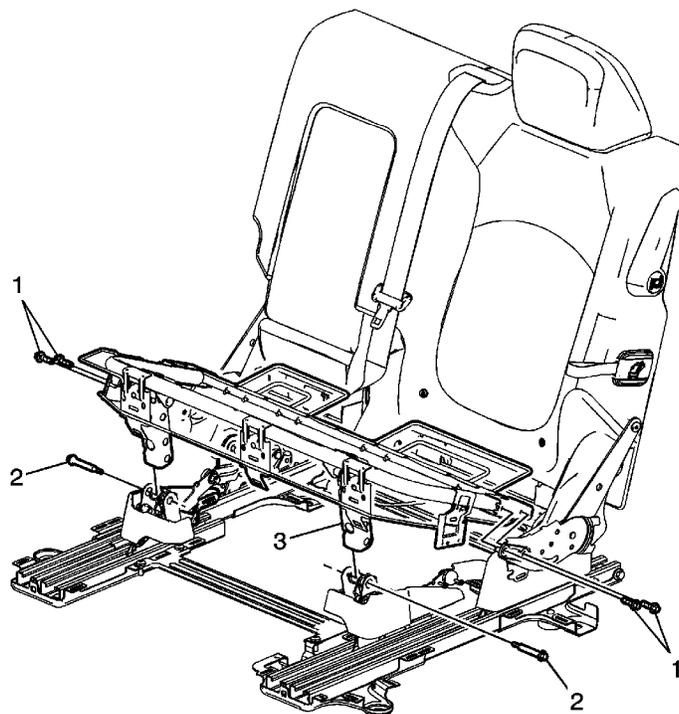


| Callout | Component Name |
|---|---|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the rear seat. Refer to Rear Seat Replacement. 2. Remove the seat cushion cover and pad. Refer to Rear Seat Cushion Cover and Pad Replacement. 3. Remove the rear seat latch cables. Refer to Rear Seat Latch Cable Replacement - Inboard or Rear Seat Latch Cable Replacement - Outboard. | |
| 1 | Rear Seat Bolt (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 28 N·m (21 lb ft) |
| 2 | Rear Seat Bolt (Qty: 2) Tighten 10 N·m (89 lb in) |
| 3 | Rear Seat Cushion Frame Assembly |

© 2010 General Motors Corporation. All rights reserved.


Rear Seat Latch Replacement (With 40 Percent Seat)

Removal Procedure

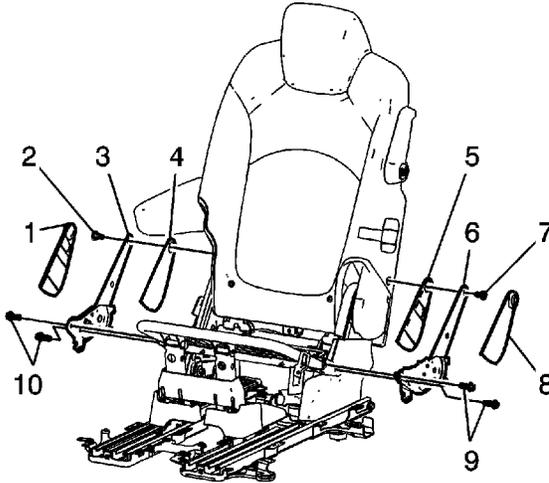

1. Remove the rear seat from the vehicle. Refer to [Rear Seat Replacement](#).
2. Remove the rear seat cushion outboard trim panel. Refer to [Rear Seat Cushion Trim Panel Assembly Replacement - Outboard](#).
3. Remove the rear seat cushion inboard trim panel. Refer to [Rear Seat Cushion Trim Panel Assembly Replacement - Inboard](#).
4. Remove the rear seat cushion cover and pad. Refer to [Rear Seat Cushion Cover and Pad Replacement](#).
5. Remove the rear seat latch outer covers (1, 8).
6. Remove the rear seat latch upper bolts (2, 7).
7. Remove the rear seat latch inner covers (4, 5).
8. Remove the rear seat latch lower bolts (9, 10).
9. Disconnect the rear seat latch cables from the rear seat latches.

Installation Procedure

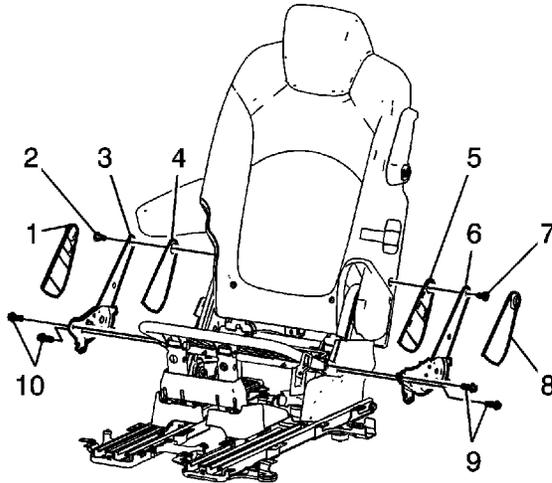

1. Connect the rear seat latch cables to the rear seat latches (3, 6).
2. Install the rear seat latch inner covers (4, 5) to the seat latches (3, 6).
3. Install the rear seat cushion latches (3, 6) to the rear seat cushion frame.

Caution: Refer to [Fastener Caution](#) in the Preface section.

4. Torque the rear seat latch lower bolts (9, 10).

Tighten

Tighten the bolts to 28 N·m (21 lb ft).

5. Rotate the rear seat cushion latch upper sectors upwards until they fully lock, one per side.
 - Ensure that both latches are fully locked.
 - Do not release either latch until all steps are complete.
6. Install the rear seat latch upper sectors to the seat back with one bolt (2, 7).

Tighten

Tighten the bolt to 10 N·m (89 lb in).

7. Loosen the cushion latch to cushion bolts (9) three full rotations.
8. Torque the rear bolt.

Tighten

Tighten the bolt to 28 N·m (21 lb ft).

9. Torque the front bolt (9).

Tighten

Tighten the bolt to 28 N·m (21 lb ft).


10. Install the rear seat latch outer covers (4, 8).
11. Install the rear seat cushion cover and pad. Refer to [Rear Seat Cushion Cover and Pad](#)

[Replacement.](#)

12. Install the rear seat cushion inboard trim panel. Refer to [Rear Seat Cushion Trim Panel Assembly Replacement - Inboard](#).
13. Install the rear seat cushion outboard trim panel. Refer to [Rear Seat Cushion Trim Panel Assembly Replacement - Outboard](#).
14. Install the rear seat to the vehicle. Refer to [Rear Seat Replacement](#).


Rear Seat Latch Replacement (With 60 Percent Seat)

Removal Procedure

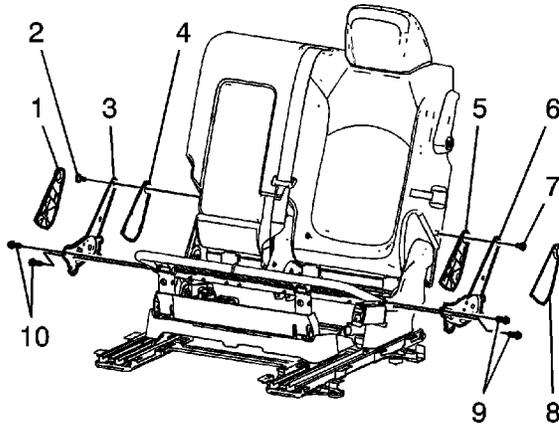

1. Remove the rear seat from the vehicle. Refer to [Rear Seat Replacement](#).
2. Remove the rear seat cushion outboard trim panel. Refer to [Rear Seat Cushion Trim Panel Assembly Replacement - Outboard](#).
3. Remove the rear seat cushion inboard trim panel. Refer to [Rear Seat Cushion Trim Panel Assembly Replacement - Inboard](#).
4. Remove the rear seat cushion cover and pad. Refer to [Rear Seat Cushion Cover and Pad Replacement](#).
5. Remove the rear seat latch outer covers (1, 8).
6. Remove the rear seat latch upper bolts (2, 7).
7. Remove the rear seat latch inner covers (4, 5).
8. Remove the rear seat latch lower bolts (9, 10).
9. Disconnect the rear seat latch cables from the rear seat latches.

Installation Procedure

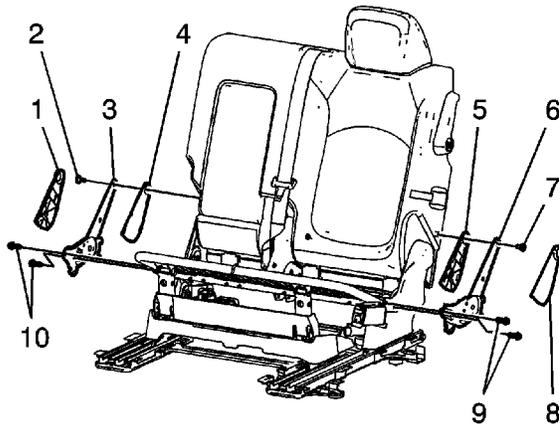

1. Connect the rear seat latch cables to the rear seat latches (3, 6).
2. Install the rear seat latch inner covers (4, 5) to the seat latches (3, 6).
3. Install the rear seat cushion latches (3, 6) to the rear seat cushion frame.

Caution: Refer to [Fastener Caution](#) in the Preface section.

4. Torque the rear seat latch lower bolts (9, 10).

Tighten

Tighten the bolts to 28 N·m (21 lb ft).

5. Rotate the rear seat cushion latch upper sectors upwards until they fully lock, one per side.
 - Ensure that both latches are fully locked.
 - Do not release either latch until all steps are complete.
6. Install the rear seat latch upper sectors to the seat back with one bolt (2, 7).

Tighten

Tighten the bolt to 10 N·m (89 lb in).

7. Loosen the cushion latch to cushion bolts (9) three full rotations.
8. Torque the rear bolt.

Tighten

Tighten the bolt to 28 N·m (21 lb ft).

9. Torque the front bolt (9).

Tighten


Tighten the bolt to 28 N·m (21 lb ft).

10. Install the rear seat latch outer covers (4, 8).
11. Install the rear seat cushion cover and pad. Refer to [Rear Seat Cushion Cover and Pad](#)

[Replacement.](#)


12. Install the rear seat cushion inboard trim panel. Refer to [Rear Seat Cushion Trim Panel Assembly Replacement - Inboard](#).
13. Install the rear seat cushion outboard trim panel. Refer to [Rear Seat Cushion Trim Panel Assembly Replacement - Outboard](#).
14. Install the rear seat to the vehicle. Refer to [Rear Seat Replacement](#).

Rear Seat Shoulder Belt Opening Bezel Replacement (with 60 Percent Seat)

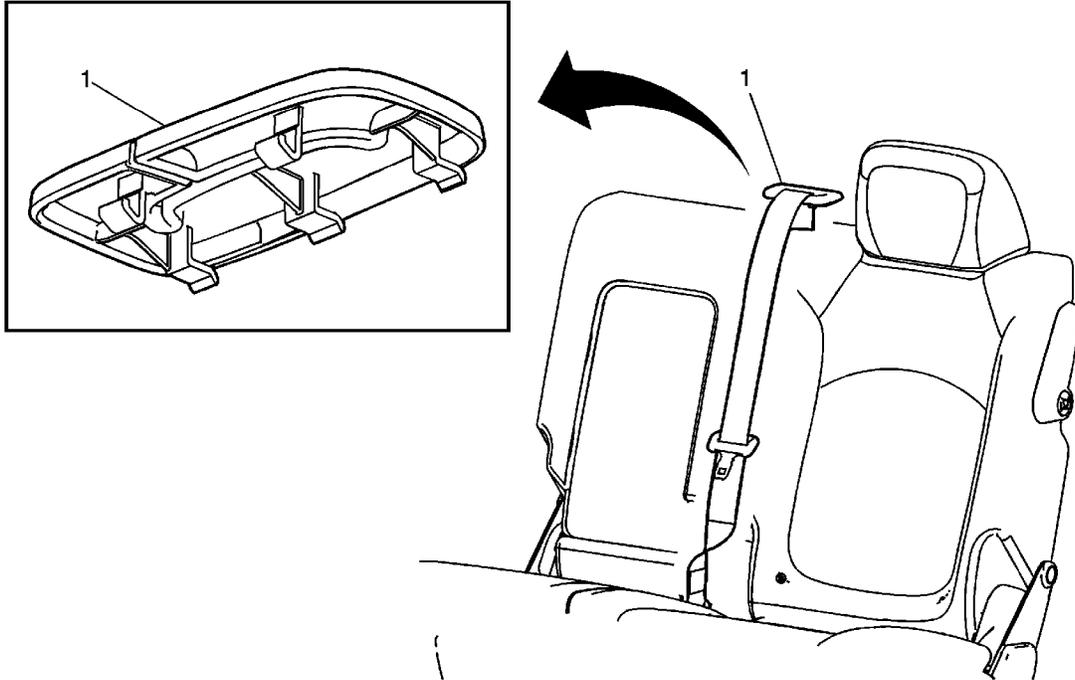


| Callout | Component Name |
|---------|--|
| 1 | Rear Seat Guide Shoulder Belt Opening Bezel Procedure <ol style="list-style-type: none"> 1. Use a small flat bladed tool to disengage the front retainers. 2. Slide the bezel forward to disengage from the seat back cushion. 3. Slide the seat belt through the opening in the bezel. |

Rear Seat Back Cushion Panel Replacement (with 40 Percent Seat)

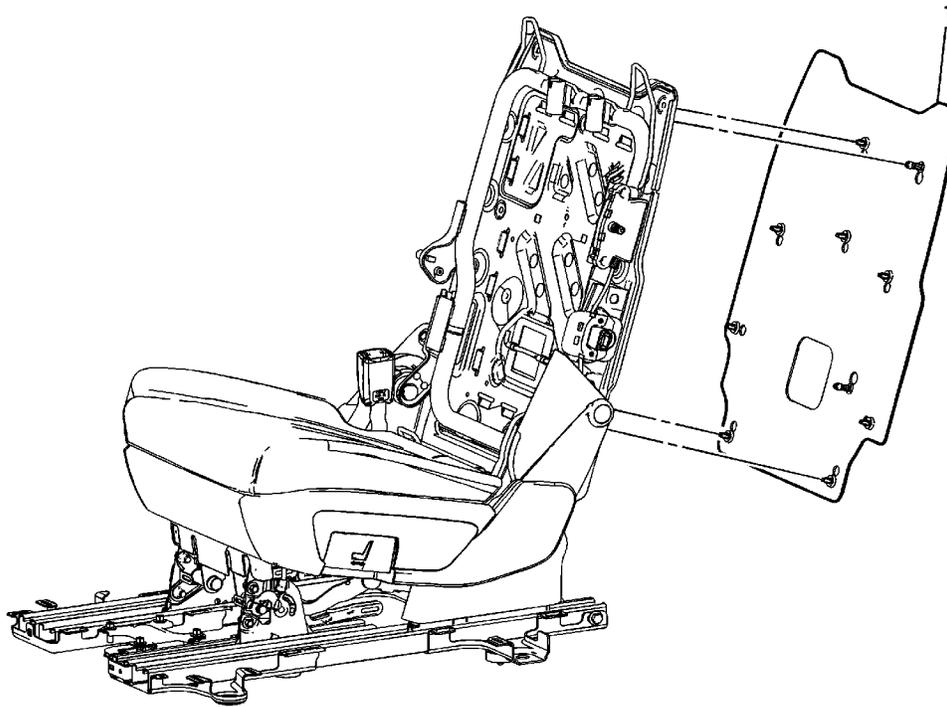


| Callout | Component Name |
|---|--|
| <p>Preliminary Procedures</p> <p>Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement.</p> | |
| <p>1</p> | <p>Rear Seat Back Cushion Panel</p> <p>Tip Squeeze the retainers from the front side of the seat back and push rearward to disengage from the seat back frame.</p> |

Rear Seat Back Cushion Panel Replacement (with 60 Percent Seat)

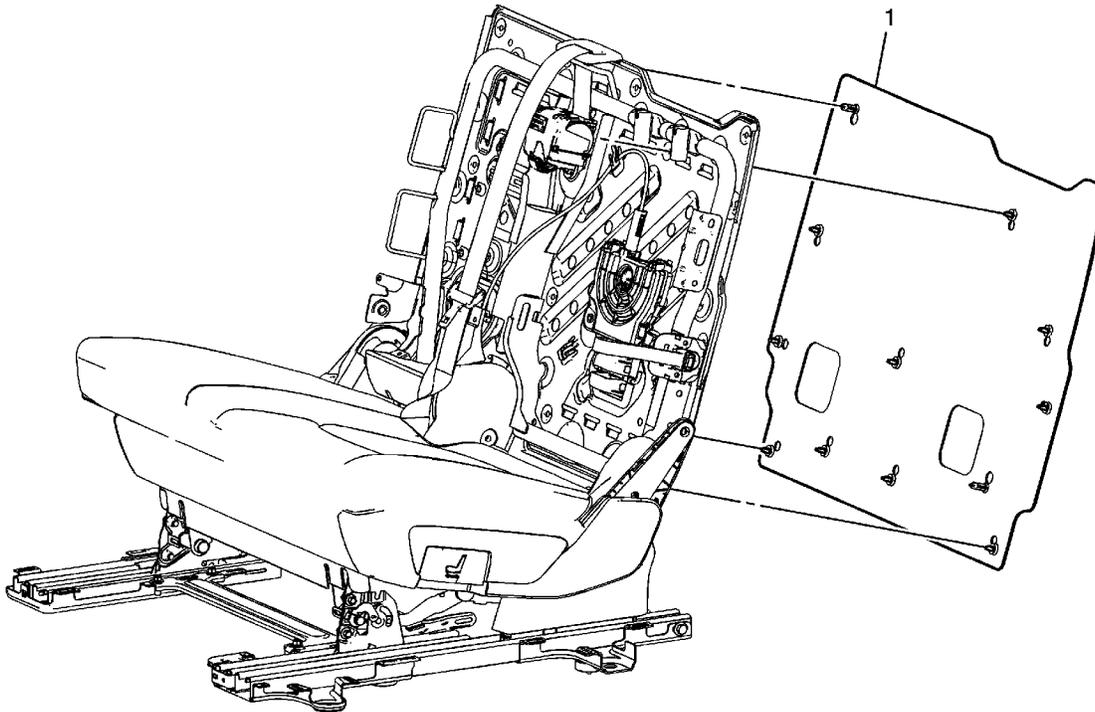

| Callout | Component Name |
|---|--|
| <p>Preliminary Procedures</p> <p>Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement.</p> | |
| <p>1</p> | <p>Rear Seat Back Cushion Panel</p> <p>Tip Squeeze the retainers from the front side of the seat back and push rearward to disengage from the seat back frame.</p> |


Rear Seat Back Cushion Cover and Pad Replacement (with 40 Percent Seat without Armrest)

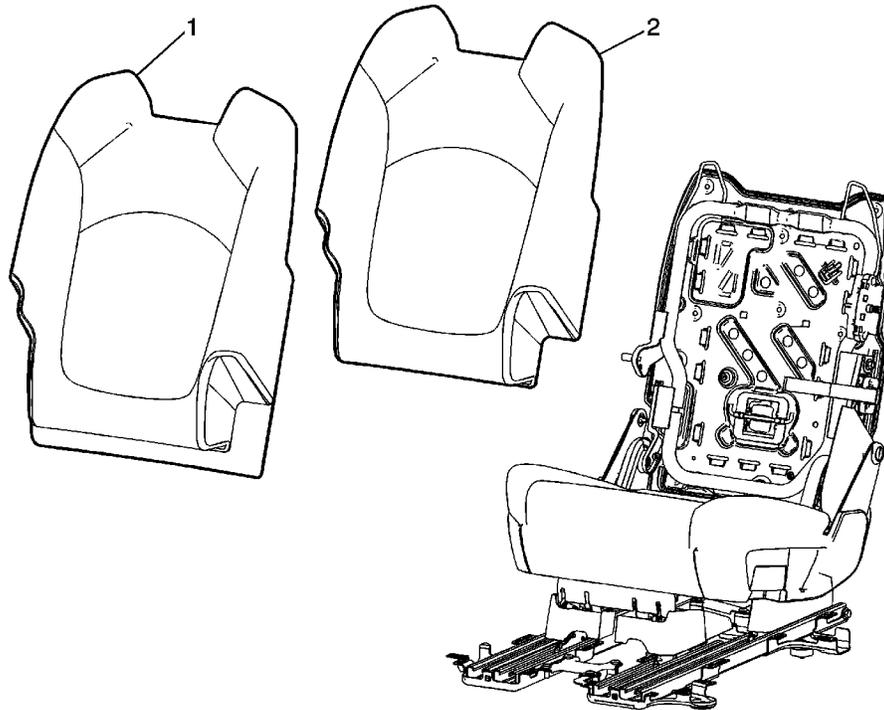

| Callout | Component Name |
|--|--|
| Preliminary Procedures | |
| <ol style="list-style-type: none"> 1. Remove the rear seat . Refer to Rear Seat Replacement . 2. Remove the rear seat latch release handle. Refer to Rear Seat Latch Release Handle Replacement . 3. Remove the rear seat latch release strap outer bezel. Refer to Rear Seat Latch Release Strap Bezel Replacement - Outer . 4. Remove the rear seat latch covers. Refer to Rear Seat Back Cushion Latch Cover Replacement - Inner or Rear Seat Back Cushion Latch Cover Replacement - Outer . 5. Remove the rear seat inner recliner cover. Refer to Rear Seat Recliner Inner Finish Cover Replacement - Upper . 6. Remove the rear seat head restraint. Refer to Rear Seat Head Restraint Replacement . 7. Remove the rear seat head restraint guides. Refer to Rear Seat Head Restraint Guide Replacement . | |
| 1 | Rear Seat Back Cushion Cover Procedure 1. Unzip the seat cushion cover. |

| | |
|---|---|
| | <ol style="list-style-type: none">2. Disconnect the seat back cover j-channels from the seat back frame.3. Remove the hog rings from the bottom of the seat back cover.4. Remove the rear seat back cushion cover and pad as an assembly. |
| 2 | <p>Rear Seat Back Cushion Pad</p> <p>Procedure</p> <ol style="list-style-type: none">1. Disengage the hog rings retaining the cover to the pad.2. Separate the seat back cushion cover from the pad. |

Rear Seat Back Cushion Cover and Pad Replacement (with 40 Percent Seat with Armrest)

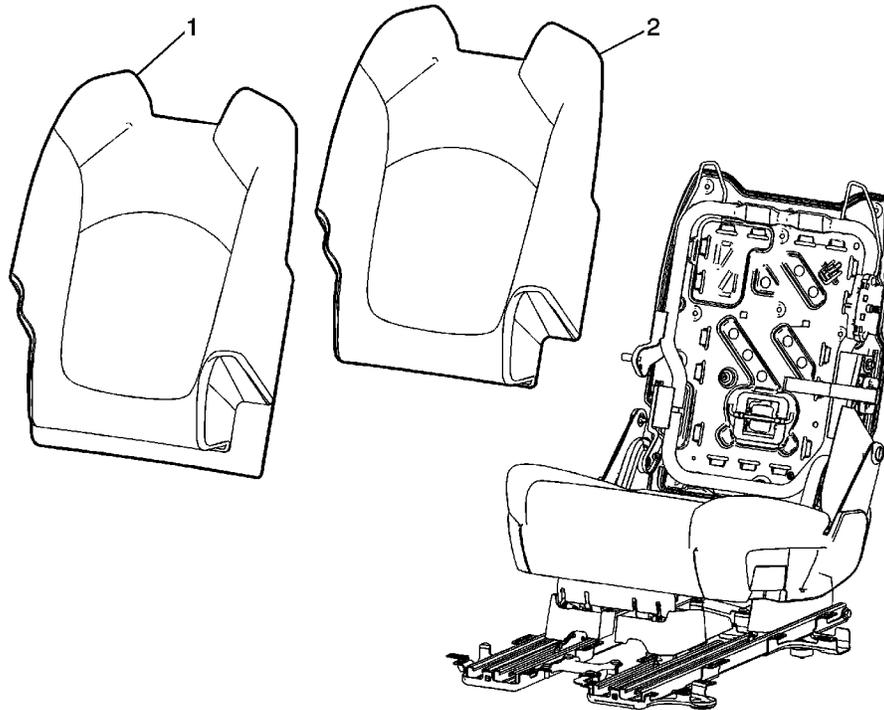


| Callout | Component Name |
|---|--|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the rear seat . Refer to Rear Seat Replacement . 2. Remove the rear seat latch covers. Refer to Rear Seat Back Cushion Latch Cover Replacement - Inner or Rear Seat Back Cushion Latch Cover Replacement - Outer . 3. Remove the rear seat latch release strap outer bezel. 4. Remove the rear seat armrest. Refer to Rear Seat Armrest Replacement . 5. Remove the rear seat inner recliner cover. Refer to Rear Seat Recliner Inner Finish Cover Replacement - Upper . 6. Remove the rear seat head restraint. Refer to Rear Seat Head Restraint Replacement . 7. Remove the rear seat head restraint guides. Refer to Rear Seat Head Restraint Guide Replacement . 8. Remove the rear seat armrest. Refer to Rear Seat Armrest Replacement . | |
| <p>1</p> | <p>Rear Seat Back Cushion Cover</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Unzip the seat cushion cover. 2. Disconnect the seat back cover J-channels from the seat back frame. |

© 2010 General Motors Corporation. All rights reserved.

| | |
|---|--|
| | <ol style="list-style-type: none">3. Remove the hog rings from the bottom of the seat back cover.4. Remove the rear seat back cushion cover and pad as an assembly. |
| 2 | <p>Rear Seat Back Cushion Pad</p> <p>Procedure</p> <ol style="list-style-type: none">1. Disengage the hog rings retaining the cover to the pad.2. Separate the seat back cushion cover from the pad. |


Rear Seat Back Cushion Cover and Pad Replacement (with 60 Percent Seat)

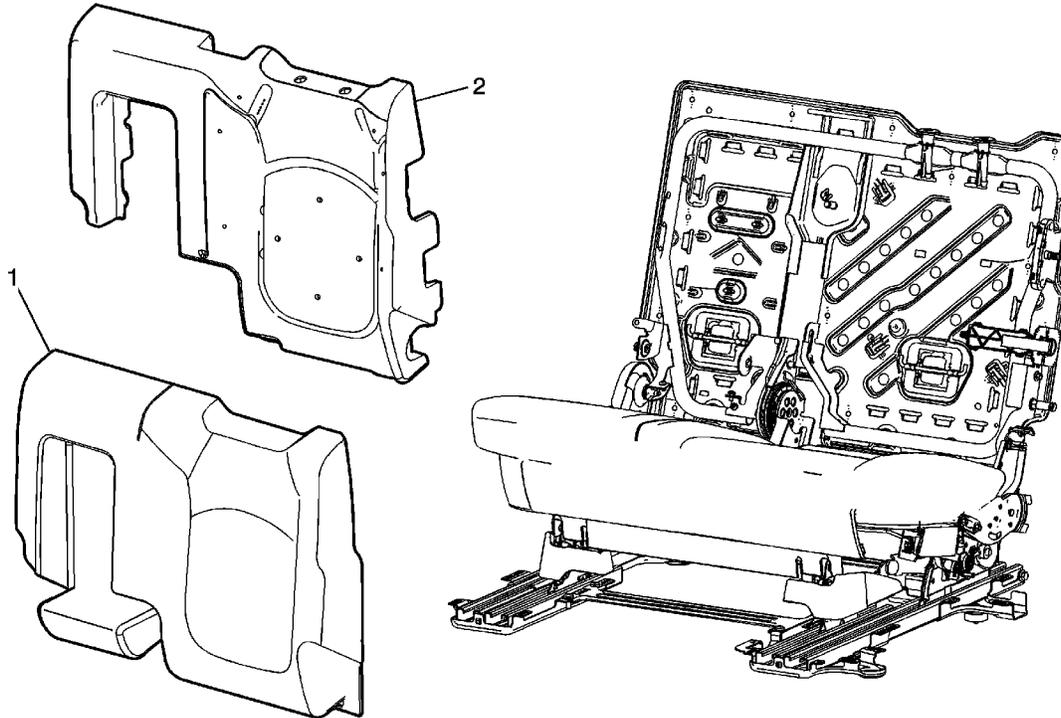

| Callout | Component Name |
|--|--|
| Preliminary Procedures | |
| <ol style="list-style-type: none"> 1. Remove the rear seat . Refer to Rear Seat Replacement . 2. Remove the rear seat latch covers. Refer to Rear Seat Back Cushion Latch Cover Replacement - Inner or Rear Seat Back Cushion Latch Cover Replacement - Outer . 3. Remove the rear seat latch release strap outer bezel. Refer to Rear Seat Latch Release Strap Bezel Replacement - Outer . 4. Remove the rear seat latch release handle. Refer to Rear Seat Latch Release Handle Replacement . 5. Remove the rear seat armrest. Refer to Rear Seat Armrest Replacement . 6. Remove the rear seat inner recliner cover. Refer to Rear Seat Recliner Inner Finish Cover Replacement - Upper . 7. Remove the rear seat head restraint. Refer to Rear Seat Head Restraint Replacement . 8. Remove the rear seat head restraint guides. Refer to Rear Seat Head Restraint Guide Replacement . 9. Remove the rear seat shoulder belt opening bezel. Refer to Rear Seat Shoulder Belt Opening Bezel Replacement . | |
| | Rear Seat Back Cushion Cover <small>© 2010 General Motors Corporation. All rights reserved.</small> |


| | |
|---|---|
| 1 | Procedure <ol style="list-style-type: none">1. Unzip the seat cushion cover.2. Disconnect the seat back cover j-channels from the seat back frame.3. Remove the hog rings from the bottom of the seat back cover.4. Remove the rear seat back cushion cover and pad as an assembly. |
| 2 | Rear Seat Back Cushion Pad Procedure <ol style="list-style-type: none">1. Disengage the hog rings retaining the cover to the pad.2. Separate the seat back cushion cover from the pad. |

Rear Seat Back Cushion Cover Replacement (with 60 Percent Seat)

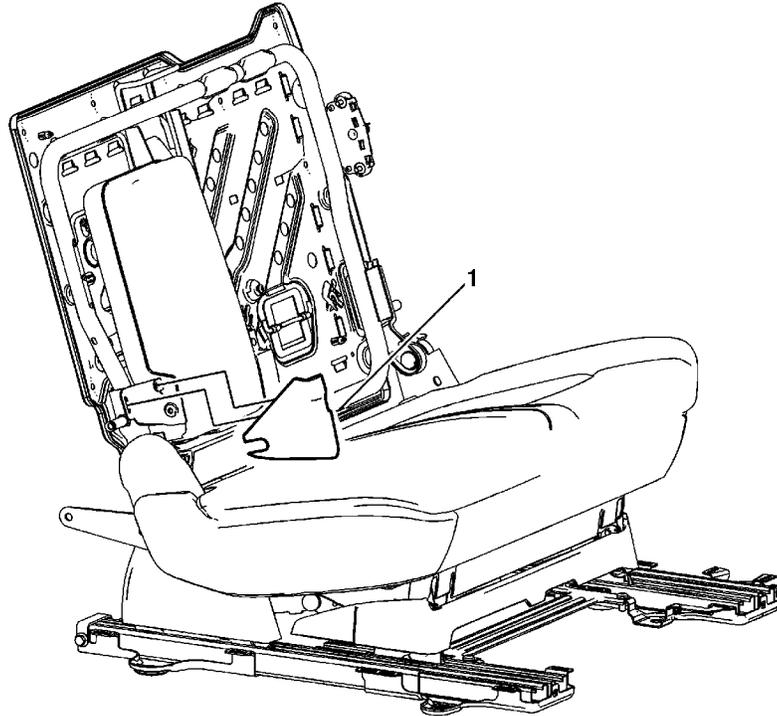

| Callout | Component Name |
|---------|--|
| 1 | Rear Seat Back Cushion Outer Cover Procedure 1. Unzip the rear seat back cover. 2. Remove the clip to disengage the retainers to remove. |


Rear Seat Back Cushion Frame Replacement (With 40 Percent Seat)

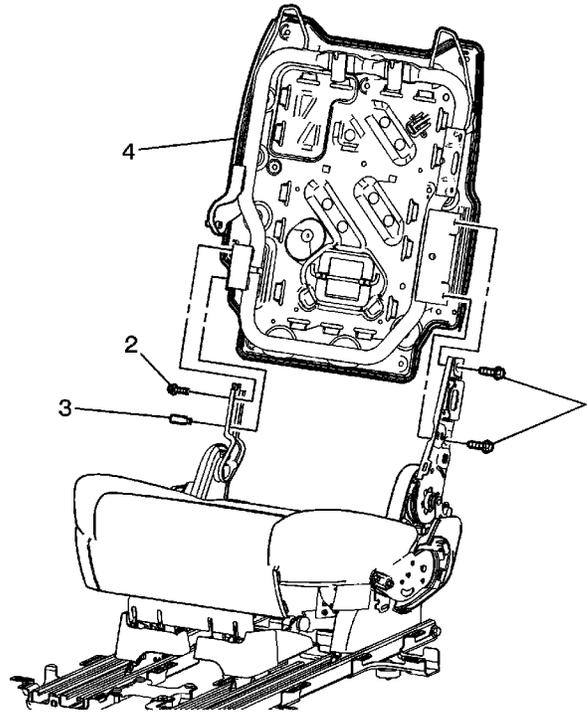

| Callout | Component Name |
|---|--|
| <p>Preliminary Procedures</p> | |
| <ol style="list-style-type: none"> 1. Remove the rear seat. Refer to Rear Seat Replacement. 2. Remove the rear seat cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement. 3. Remove the rear seat latch release handle assembly. Refer to Rear Seat Back Cushion Latch Release Handle Replacement. 4. Remove the rear seat back cushion stowage latch actuator. Refer to Rear Seat Back Cushion Stowage Latch Actuator Replacement. | |
| <p>1</p> | <p>Rear Seat Bolt (Qty: 2)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tip Use a grease pencil or marker to mark the location of the bolts for installation to ensure correct alignment of the seat back.</p> <p>Tighten 45 N·m (33 lb ft)</p> <p><small>© 2010 General Motors Corporation. All rights reserved.</small></p> |

| | |
|---|---|
| 2 | <p>Rear Seat Bolt</p> <p>Tip Use a grease pencil or marker to mark the location of the bolts for installation to ensure correct alignment of the seat back.</p> <p>Tighten 28 N·m (21 lb ft)</p> |
| 3 | <p>Rear Seat Recliner Bolt</p> <p>Tip Use a grease pencil or marker to mark the location of the bolts for installation to ensure correct alignment of the seat back.</p> <p>Tighten 28 N·m (21 lb ft)</p> |
| 4 | Rear Seat Back Frame |


Rear Seat Back Cushion Frame Replacement (With 60 Percent Seat)

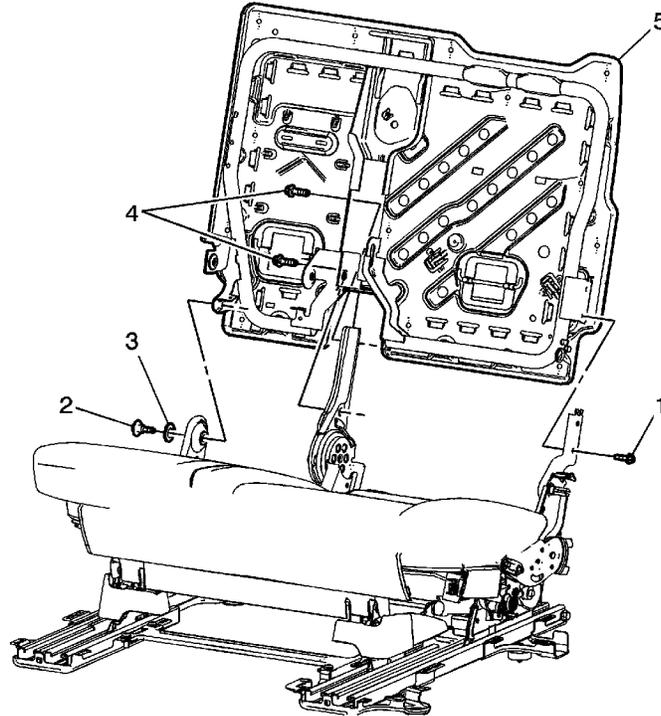

| Callout | Component Name |
|---|---|
| Preliminary Procedures | |
| <ol style="list-style-type: none"> 1. Remove the rear seat. Refer to Rear Seat Replacement. 2. Remove the rear seat cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement. 3. Remove the rear seat latch release handle assembly. Refer to Rear Seat Back Cushion Latch Release Handle Replacement. 4. Remove the rear seat back cushion stowage latch actuator. Refer to Rear Seat Back Cushion Stowage Latch Actuator Replacement. | |
| <p>1</p> | <p>Rear Seat Bolt</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tip Use a grease pencil or marker to mark the location of the bolts for installation to ensure correct alignment of the seat back.</p> <p>Tighten 21 N·m (15 lb ft)</p> <p><small>© 2010 General Motors Corporation. All rights reserved.</small></p> |


| | |
|---|--|
| 2 | <p>Rear Seat Pivot Bolt</p> <p>Tip Use a grease pencil or marker to mark the location of the bolts for installation to ensure correct alignment of the seat back.</p> <p>Tighten 28 N·m (21 lb ft)</p> |
| 3 | <p>Rear Seat Pivot Bolt Grommet</p> <p>Tip Replace the grommet with a new one whenever the bolt is removed.</p> |
| 4 | <p>Rear Seat Recliner Bolt (Qty: 2)</p> <p>Tip Use a grease pencil or marker to mark the location of the bolts for installation to ensure correct alignment of the seat back.</p> <p>Tighten 45 N·m (33 lb ft)</p> |
| 5 | <p>Rear Seat Back Frame</p> |

Rear Seat Support Replacement (with 40 Percent Seat)

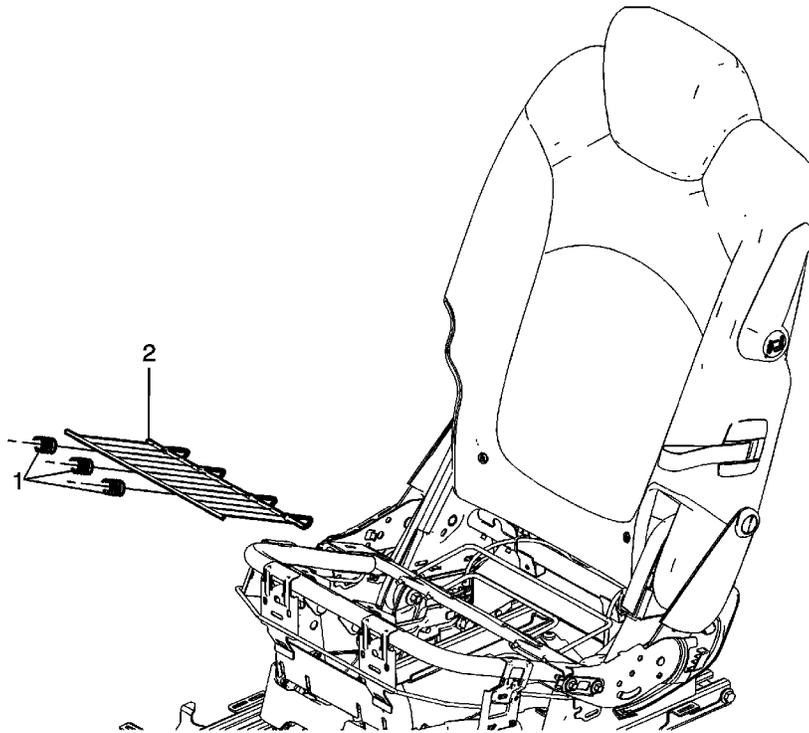


| Callout | Component Name |
|---|-----------------------------------|
| Preliminary Procedures 1. Remove the rear seat . Refer to Rear Seat Replacement . 2. Remove the seat cushion cover and pad. Refer to Rear Seat Cushion Cover and Pad Replacement . | |
| 1 | Rear Seat Cushion Spring (Qty: 3) |
| 2 | Rear Seat Support Assembly |

Rear Seat Support Replacement (with 60 Percent Seat)

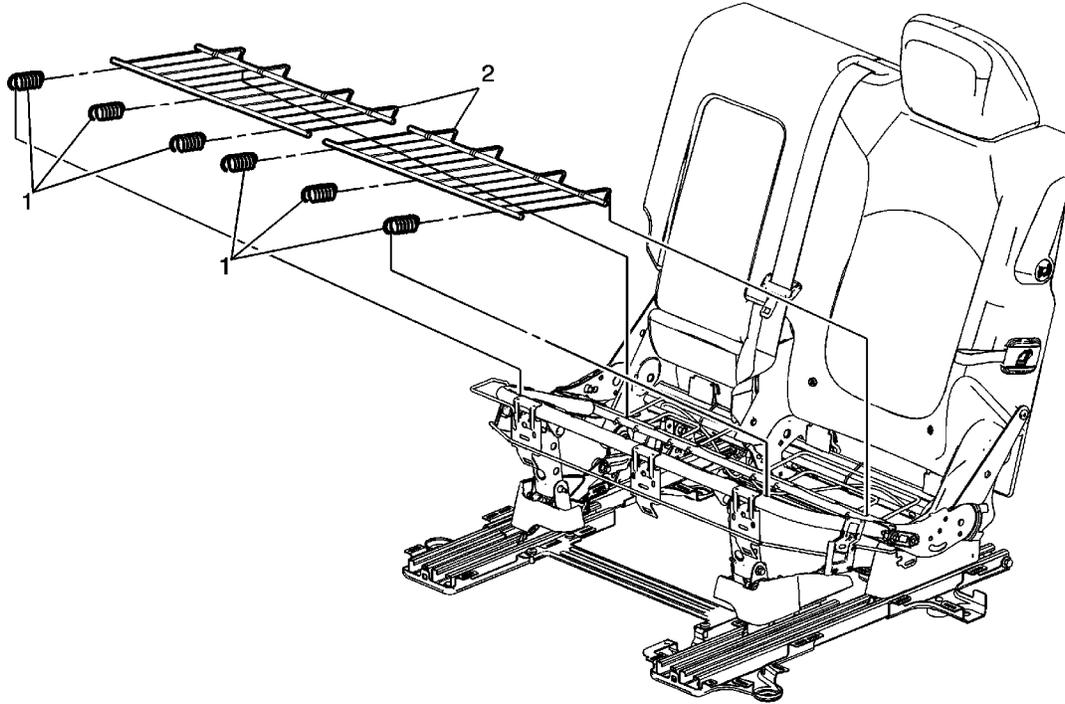


| Callout | Component Name |
|---|-------------------------------------|
| Preliminary Procedures 1. Remove the rear seat . Refer to Rear Seat Replacement . 2. Remove the seat cushion cover and pad. Refer to Rear Seat Cushion Cover and Pad Replacement . | |
| 1 | Rear Seat Cushion Spring (Qty: 6) |
| 2 | Rear Seat Support Assembly (Qty: 2) |

Rear Seat Support Replacement (with Armrest)

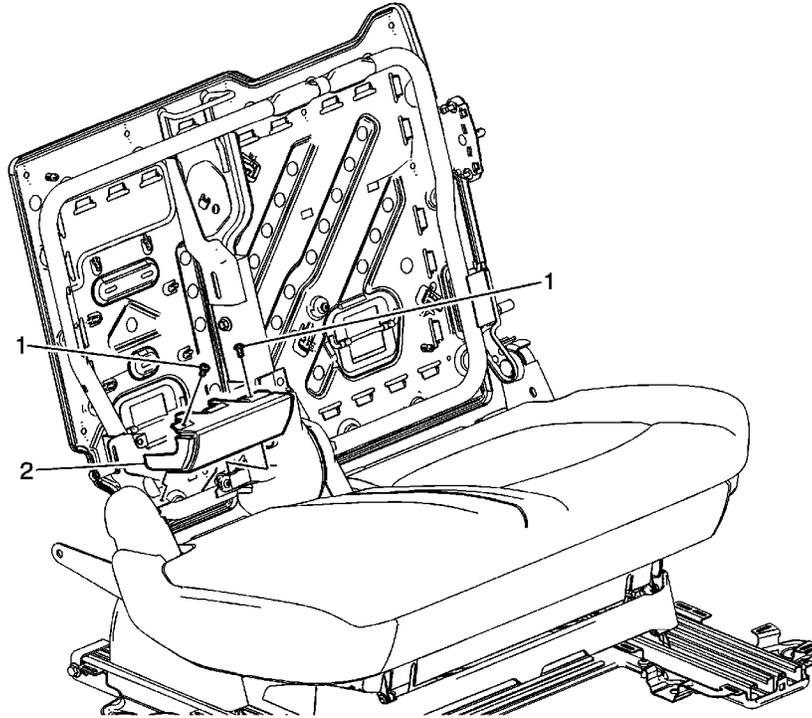

| Callout | Component Name |
|--|---|
| Preliminary Procedures <ol style="list-style-type: none"> 1. Remove the rear seat. Refer to Rear Seat Replacement. 2. Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement. | |
| 1 | Rear Seat Support Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 5 N·m (44 lb in) |
| 2 | Rear Seat Support |

Rear Seat Adjuster Handle Replacement (With 40 Percent Seat)

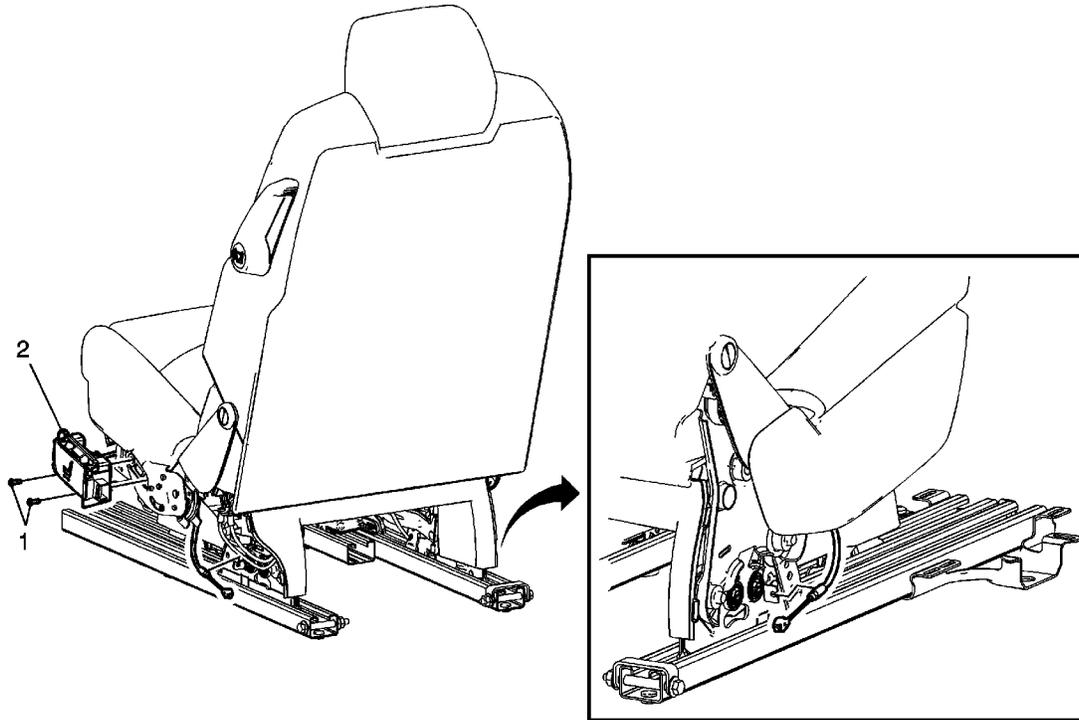


| Callout | Component Name |
|---|---|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the rear seat. Refer to Rear Seat Replacement. 2. Remove the outer rear seat cushion trim panel. Refer to Rear Seat Cushion Trim Panel Assembly Replacement - Outboard or Rear Seat Cushion Trim Panel Assembly Replacement - Inboard. 3. Remove the rear seat recliner outer finish covers. Refer to Rear Seat Recliner Outer Finish Cover Replacement - Inboard or Rear Seat Recliner Outer Finish Cover Replacement - Outboard. | |
| 1 | <p>Rear Seat Screw (Qty: 2)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 4 N·m (35 lb in)</p> |
| 2 | <p>Rear Seat Adjuster Handle Assembly</p> <p>Procedure</p> |

© 2010 General Motors Corporation. All rights reserved.

Disconnect the cables at the inboard and outboard recliners.

Rear Seat Adjuster Handle Replacement (With 60 Percent Seat)

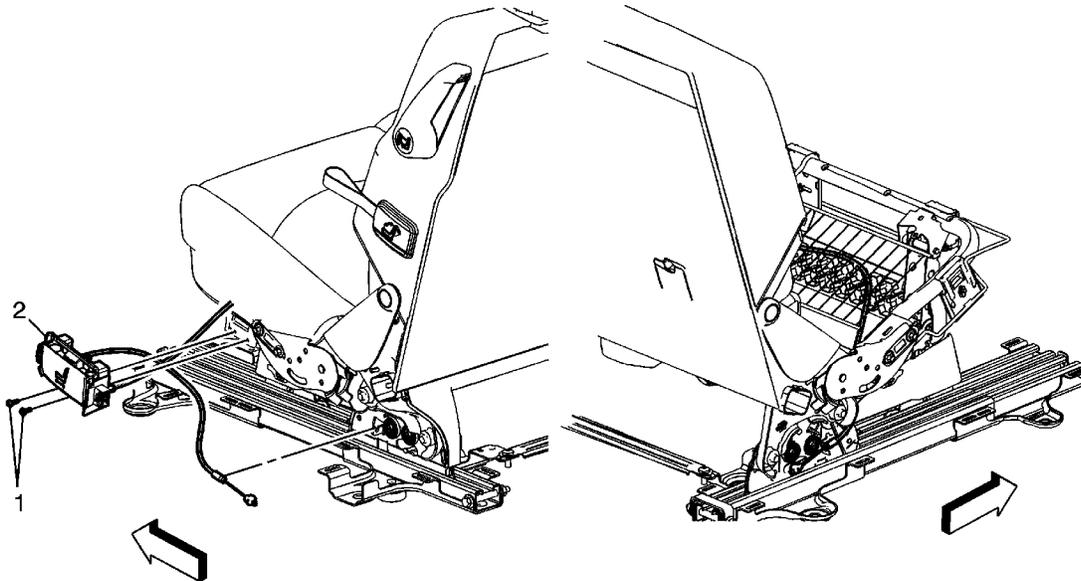


| Callout | Component Name |
|--|---|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the rear seat. Refer to Rear Seat Replacement. 2. Remove the outer rear seat cushion trim panel assembly. Refer to Rear Seat Cushion Trim Panel Assembly Replacement - Outboard or Rear Seat Cushion Trim Panel Assembly Replacement - Inboard. 3. Remove the rear seat recliner outer finish covers. Refer to Rear Seat Recliner Outer Finish Cover Replacement - Inboard or Rear Seat Recliner Outer Finish Cover Replacement - Outboard. | |
| <p>1</p> | <p>Rear Seat Screw (Qty: 2)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 4 N·m (35 lb in)</p> |
| <p>2</p> | <p>Rear Seat Adjuster Handle Assembly</p> <p>Procedure</p> |

© 2010 General Motors Corporation. All rights reserved.


Disconnect the cables at the inboard and outboard recliners.

Rear Seat Inner Recliner Cable Replacement (Short Cable with 40 Percent Seat)

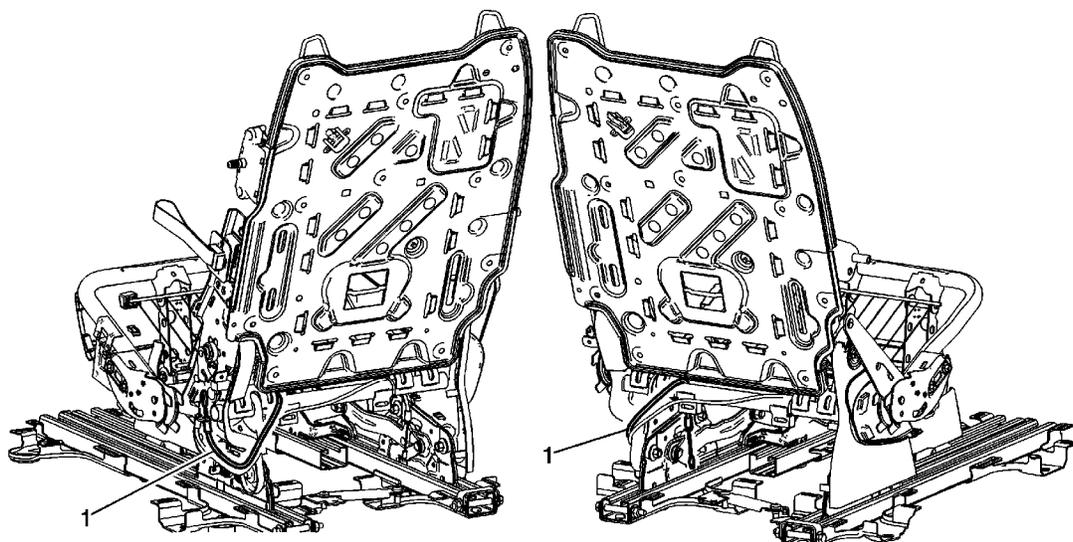


| Callout | Component Name |
|--|---|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the rear seat . Refer to Rear Seat Replacement . 2. Remove the rear seat outboard outer recliner cover. Refer to Rear Seat Recliner Outer Finish Cover Replacement - Inboard . 3. Remove the rear back cushion filler panel. Refer to Rear Seat Back Filler Panel Replacement . | |
| <p>1</p> | <p>Rear Seat Back Latch Release Cable</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Note the routing of the cable for installation purposes. 2. Disconnect the cable from the recliner. 3. Note the location of the retainer clip when removing the cable and always make sure the cable is attached to the clip in the same location. |

Rear Seat Inner Recliner Cable Replacement (Long Cable with 40 Percent Seat)

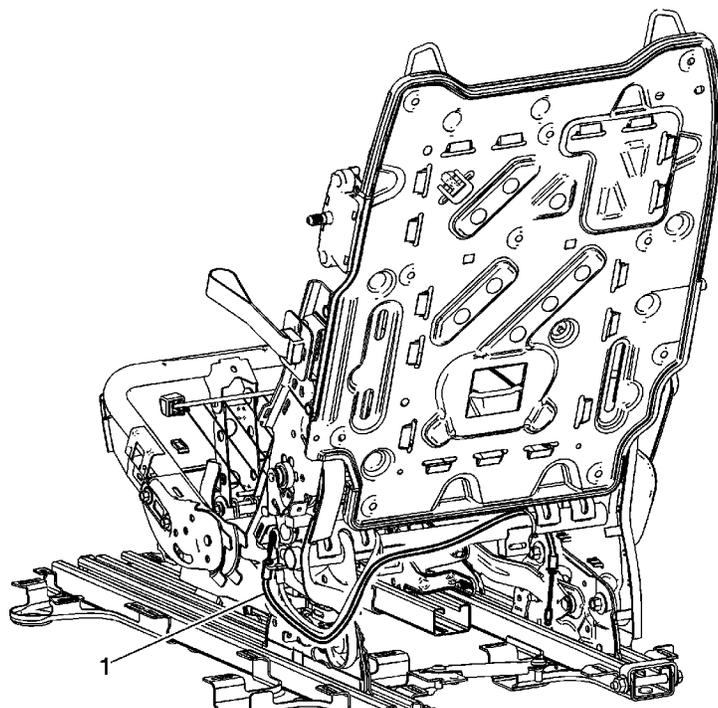

| Callout | Component Name |
|--|---|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the rear seat . Refer to Rear Seat Replacement . 2. Remove the rear seat outboard outer recliner cover. Refer to Rear Seat Recliner Outer Finish Cover Replacement - Inboard . 3. Remove the rear back cushion filler panel. Refer to Rear Seat Back Filler Panel Replacement . | |
| <p>1</p> | <p>Rear Seat Inner Recliner Cable</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Note the routing of the cable for installation purposes. 2. Disconnect the cable from the recliner. 3. Note the location of the zip tie when removing the cable and always use a new zip tie in the same location when installing the cable. |


Rear Seat Inner Recliner Cable Replacement (Short Cable with 60 Percent Seat)

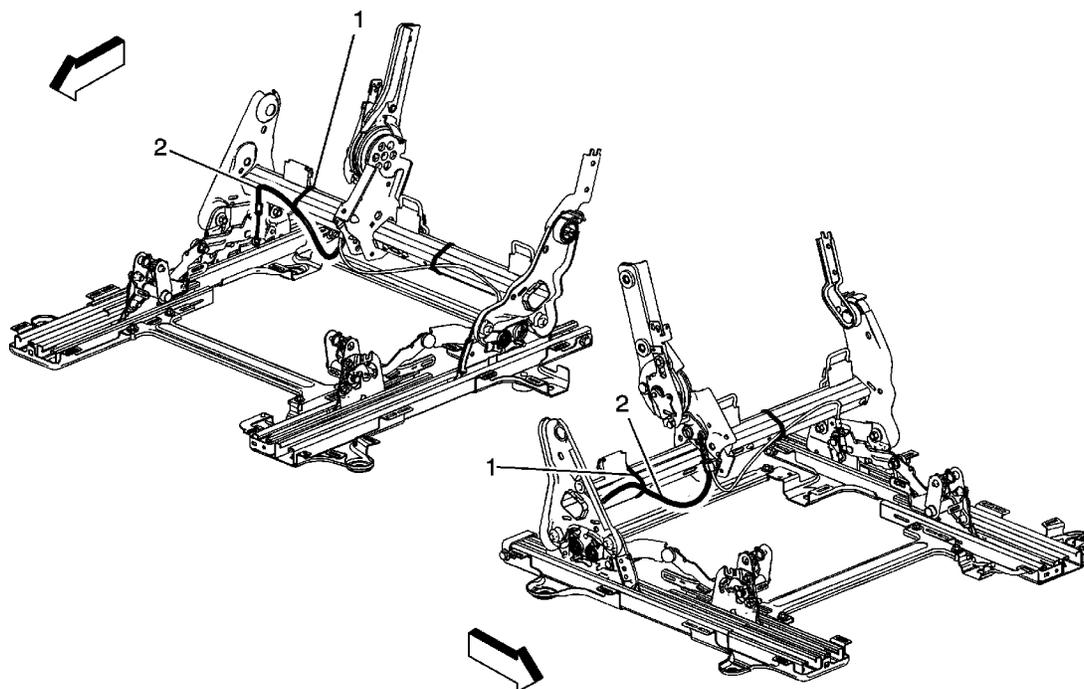

| Callout | Component Name |
|--|---|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the rear seat . Refer to Rear Seat Replacement . 2. Remove the rear seat outboard outer recliner cover. Refer to Rear Seat Recliner Outer Finish Cover Replacement - Inboard . 3. Remove the rear back cushion filler panel. Refer to Rear Seat Back Filler Panel Replacement . | |
| 1 | <p>Plastic Retainer Clip</p> <p>Tip Note the location of the retainer clip when removing the cable and always make sure the cable is attached to the clip in the same location.</p> |
| 2 | <p>Rear Seat Back Latch Release Cable</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Note the routing of the cable for installation purposes. 2. Disconnect the cable from the recliner. |


© 2010 General Motors Corporation. All rights reserved.

Rear Seat Inner Recliner Cable Replacement (Long Cable with 60 Percent Seat)

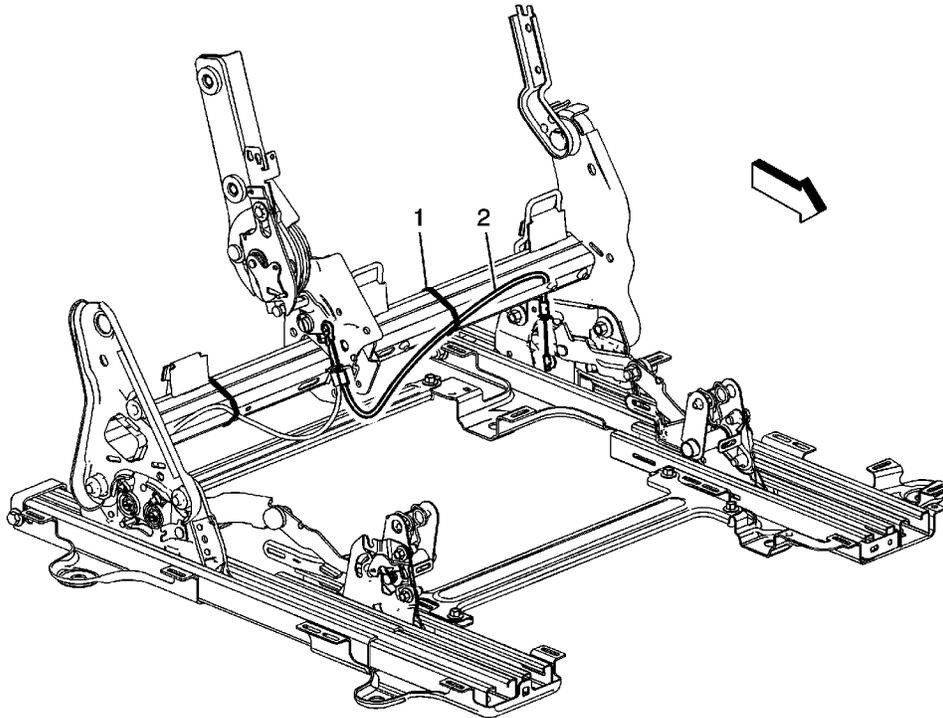

| Callout | Component Name |
|---|---|
| Preliminary Procedures | |
| <ol style="list-style-type: none"> 1. Remove the rear seat . Refer to Rear Seat Replacement . 2. Remove the rear seat outboard outer recliner cover. Refer to Rear Seat Recliner Outer Finish Cover Replacement - Inboard . 3. Remove the rear back cushion filler panel. Refer to Rear Seat Back Filler Panel Replacement . | |
| <p style="text-align: center;">1</p> | <p>Retainer Clip</p> <p>Tip Note the location of the retainer clip when removing the cable and always make sure the cable is attached to the clip in the same location.</p> |
| <p style="text-align: center;">2</p> | <p>Rear Seat Back Latch Release Cable</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Note the routing of the cable for installation purposes. 2. Disconnect the cable from the recliner. |

Rear Seat Back Cushion Latch Release Handle Replacement (with 40 Percent Seat)

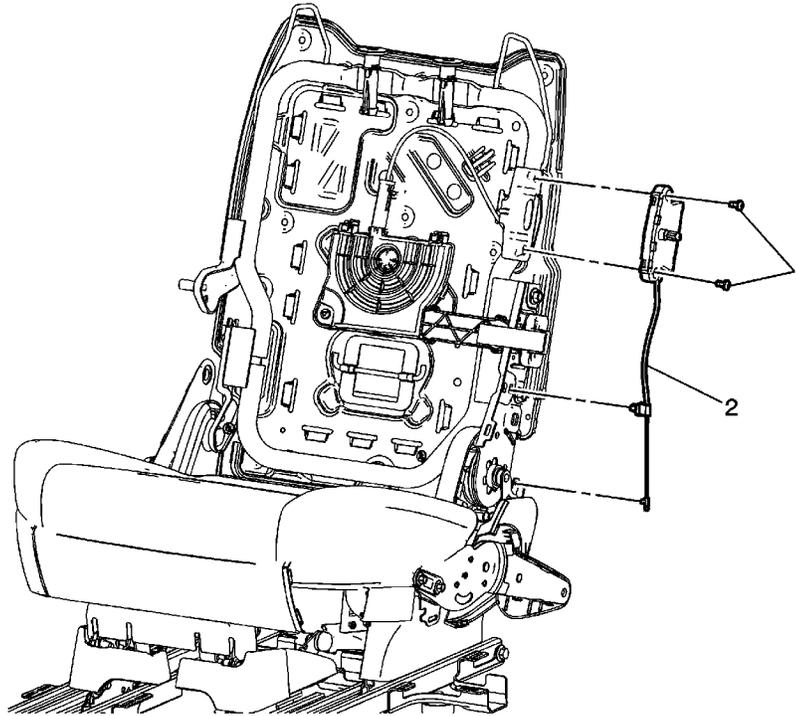


| Callout | Component Name |
|--|---|
| Preliminary Procedures | |
| <ol style="list-style-type: none"> 1. Remove the rear seat. Refer to Rear Seat Replacement. 2. Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement. | |
| 1 | Rear Seat Latch Release Handle Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 5 N·m (44 lb in) |
| 2 | Rear Seat Latch Release Handle Assembly Procedure <ul style="list-style-type: none"> • Disconnect the cable and note the cable routing for installation. • The cable must be routed under the rear seat back stowage latch housing. |

© 2010 General Motors Corporation. All rights reserved.

- The white area of the cable must fit into the seat back frame hooks.


Rear Seat Back Cushion Latch Release Handle Replacement (With 60 Percent Seat)

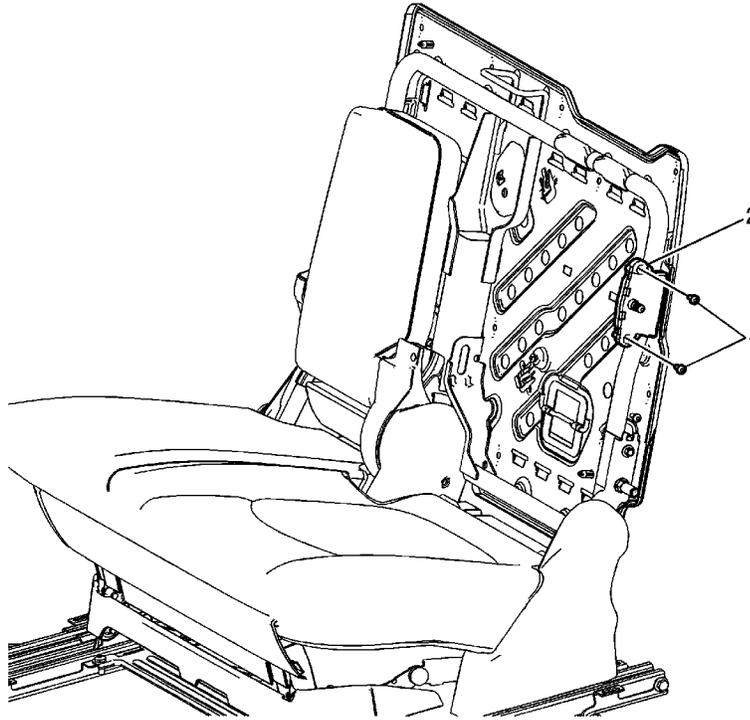

| Callout | Component Name |
|---|--|
| <p>Preliminary Procedures</p> | |
| <p>1. Remove the rear seat. Refer to Rear Seat Replacement.</p> <p>2. Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement.</p> | |
| <p>1</p> | <p>Rear Seat Back Cushion Latch Release Handle Screw (Qty: 2)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 5 N·m (44 lb in)</p> |
| <p>2</p> | <p>Rear Seat Back Cushion Latch Release Handle Assembly</p> <p>Procedure</p> <ul style="list-style-type: none"> • Disconnect the cable and note the cable routing for installation. • The cable must be routed under the rear seat back stowage latch housing. <p>© 2010 General Motors Corporation. All rights reserved.</p> |

- The white area of the cable must fit into the seat back frame hooks.

Rear Seat Back Cushion Stowage Latch Actuator Replacement (With 40 Percent Seat)

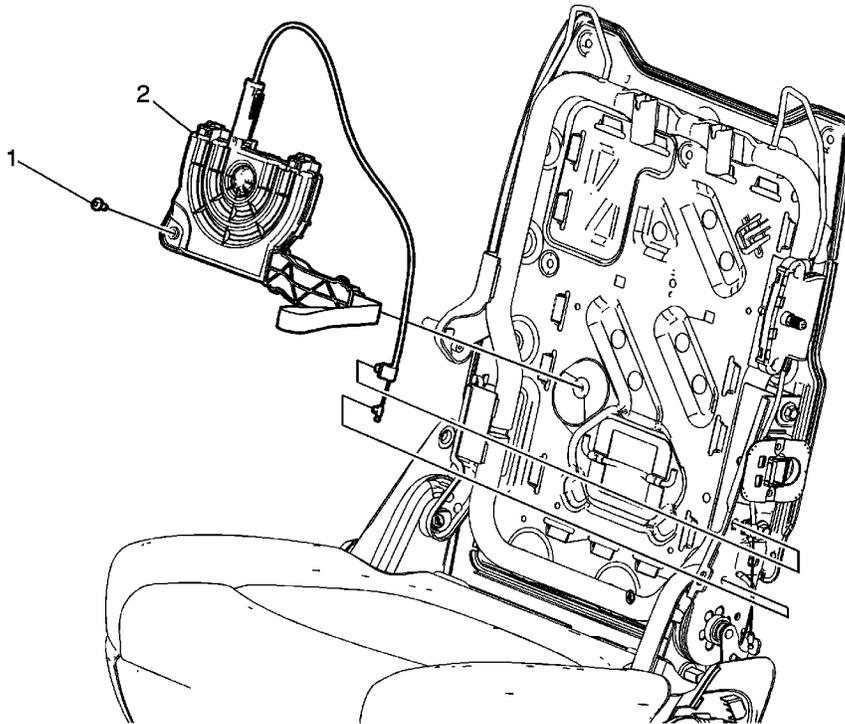


| Callout | Component Name |
|--|--|
| Preliminary Procedures | |
| 1. Remove the rear seat. Refer to Rear Seat Replacement . 2. Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement . | |
| 1 | Rear Seat Screw Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in) |
| 2 | Rear Seat Back Cushion Stowage Latch Actuator Procedure <ul style="list-style-type: none"> • Disconnect the cable and note the cable routing for installation. • The stowage latch actuator housing must be located over the latch release |

© 2010 General Motors Corporation. All rights reserved.

handle cable.

- The white area of the cable must fit into the seat back frame hooks.

Rear Seat Back Cushion Stowage Latch Actuator Replacement (With 60 Percent Seat)

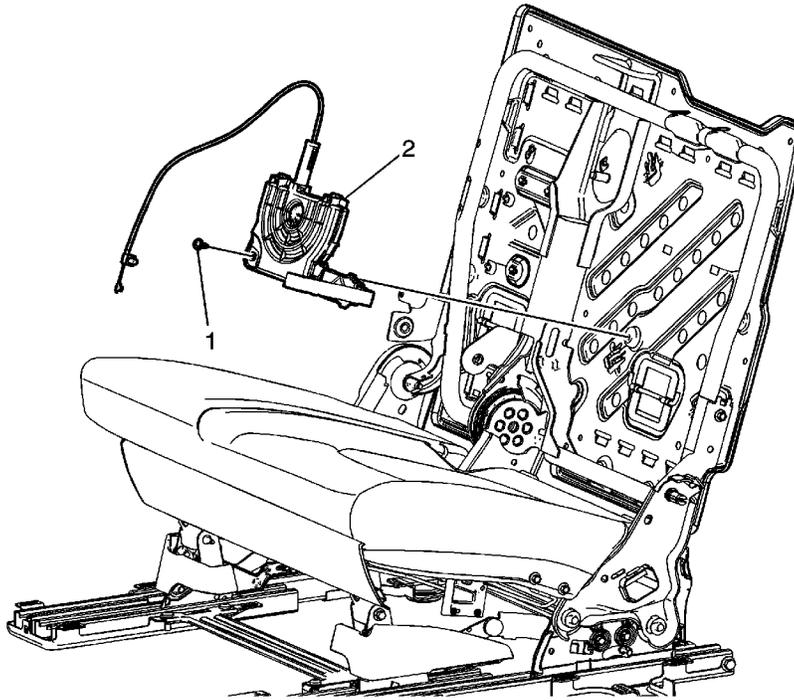


| Callout | Component Name |
|--|--|
| Preliminary Procedures | |
| 1. Remove the rear seat. Refer to Rear Seat Replacement . 2. Remove the rear seat back cushion cover and pad. Refer to Rear Seat Back Cushion Cover and Pad Replacement . | |
| 1 | Rear Seat Screw Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in) |
| 2 | Rear Seat Back Cushion Stowage Latch Actuator Procedure <ul style="list-style-type: none"> • Disconnect the cable and note the cable routing for installation. • The stowage latch actuator housing must be located over the latch release |

© 2010 General Motors Corporation. All rights reserved.

handle cable.

- The white area of the cable must fit into the seat back frame hooks.

Rear Seat Cushion Front Cover Replacement (with 40 Percent Seat)

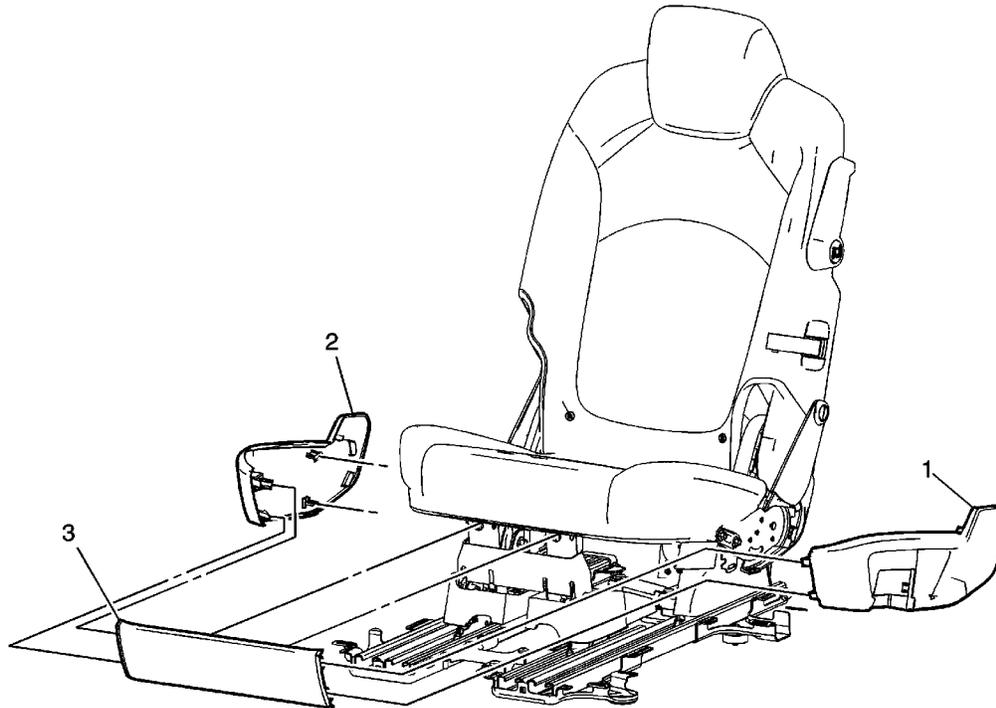


| Callout | Component Name |
|---------|---|
| 1 | Rear Seat Cushion Trim Panel Assembly Procedure Release the tabs and the front and rear of the panel and pull outward to disengage the retainer clips. |
| 2 | Rear Seat Cushion Trim Panel Assembly Procedure Release the tabs and the front and rear of the panel and pull outward to disengage the retainer clips. |
| 3 | Rear Seat Cushion Front Cover Procedure Pull forward and use a flat bladed tool to help disengage the retainer clips from the |

© 2010 General Motors Corporation. All rights reserved.


seat cushion frame.

Rear Seat Anchor Plate Bezel Replacement (with 40 Percent Seat)

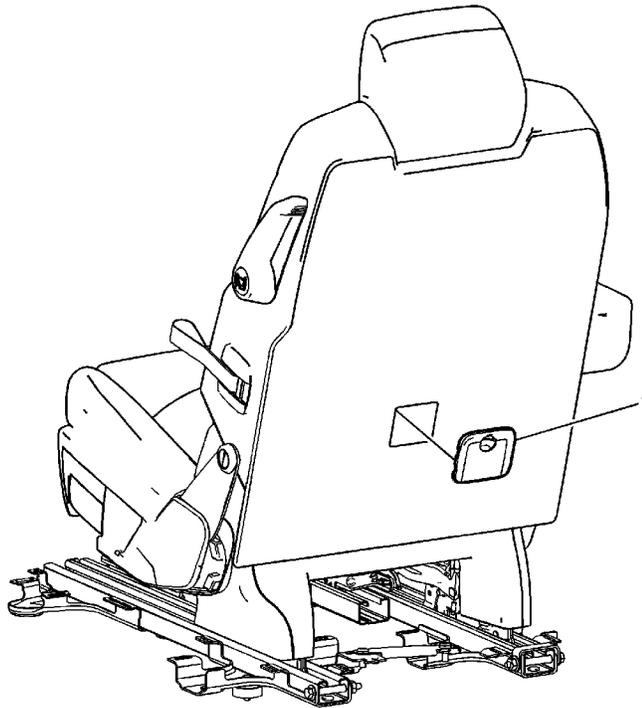

| Callout | Component Name |
|---------|--|
| 1 | Rear Seat Anchor Plate Bezel Procedure Use a flat bladed tool to remove the anchor plate bezel from the rear seat back frame. |

Rear Seat Back Filler Panel Replacement (with 40 Percent Seat)

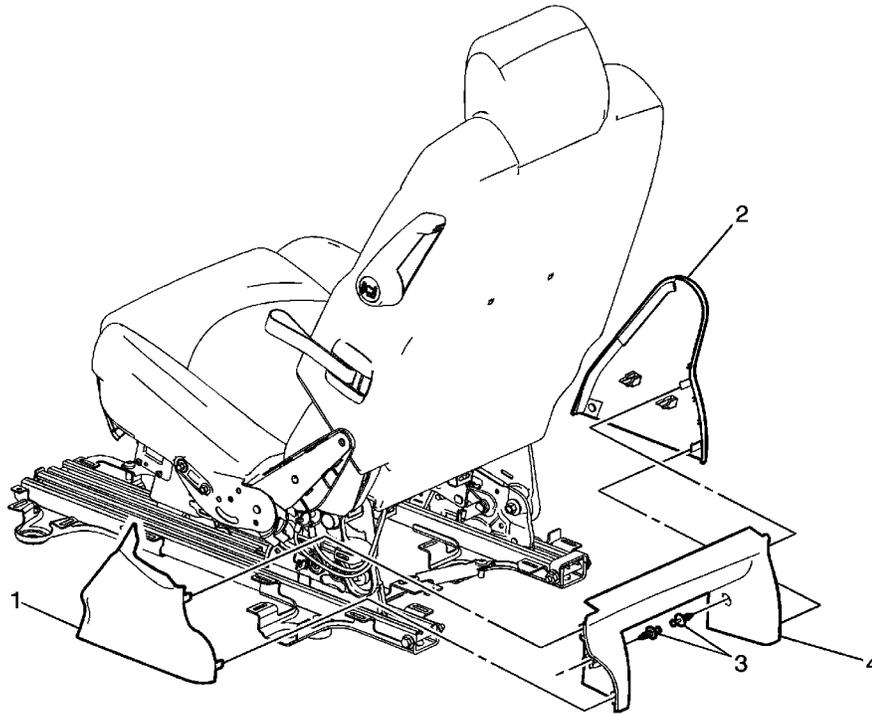


| Callout | Component Name |
|---------|--|
| 1 | Rear Seat Recliner Outer Finish Cover Procedure 1. Release the seat to the full forward position. 2. Remove the rear seat recliner outer finish cover by pulling outward to disengage the retainers. |
| 2 | Rear Seat Recliner Outer Finish Cover Procedure Remove the rear seat recliner outer finish cover by pulling outward to disengage the retainers. |
| 3 | Rear Seat Back Cushion Filler Panel Push-in Retainer (Qty: 2) |
| 4 | Rear Seat Back Cushion Filler Panel Procedure |

© 2010 General Motors Corporation. All rights reserved.


Pull rearward to disengage the retainers.

Rear Number 2 Seat Replacement

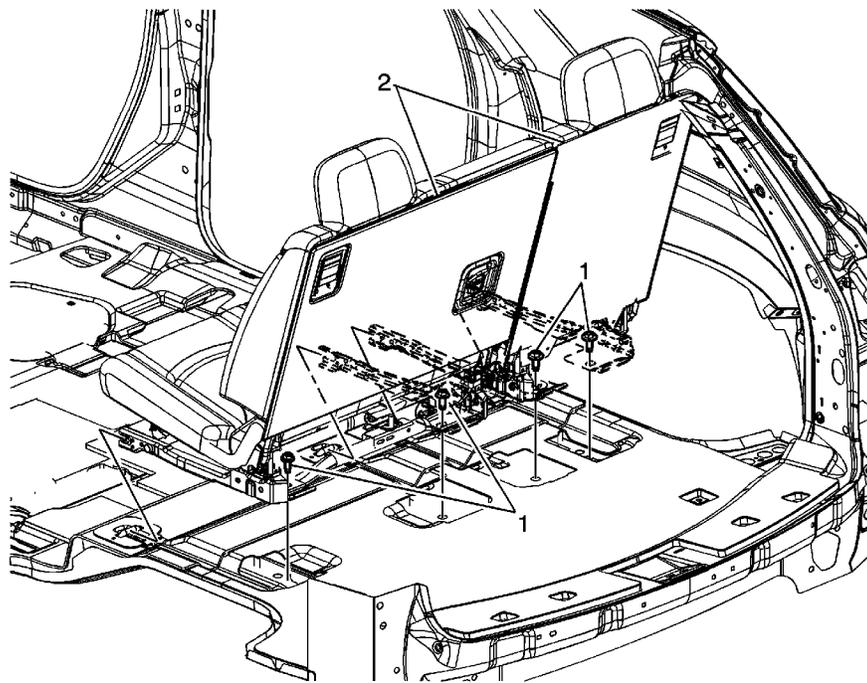


| Callout | Component Name |
|--|--|
| Preliminary Procedure | |
| Remove the rear storage compartment. Refer to Rear Storage Compartment Replacement . (If equipped) | |
| 1 | Rear Seat No. 2 Assembly Bolt (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 55 N·m (41 lb ft) |
| 2 | Rear Seat No. 2 Assembly (Qty: 2) Tip Lift the seat upward at the rear of the seat and slide the seat rearward to disengage the adjuster hooks holding the seat to the floor pan. |

Rear Seat Number 2 Cushion Side Cover Replacement

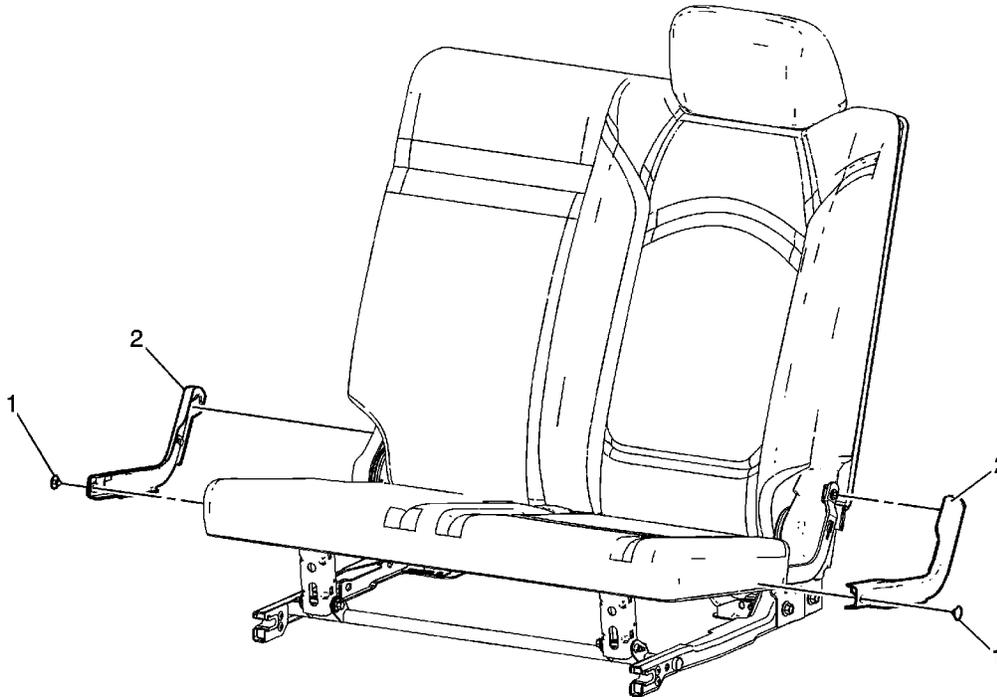

| Callout | Component Name |
|---------|--|
| 1 | Rear Seat No. 2 Cushion Side Cover Retainer (Qty: 2) |
| 2 | Rear Seat No. 2 Cushion Side Cover (Qty: 2) Tip Pull upward and away from seat to remove. |


Rear Seat Number 2 Back Cushion Hinge Replacement

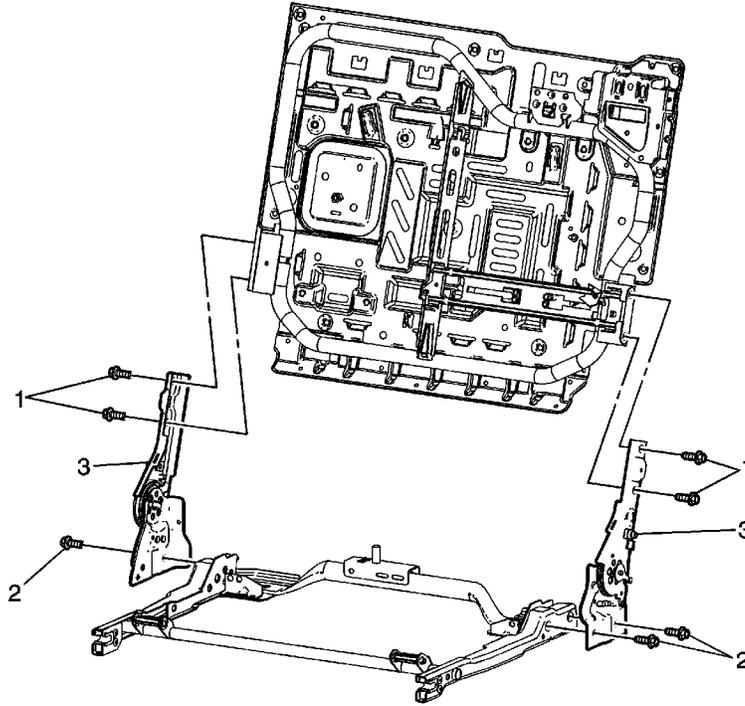

| Callout | Component Name |
|--|--|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Unzip the side zipper of the rear seat number 2 back cover. 2. Remove the rear seat No. 2 cushion cover and pad. Refer to Rear Seat Number 2 Cushion Cover and Pad Replacement. 3. Remove the recliner inner finish covers. Refer to Rear Seat Number 2 Recliner Inner Finish Cover Replacement. 4. Remove the rear seat number 2 belt buckle. Refer to Rear Seat Number 2 Belt Buckle Replacement. | |
| 1 | <p>Rear Seat No. 2 Back Cushion Frame Bolt (Qty: 4)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 55 N·m (41 lb ft)</p> |
| 2 | <p>Rear Seat No. 2 Riser Bolt (Qty: 3)</p> <p>Tighten 55 N·m (41 lb ft)</p> |
| <p>© 2010 General Motors Corporation. All rights reserved.</p> | |

| | |
|---|--|
| 3 | Rear Seat No. 2 Back Cushion Hinge Assembly (Qty: 2) |
|---|--|


Rear Seat Number 2 Back Cushion Latch Release Handle Replacement

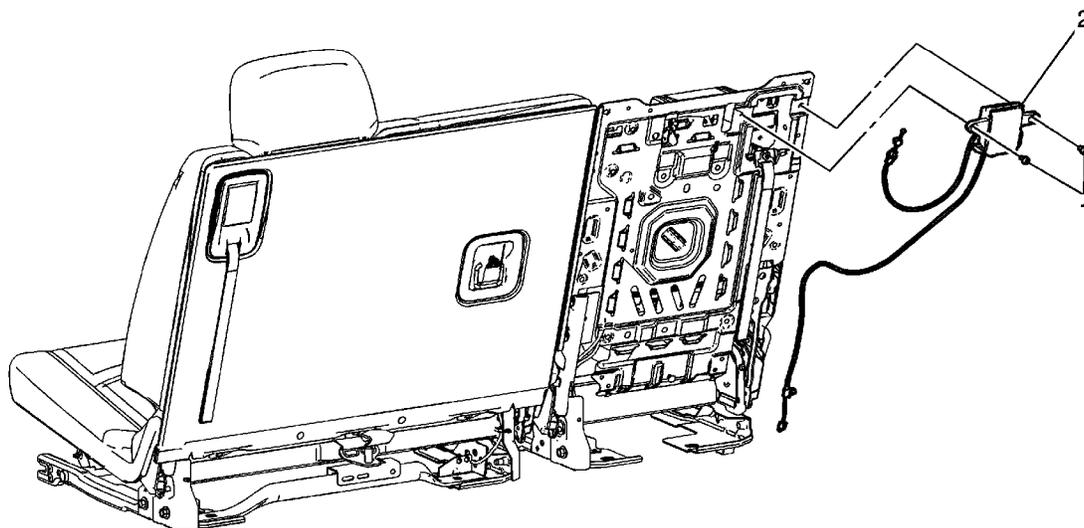

| Callout | Component Name |
|---|--|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the rear seat No. 2 back cushion cover and pad. Refer to Rear Seat Number 2 Back Cushion Cover and Pad Replacement. 2. Remove the rear seat No. 2 cushion cover and pad. Refer to Rear Seat Number 2 Cushion Cover and Pad Replacement. | |
| 1 | <p>Rear Seat No. 2 Back Cushion Latch Release Handle Screw (Qty: 3)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 4 N·m (35 lb in)</p> |
| 2 | <p>Rear Seat No. 2 Back Cushion Latch Release Handle</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Note the routing of the cables for installation. 2. Disconnect the cables from the head restraint and seat latch. |


© 2010 General Motors Corporation. All rights reserved.

Rear Seat Number 2 Back Cushion Panel Replacement

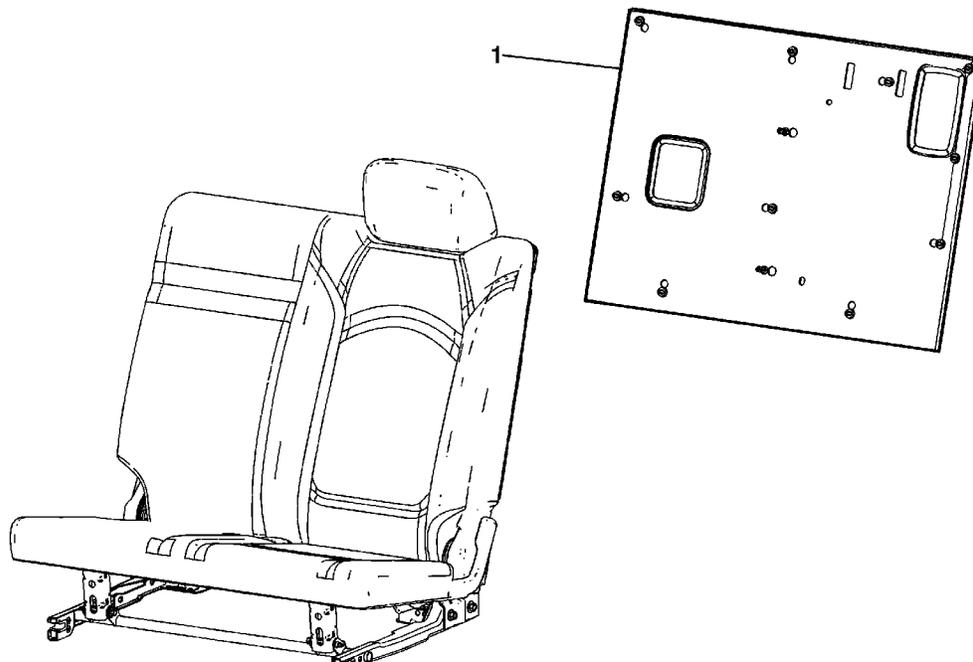


| Callout | Component Name |
|--|---|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the child seat bracket trim cover. Refer to Rear Seat Number 2 Child Seat Bracket Replacement . 2. Remove the rear seat back cushion release handle bezel. Refer to Rear Seat Pull Strap Replacement . 3. Unzip the side zippers of the rear number 2 back trim cover. 4. Flip the carpet of the back trim over to expose the panel. | |
| <p>1</p> | <p>Rear Seat No. 2 Back Cushion Panel</p> <p>Tip Using a trim tool or equivalent, pull rearward on the seat back cushion panel to remove.</p> |

Rear Seat Number 2 Cushion Cover and Pad Replacement

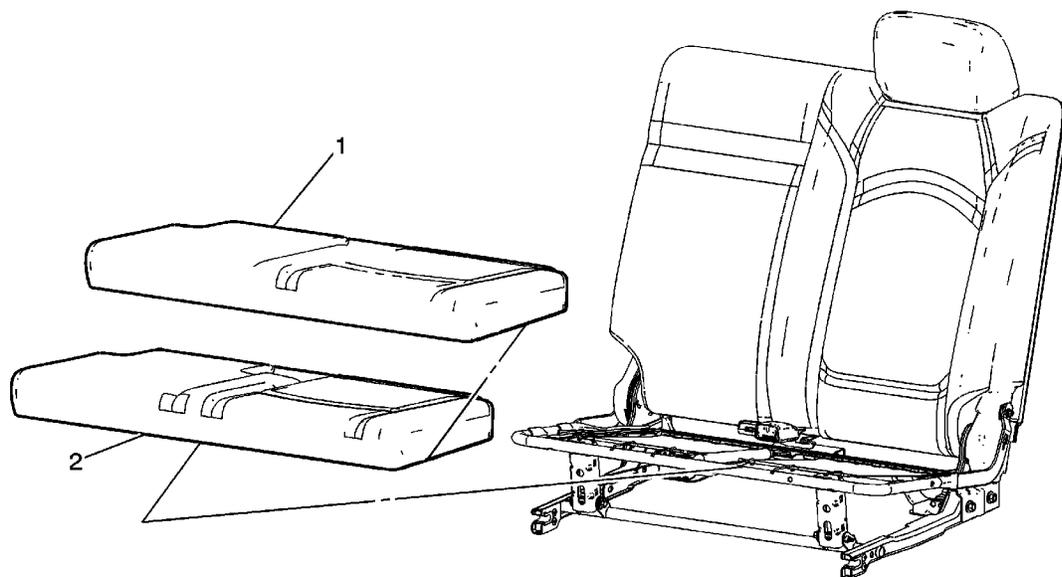


| Callout | Component Name |
|---|--|
| <p>Preliminary Procedure</p> <p>Remove the rear seat No. 2 assembly. Refer to Rear Number 2 Seat Replacement .</p> | |
| <p>1</p> | <p>Rear Seat No. 2 Cushion Cover</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Disconnect the j-channel from the seat cushion frame. 2. Remove the seat cushion cover and pad as an assembly from the frame. 3. Remove the seat cushion cover from the pad. |
| <p>2</p> | <p>Rear Seat No. 2 Cushion Pad</p> |

Rear Seat Number 2 Cushion Frame Replacement

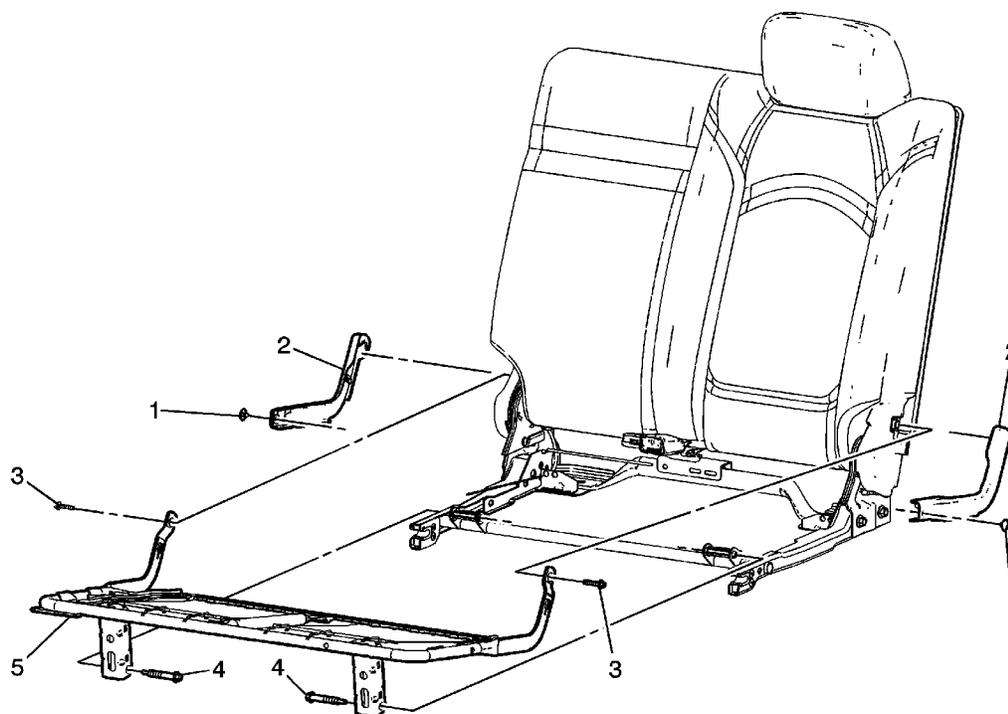


| Callout | Component Name |
|---------|---|
| 1 | Rear Seat No. 2 Cushion Side Cover Retainer (Qty: 2) |
| 2 | Rear Seat No. 2 Cushion Side Cover (Qty: 2) Tip Pull upward and away from seat to remove. |
| 3 | Rear Seat No. 2 Cushion Frame Bolt (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 10 N·m (89 lb in) |
| 4 | Rear Seat No. 2 Front Cushion Link Bolt (Qty: 2) Tighten 10 N·m (89 lb in) |
| 5 | Rear Seat No. 2 Cushion Frame Assembly |

Rear Seat Number 2 Head Restraint Replacement

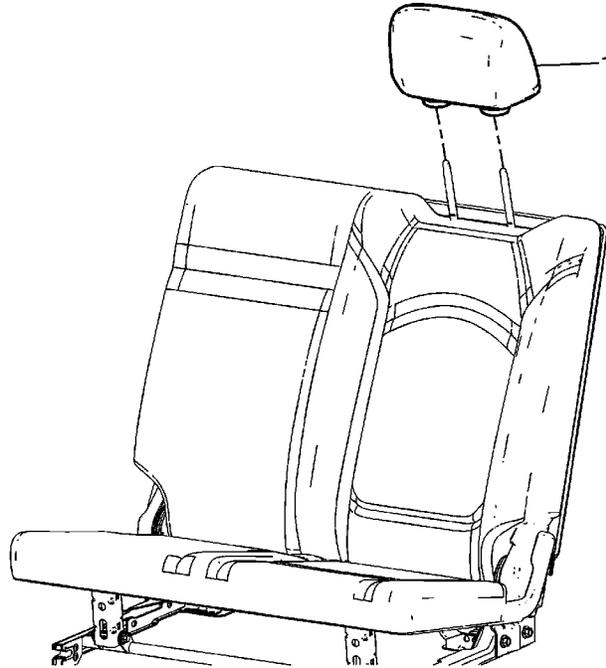

| Callout | Component Name |
|---------|---|
| 1 | Rear Seat No. 2 Head Restraint Tip Insert a small rounded tool into the hole in the head restraint guide to release the lock tabs while lifting upward on the head restraint to remove. |

Rear Seat Number 2 Head Restraint Bracket Replacement

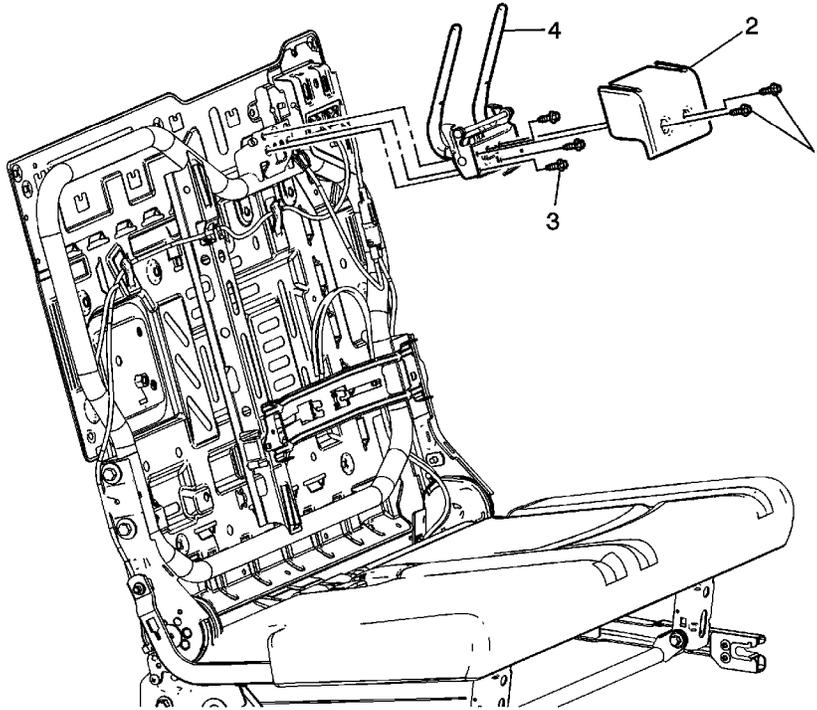


| Callout | Component Name |
|---|---|
| Preliminary Procedure | |
| Remove the rear seat No. 2 back cushion cover and pad. Refer to Rear Seat Number 2 Back Cushion Cover and Pad Replacement . | |
| 1 | Rear Seat No. 2 Head Restraint Bracket Cover Bolt (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 5 N·m (44 lb in) |
| 2 | Rear Seat No. 2 Head Restraint Bracket Cover |
| 3 | Rear Seat No. 2 Head Restraint Bracket Bolt (Qty: 3) Tighten 15 N·m (11 lb ft) |
| Rear Seat No. 2 Head Restraint Bracket <small>© 2010 General Motors Corporation. All rights reserved.</small> | |

4

Procedure


Disconnect the cables from the head restraint bracket.

Rear Seat Number 2 Recliner Outer Finish Cover Replacement

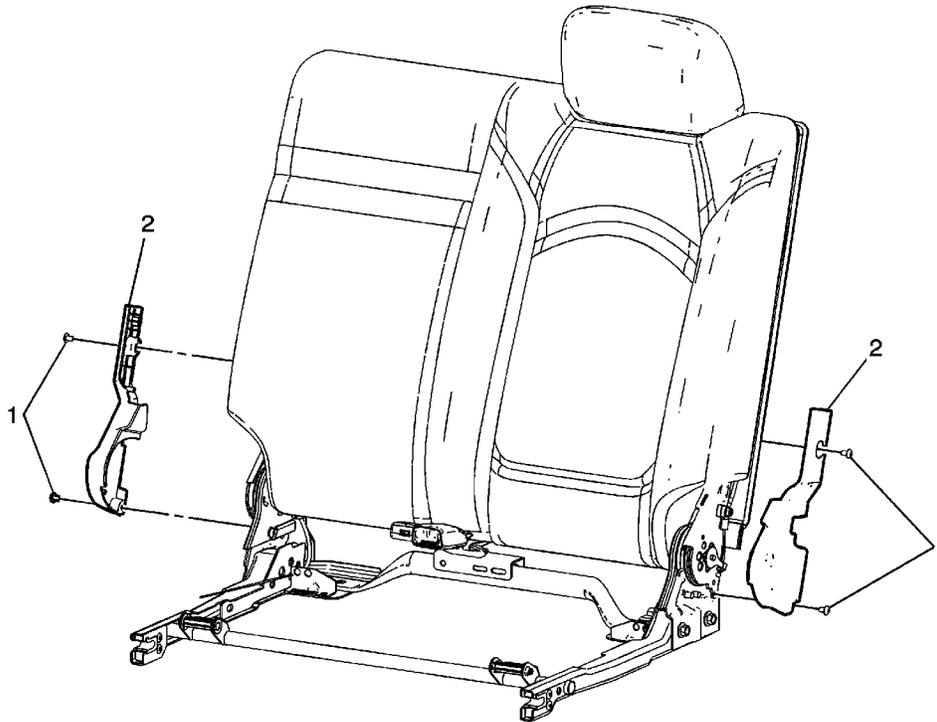


| Callout | Component Name |
|---|---|
| Preliminary Procedure | |
| Remove the rear seat No. 2 cushion frame. Refer to Rear Seat Number 2 Cushion Frame Replacement . | |
| 1 | Rear Seat No. 2 Recliner Outer Finish Cover Screw (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 5 N·m (44 lb in) |
| 2 | Rear Seat No. 2 Recliner Outer Finish Cover (Qty: 2) |

Rear Seat Number 2 Recliner Inner Finish Cover Replacement

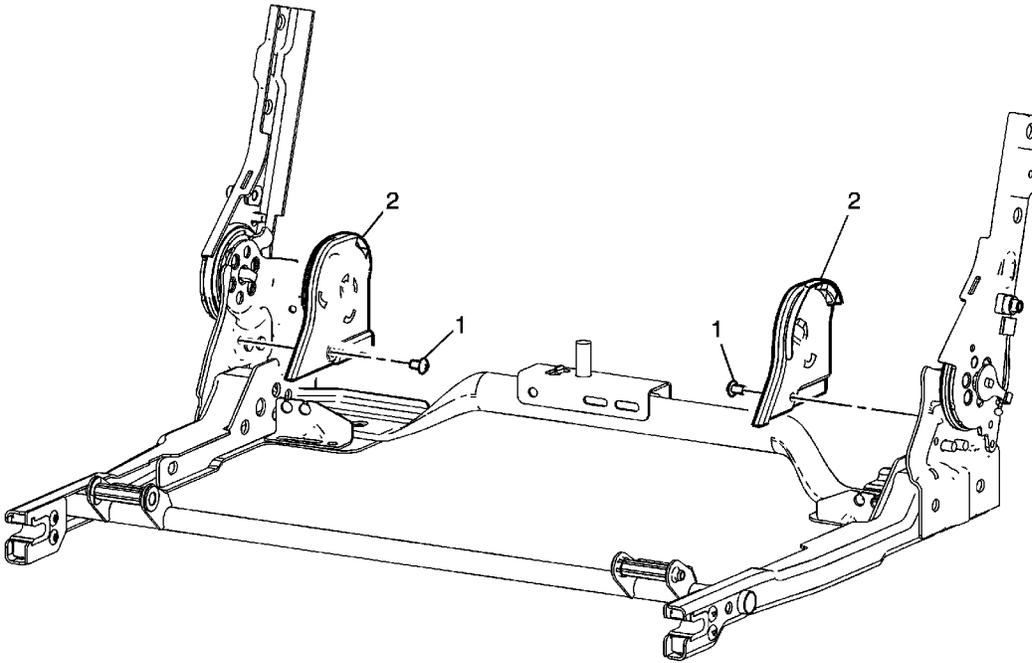


| Callout | Component Name |
|--|---|
| Preliminary Procedures | |
| 1. Remove the rear seat No. 2 back cushion cover and pad. Refer to Rear Seat Number 2 Back Cushion Cover and Pad Replacement . 2. Remove the rear seat No. 2 cushion cover and pad. Refer to Rear Seat Number 2 Cushion Cover and Pad Replacement . | |
| 1 | Rear Seat No. 2 Recliner Inner Finish Cover Screw (Qty: 2) Caution: Refer to Fastener Caution in the Preface section. Tighten 5 N·m (44 lb in) |
| 2 | Rear Seat No. 2 Recliner Inner Finish Cover (Qty: 2) |

Rear Seat Number 2 Back Cushion Cover and Pad Replacement

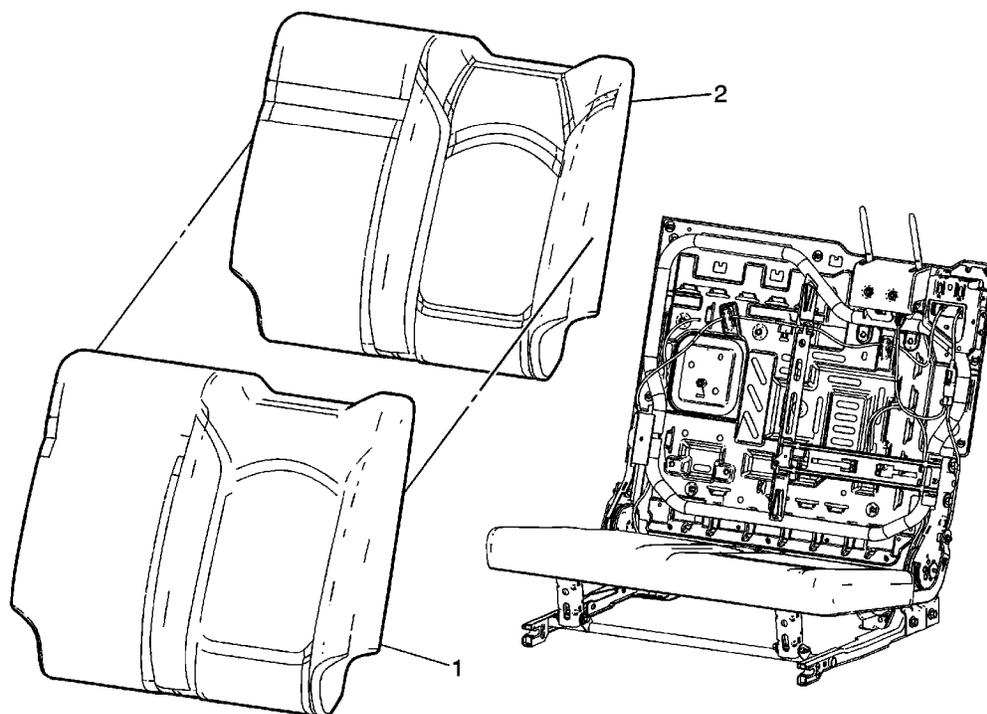

| Callout | Component Name |
|---|--|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the rear seat No. 2 back cushion panel. Refer to Rear Seat Number 2 Back Cushion Panel Replacement . 2. Remove the rear seat No. 2 head restraint. Refer to Rear Seat Number 2 Head Restraint Replacement . | |
| <p>1</p> | <p>Rear Seat No. 2 Cushion Cover</p> <p>Procedure</p> <ol style="list-style-type: none"> 1. Disconnect the j-channel from the seat back cushion frame. 2. Remove the seat back cushion cover from pad. 3. Remove the swing wire between the inner and outer pads. 4. Remove the seat back cushion cover from the pad. |
| <p>2</p> | <p>Rear Seat No. 2 Back Cushion Pad</p> |

Rear Seat Number 2 Back Cushion Frame Replacement

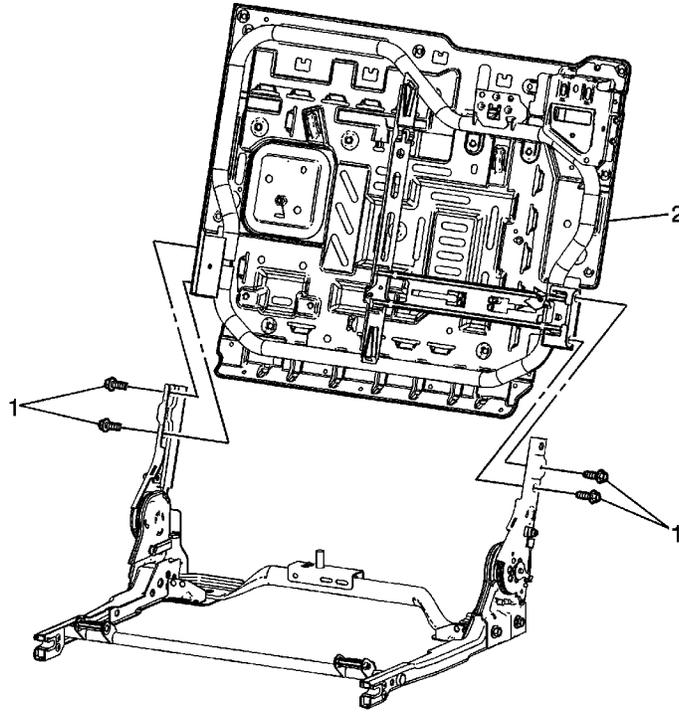

| Callout | Component Name |
|---|--|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the rear seat No. 2 back cushion cover and pad. Refer to Rear Seat Number 2 Back Cushion Cover and Pad Replacement. 2. Remove the rear seat No. 2 cushion cover and pad. Refer to Rear Seat Number 2 Cushion Cover and Pad Replacement. | |
| 1 | <p>Rear Seat No. 2 Back Cushion Frame Bolt (Qty: 4)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 55 N·m (41 lb ft)</p> |
| 2 | Rear Seat No. 2 Back Cushion Frame |

Rear Seat Number 2 Riser Replacement



| Callout | Component Name |
|---|---|
| <p>Preliminary Procedures</p> <ol style="list-style-type: none"> 1. Remove the rear seat No. 2 assembly. Refer to Rear Number 2 Seat Replacement. 2. Remove the rear seat No. 2 center belt assembly. Refer to Rear Seat Number 2 Belt Buckle Replacement. 3. Remove the rear seat No. 2 center buckle assembly. Refer to Rear Seat Number 2 Belt Buckle Replacement. | |
| 1 | <p>Rear Seat No. 2 Riser Bolt (Qty: 3)</p> <p>Caution: Refer to Fastener Caution in the Preface section.</p> <p>Tighten 55 N·m (41 lb ft)</p> |
| 2 | <p>Rear Seat No. 2 Hinge Bolt (Qty: 2)</p> <p>Tighten 10 N·m (89 lb in)</p> |
| | <p>Rear Seat No. 2 Riser Assembly</p> |


© 2010 General Motors Corporation. All rights reserved.

3

Procedure

Disconnect the cables from the seat riser.

Rear Seat Number 2 Child Seat Bracket Replacement

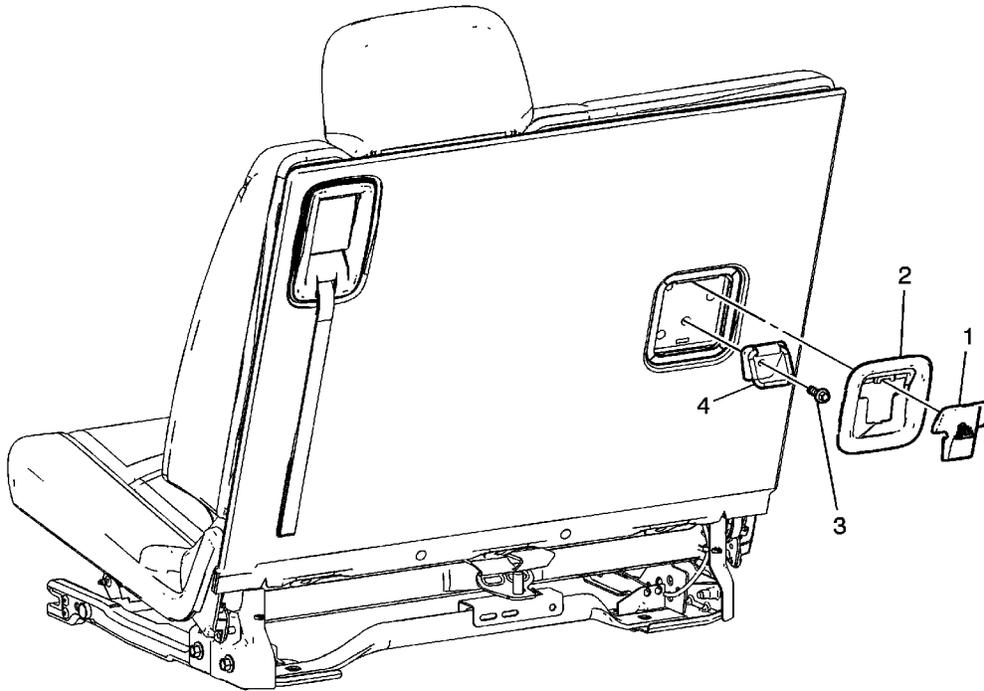

| Callout | Component Name |
|---------|---|
| 1 | Rear Seat No. 2 Child Seat Bracket Trim Cover |
| 2 | Rear Seat No. 2 Child Seat Bracket Bezel |
| 3 | Rear Seat No. 2 Child Seat Bracket Bolt Caution: Refer to Fastener Caution in the Preface section. Tighten 30 N·m (22 lb ft) |
| 4 | Rear Seat No. 2 Child Seat Bracket |