


Steering Wheel Control Switch Assembly Replacement

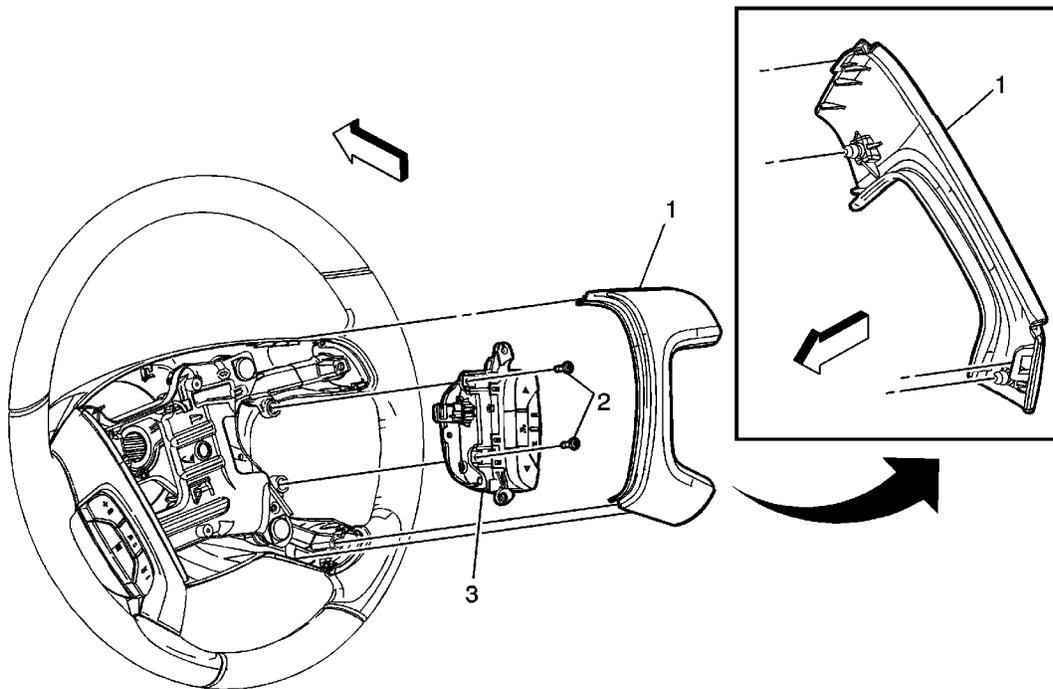

Callout	Component Name
Preliminary Procedure	
Remove the inflatable restraint steering wheel module. Refer to Inflatable Restraint Steering Wheel Module Replacement .	
1	Steering Wheel Spoke Cover (Qty: 2) Tip Use a flat-bladed plastic tool to disengage the 2 detent tabs and carefully pull cover from the 2 retainers.
2	Steering Wheel Control Switch Screw (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
	Steering Wheel Control Switch Assembly (Qty: 2) Procedure

© 2010 General Motors Corporation. All rights reserved.

3

1. Radio control switch assembly is shown. Cruise control switch assembly is similar.
2. Disconnect the electrical connector.